

## Service manual

# Lambdatronic P 3200 for pellet boiler

Core module version 50.04 - Build 05.20 | Touch control version 60.01 - Build 01.38



**Translation of the original German installation instructions for technicians**

Read and follow the instructions and safety information!

Technical changes, typographical errors and omissions reserved!

B1441022\_en | Edition 31/10/2022



<b>1 General</b>	<b>5</b>	<b>3.2 General information about the settings wizard</b>	<b>36</b>
1.1 About these instructions	5	<b>3.3 Switching on for the first time</b>	<b>37</b>
1.2 Safety information	5	<b>3.4 Starting the setting wizard</b>	<b>38</b>
<b>2 Power connection and wiring</b>	<b>6</b>	<b>4 Parameters overview</b>	<b>40</b>
<b>2.1 Core module and connection options</b>	<b>6</b>	<b>4.1 Heating</b>	<b>40</b>
2.1.1 Board view - core module	6	4.1.1 Heating - Status	40
2.1.2 Mains connection	8	4.1.2 Heating - Temperatures	41
2.1.3 Connecting the outside temperature sensor	8	4.1.3 Heating - Times	42
2.1.4 FRA room temperature sensor	10	4.1.4 Heating - Service	42
2.1.5 Boiler enable contact	11	4.1.5 Heating - Heating up program	43
2.1.6 Connecting a circulating pump to the core module	12	<i>Heating up programs</i>	44
2.1.7 Connecting an isolating valve to the core module	14	<i>Configure program 8</i>	44
2.1.8 Heating circuit pump 0 / burner relay	15	<i>Heating circuits used</i>	44
2.1.9 Operating signal	15	4.1.6 Heating - General settings	45
<b>2.2 Expansion modules</b>	<b>16</b>	<b>4.2 Water</b>	<b>46</b>
2.2.1 Heating circuit module	16	4.2.1 Water - Status	46
2.2.2 Hydraulic module	17	4.2.2 Water - Temperatures	46
<i>Connecting a circulating pump to the hydraulic module</i>	19	4.2.3 Water - Times	47
<i>Connecting an isolating valve to the hydraulic module</i>	22	4.2.4 Water - Service	47
2.2.3 Pellet module	23	<b>4.3 Solar</b>	<b>48</b>
<i>Common fault relay (on the pellet module)</i>	24	4.3.1 Solar - Status	48
2.2.4 Pellet module expansion	25	4.3.2 Solar - Temperatures	49
<i>Connection instructions for pellet mole</i>	26	4.3.3 Solar - Times	50
<i>Automatic room air flap</i>	26	4.3.4 Solar - Service	50
2.2.5 Analogue module	27	4.3.5 Solar - Heat meter	52
<i>External power demand</i>	28	<b>4.4 Buffer tank</b>	<b>53</b>
2.2.6 Digital module	29	4.4.1 Buffer tank - Status	53
<b>2.3 BUS connection</b>	<b>30</b>	4.4.2 Buffer tank - Temperatures	54
2.3.1 Connecting the bus cable	31	4.4.3 Buffer tank - Times	55
2.3.2 Setting end jumpers	31	4.4.4 Buffer tank - Service	55
2.3.3 Setting the module address	32	<b>4.5 Boiler</b>	<b>57</b>
2.3.4 Potential equalisation / potential separation	32	4.5.1 Boiler - Status	57
<b>2.4 Connection information according to pump types</b>	<b>34</b>	4.5.2 Boiler - Temperatures	58
<b>3 Initial start-up with settings wizards</b>	<b>35</b>	4.5.3 Boiler - Times	59
<b>3.1 Before switching on for the first time</b>	<b>35</b>	4.5.4 Boiler - Service	59
3.1.1 Controller check	35	4.5.5 Boiler - General settings	60
3.1.2 Check on the connected units	35	<i>Boiler - General settings - MODBUS settings</i>	61
3.1.3 System check	35	<i>Boiler - General settings - Operator data</i>	62
		<b>4.6 Boiler 2</b>	<b>62</b>
		4.6.1 Boiler 2 - Status	62
		4.6.2 Boiler 2 - Temperatures	63
		4.6.3 Boiler 2 - Service	64
		<b>4.7 Feed system</b>	<b>65</b>
		4.7.1 Feed system - Selection unit probes	65

4.7.2 Feed system - 1-2-3 suction module	66	4.14.4 Diagnostics - Clear error history	100
4.7.3 Feed system - Times	67	<b>4.15 Touchscreen</b>	<b>101</b>
4.7.4 Feed system - Service	67	4.15.1 Touchscreen - Display settings	101
4.7.5 Feed system - Consumption	68	<i>Display settings - General</i>	101
<b>4.8 Network pump</b>	<b>69</b>	<i>Display settings - Basic display</i>	102
4.8.1 Network pump - Status	69	<i>Display settings - Date / Time</i>	102
4.8.2 Network pump - Temperatures	70	<i>Display settings - Software update / Service</i>	102
4.8.3 Network pump - Service	70	4.15.2 Touchscreen - Display operating rights	103
<b>4.9 Cascade</b>	<b>72</b>	<i>Froling Connect</i>	103
4.9.1 Cascade - Status	72	4.15.3 Touchscreen - Display allocation	104
4.9.2 Cascade - Backup boiler	72	<b>5 FAQ</b>	<b>105</b>
4.9.3 Cascade - Temperatures	73	<b>5.1 Activation options of pump outlets</b>	<b>105</b>
4.9.4 Cascade - Service	74	<b>5.2 Pump stall protection</b>	<b>106</b>
<b>4.10 Difference regulator</b>	<b>75</b>	<b>5.3 Boiler operating statuses</b>	<b>107</b>
4.10.1 Difference regulator - Status	75	<b>5.4 Determination of the quantity of heat</b>	<b>108</b>
4.10.2 Difference regulator - Temperatures	75	5.4.1 Assembly Information	108
4.10.3 Difference regulator - Times	76	5.4.2 Functioning and configuration	108
4.10.4 Difference regulator - Service	76	<i>Calculating the feed output of the circulating pump</i>	108
<b>4.11 Circulation pump</b>	<b>77</b>	<i>Setting the type of heat quantity calculation</i>	109
4.11.1 Circulation pump - Status	77	<i>Configuring the heat quantity calculation</i>	109
4.11.2 Circulation pump - Temperatures	77	<b>5.5 Boiler modes</b>	<b>110</b>
4.11.3 Circulation pump - Times	78	5.5.1 "Automatic" mode without storage tank	110
4.11.4 Circulation pump - Service	78	5.5.2 "Automatic" mode with storage tank	111
<b>4.12 Manual</b>	<b>79</b>	5.5.3 "Continuous load" mode without storage tank	112
4.12.1 Manual - Manual operation	79	5.5.4 "Continuous load" mode with storage tank	113
4.12.2 Manual - Digital outputs	80	5.5.5 "Domestic hot water" mode without storage tank	113
4.12.3 Manual - Analogue outputs	80	5.5.6 "Domestic hot water" mode with storage tank	114
4.12.4 Manual - Digital inputs	81	<b>5.6 Setting times</b>	<b>115</b>
<b>4.13 System</b>	<b>82</b>	<b>5.7 Calibrating the touchscreen</b>	<b>117</b>
4.13.1 System - Settings	82	<b>5.8 Software update Lambdatronic 3200</b>	<b>119</b>
<i>Setting - Boiler temperature</i>	82	5.8.1 Carrying out a software update on the boiler controller	120
<i>Setting - Flue gas</i>	82	5.8.2 Carrying out a software update on the touch control	122
<i>Setting - Ignition</i>	88	5.8.3 Finishing a software update	123
<i>Setting - Air settings</i>	88	<b>5.9 USB data recording</b>	<b>124</b>
<i>Setting - Pellet feed</i>	89	<b>6 Notes</b>	<b>126</b>
<i>Set - Cleaning</i>	90	<b>7 Appendix</b>	<b>128</b>
<i>Setting - Fuel outfeeder</i>	91	<b>7.1 Addresses</b>	<b>128</b>
<i>Setting - Combustion chamber</i>	93	7.1.1 Address of manufacturer	128
<i>Setting - Lambda values</i>	93		
<i>Set - Lambda probe</i>	94		
<i>Set - Quantity of heat calculation</i>	96		
<i>Setting - General settings</i>	97		
4.13.2 System - Current values	98		
<i>Operation hours</i>	98		
4.13.3 System - Sensors and pumps	98		
4.13.4 System - System selection	98		
<b>4.14 Diagnostics</b>	<b>99</b>		
4.14.1 Diagnosis – Current fault list	99		
4.14.2 Diagnosis – Clear pending error	99		
4.14.3 Diagnostics - Error history	99		



---

<i>Customer service</i>	128	7.1.2 Address of the installer	128
-------------------------	-----	--------------------------------	-----

## 1 General

### 1.1 About these instructions

Please read and follow the operating instructions, in particular the safety information contained therein. Keep them available next to the boiler.

These operating instructions include important information about operation, electrical connection and troubleshooting. The parameters shown depend on the set boiler type and the system configuration!

The constant further development of our products means that there may be minor differences from the pictures and content. If you discover any errors, please let us know: [doku@froeling.com](mailto:doku@froeling.com).

### 1.2 Safety information



#### DANGER



When working on electrical components:

***Risk of electrocution!***

When work is carried out on electrical components:

- ☐ Always have work carried out by a qualified electrician
- ☐ Observe the applicable standards and regulations
- ➔ Work must not be carried out on electrical components by unauthorised persons



#### WARNING



When touching hot surfaces:

***Severe burns are possible on hot surfaces and the flue gas pipe!***

When work is carried out on the boiler:


- ☐ Shut down the boiler according to procedure ("Boiler off" operating status) and allow it to cool down
- ☐ Protective gloves must usually be worn for work on the boiler, and it should only be operated using the handles provided
- ☐ Insulate the flue gas pipes and do not touch them during operation

The information on safety, standards and guidelines in the assembly and operating instructions for the boiler should also be observed!

## 2 Power connection and wiring

### 2.1 Core module and connection options

#### 2.1.1 Board view - core module

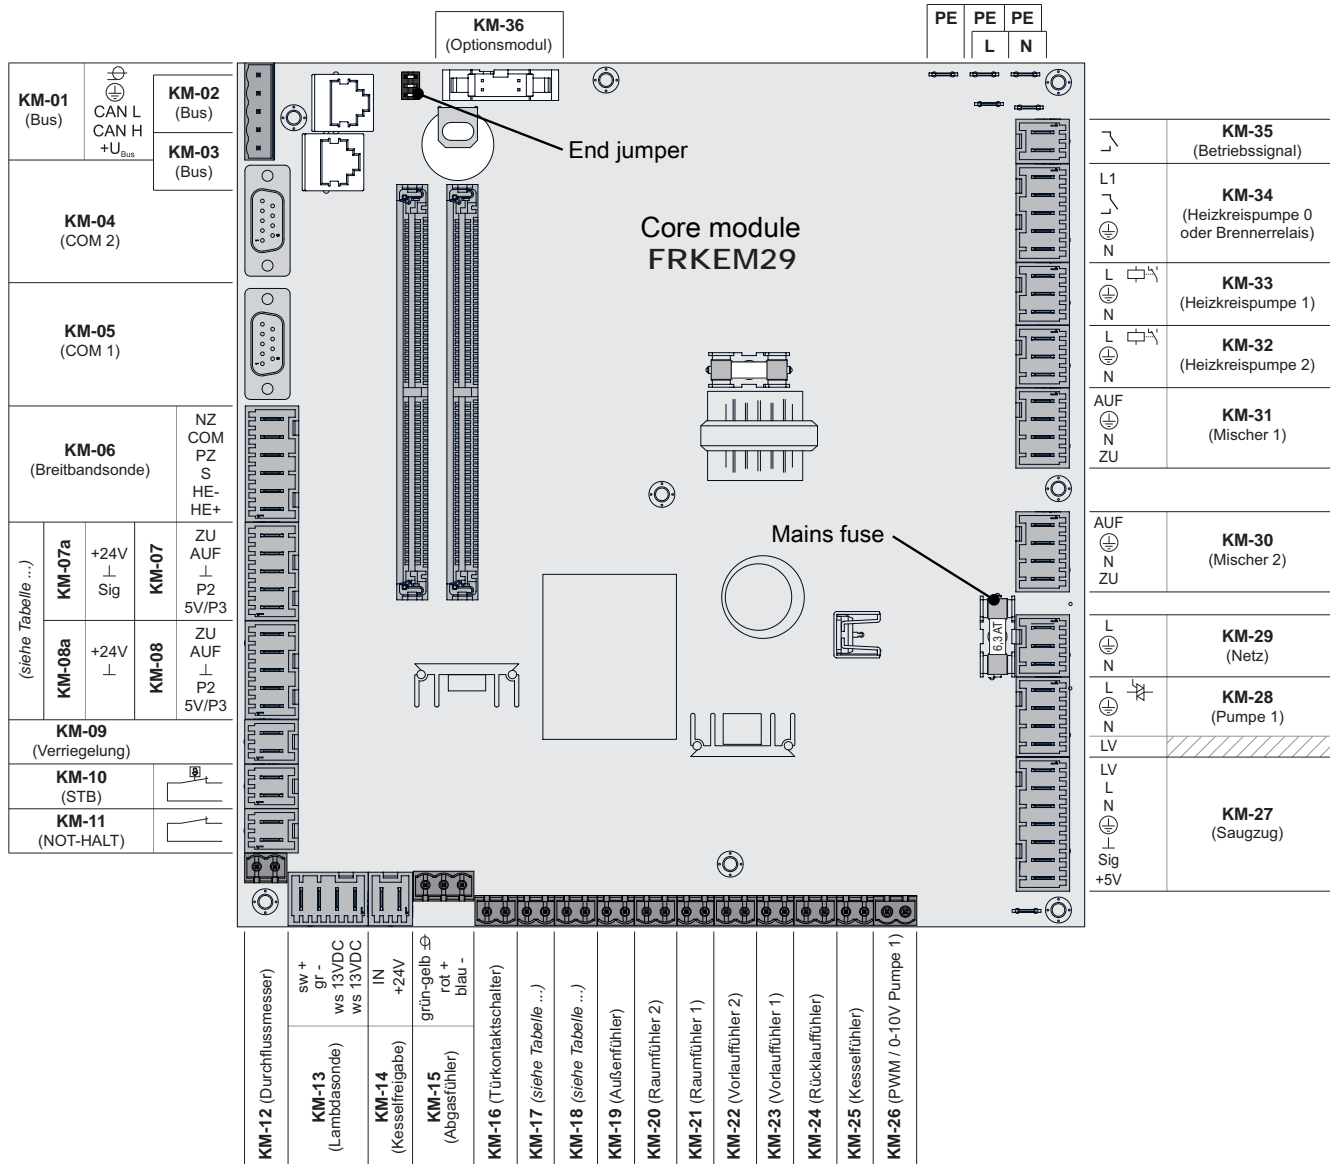

Connection / Name		Note
KM-01	BUS	Connection with cable – LIYCY paired 2x2x0.5; ⇒ See "Connecting the bus cable" [page 31] Caution! CAN L and CAN H must not be connected to +U <sub>BUS</sub> !
KM-02	BUS	Patch cable CAT 5 RJ45 SFTP 1:1 configuration; pellet module connection
KM-03	BUS	
KM-04	COM 2	Null modem cable 9-pin SUB-D; Connection is used e.g. as MODBUS interface

Connection / Name			Note
KM-05	COM 1		Null modem cable 9-pin SUB-D; Service interface for software update and connection to visualisation software
KM-06	Broadband probe		Connection cable <sup>1)</sup> 5 x 0.75 mm <sup>2</sup> Connection of a Bosch (item number 69001A) or NTK (item number 69003) broadband Lambda probe
KM-07	Pellets-Box Comfort 1-2-3 suction module	PE1 Pellet	Refer to the respective documentation of the suction system for details on the connection!
KM-08		P4 Pellet	
KM-07a	Underpressure transmitter	PE1c Pellet PE1e Pellet	Connection cable <sup>1)</sup> 3 x 0.75 mm <sup>2</sup>
KM-08a	Solenoid valve	PE1c Pellet PE1e Pellet	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
KM-09	Lock		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
KM-10	High-limit thermostat		
KM-11	EMERGENCY STOP		Caution! Do not connect the emergency stop/shutdown switch to the boiler power supply line. The switch must be a N/C switch and it must be linked to the 24V safety chain of the STL at this terminal.
KM-12	Flowmeter		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
KM-13	Lambda probe		Connection cable <sup>1)</sup> 4 x 0.75 mm <sup>2</sup> Connection of a Bosch switching-type sensor (type LSM11) or NTK switching-type sensor (type OZA685, item number: 69400)
KM-14	Boiler release		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> Caution! The connection must be a floating connection. ⇒ See "Boiler enable contact" [page 11]
KM-15	Flue gas temperature sensor		Only use connection cable of the component
KM-16	-		
KM-17	Sensor 2	PE1c Pellet PE1e Pellet	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , WOS/ash removal monitoring
KM-18	Sensor 1	PE1 Pellet P4 Pellet	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , sensor 1 in the STL housing
		PE1c Pellet PE1e Pellet	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , condenser flue gas temperature
KM-19	Outside temperature sensor		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , shielded from 25 m cable length
KM-20	Room temperature sensor heating circuit 2		
KM-21	Room temperature sensor heating circuit 1		
KM-22	Flow temperature sensor heating circuit 2		
KM-23	Flow temperature sensor heating circuit 1		
KM-24	Return feed sensor	P4 Pellet	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , return sensor in the STL housing
KM-25	Boiler sensor		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
KM-26	PDM / 0-10V pump 1		
KM-27	Induced draught fan		Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> for power supply, Connection cable <sup>1)</sup> 3 x 0.75 mm <sup>2</sup> for analysis of current speed

Connection / Name		Note
KM-28	Pump 1	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 1.5A / 280W / 230V
KM-29	Mains connection	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , fuse provided by customer: C16A
KM-30	Mixing valve heating circuit 2	Connection cable <sup>1)</sup> 4 x 0.75 mm <sup>2</sup> , max. 0.15 A / 230 V
KM-31	Mixing valve heating circuit 1	
KM-32	Heating circuit pump 2	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 2.5A
KM-33	Heating circuit pump 1	
KM-34	Heating circuit pump 0 or burner relay	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 2A
KM-35	Operating signal	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> ⇒ See "Operating signal" [page 15]
KM-36	Optional module	

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

### Fuses

F2	6.3 AT	Pump 1, induced draught fan
----	--------	-----------------------------


## 2.1.2 Mains connection

Connect the power supply at the "mains connection" plug

- ☐ Flexible sheathed cable must be used for the wiring; this must be of the correct size to comply with applicable regional standards and regulations.

## 2.1.3 Connecting the outside temperature sensor

The outside temperature sensor is included with the materials supplied for the boiler and is usually mounted on an outer wall that is not directly exposed to the sun. It continuously measures the ambient temperature and forms part of the weather-compensated heating circuit control.

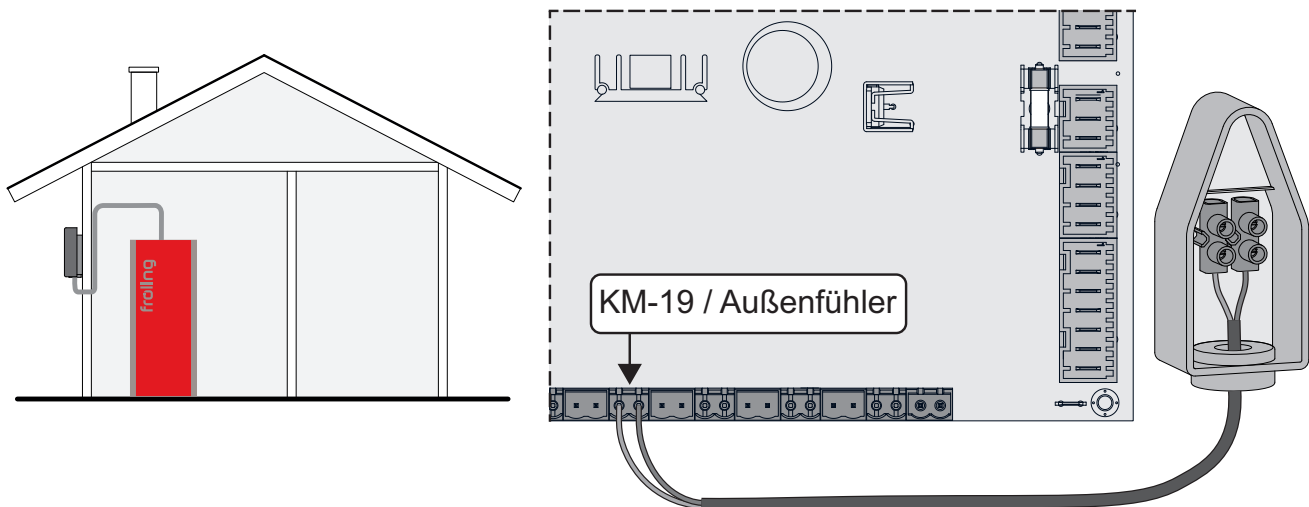




In the delivered state, the outside temperature sensor is read in by the core module ("KM-19 / outside temperature sensor" connection). Alternatively, the outside temperature sensor can be connected to an additional heating circuit module.

⇒ See ["Heating circuit module" \[page 16\]](#)

### 2.1.4 FRA room temperature sensor

In addition to recording the current room temperature, the Froling FRA room temperature sensor also has a handwheel to adjust the required room temperature and a slide switch to set the mode for the heating circuit.

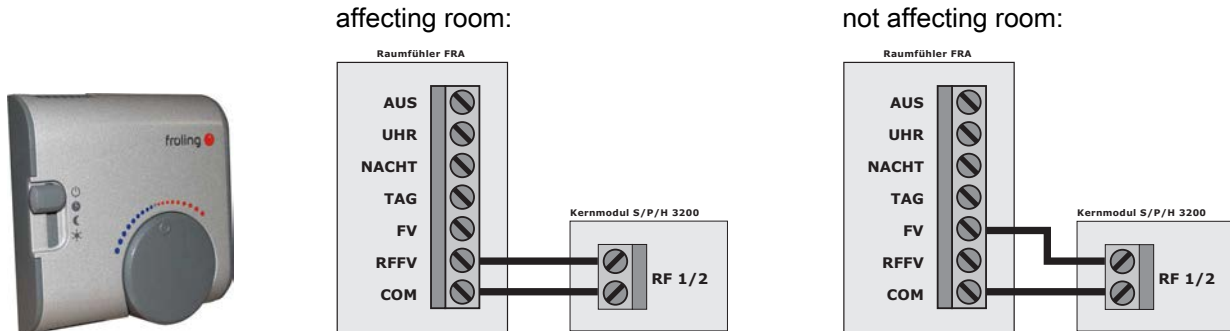


Possible positions of the mode switch:

	<b>Boiler off</b>	Heating circuit deactivated, only frost protection!
	<b>Automatic mode</b>	Heating and setback phases according to the set times
	<b>Setback mode</b>	Ignores the heating phases and continuously controls the room temperature to the temperature set in setback mode
	<b>Party switch</b>	Ignores the setback phases and continuously controls the room temperature to the temperature set in heating mode
Handwheel...	Allows you to adjust the temperature by +/- 3°C	

**IMPORTANT!** Refer to the supplied assembly instructions for more detailed explanations on connecting and operating the FRA room temperature sensor.

### 2.1.5 Boiler enable contact

When commissioning the boiler using the settings wizard, the boiler release contact function (“How is the boiler release contact on the core module being used?”) is called up to enable the optional analysis of an external floating release or start contact. The following functions are possible depending on the setting and electrical connection:

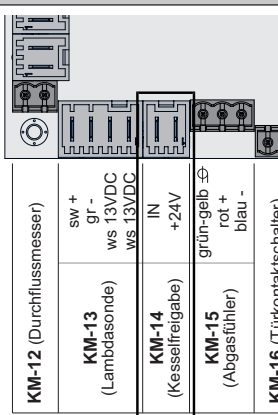Connection position	Setting	Description
 <p>KM-12 (Durchflussmesser)</p> <p>KM-13 (Lambdasonde) sw + gr - ws 13VDC ws 13VDC</p> <p>KM-14 (Kesselfreigabe) IN +24V grün-gelb</p> <p>KM-15 (Abgasfühler) rot + blau -</p> <p>KM-16 (Türkontaktschalter)</p>	not in use	No effect on boiler operation (contact must not be clamped/bridged).
	Release/disable boiler	As long as the boiler release contact is closed, the boiler controller operates according to the specified parameters (mode, time window, etc.). If the boiler release contact is opened, the boiler is no longer released and follows the shutdown procedure. As long as the boiler release contact is open, heating requirements are ignored. (e.g. flue gas thermostat of a supply boiler, house distribution box).
	Extra heating	As long as the boiler release contact is open, the boiler controller operates according to the specified parameters. If the boiler release contact is closed, the boiler starts in continuous load operation (e.g. heat requirements of a heating fan).

### Boiler request via external control system

The boiler is used as a heat source for charging a storage tank without Froling storage tank management and heat is requested from an external control system. The loading pump to the storage tank must be activated by the boiler controller!

- ☐ Set the “Boiler release input available” parameter to YES
- ☐ Configure hydraulic system 0
- ☐ Connect the loading pump to the storage tank at the core module at HCP 0

The speed of HCP 0 is not controlled. (Observe the pump dimensions!)

- ☐ Setting the “Continuous load” mode


The higher level control system should ensure a minimum activation time of 15 minutes for the pellet boiler.

### 2.1.6 Connecting a circulating pump to the core module

Different types of wiring must be implemented depending on the type of pump:

#### *High efficiency pump with control line (PWM / 0-10V)*


On high efficiency pumps with an additional wired control line, the speed control is implemented via the additional connection for the PWM or 0-10V signal.

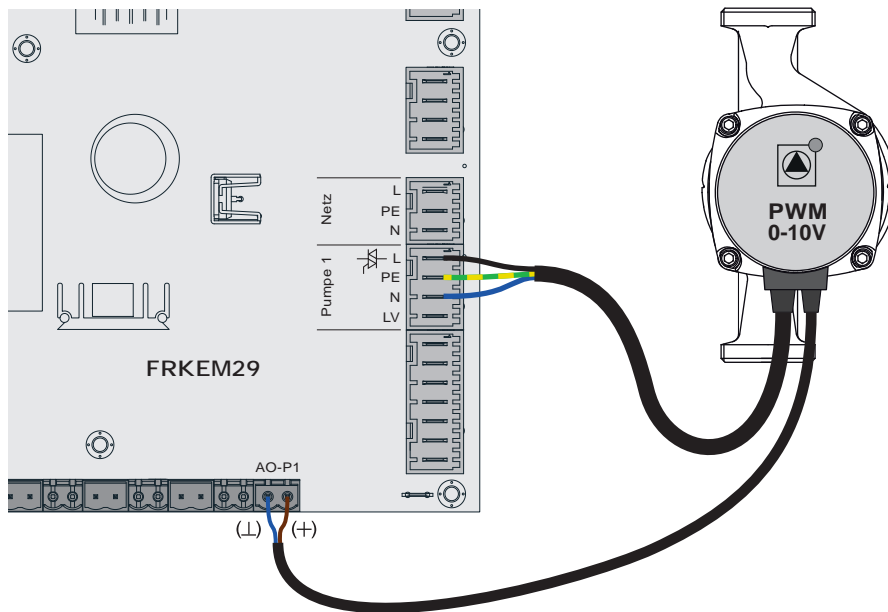

- ☐ Connect the power supply for the high efficiency pump to output “Pump 1” of the core module
- ☐ Connect the PWM cable of the high efficiency pump to the corresponding “PWM / 0-10V” port
  - ➔ Make sure that the cables are configured correctly (polarity) in accordance with the connection diagram of the pump!
- ☐ Set control of the pump in the relevant menu to “Field pump / PWM” or “Field pump / 0-10V”

### High efficiency pump without control signal


It is not possible to control the speed when using this type of pump. The use of a line regulating valve (e.g.: Setter balancing valve) is recommended.

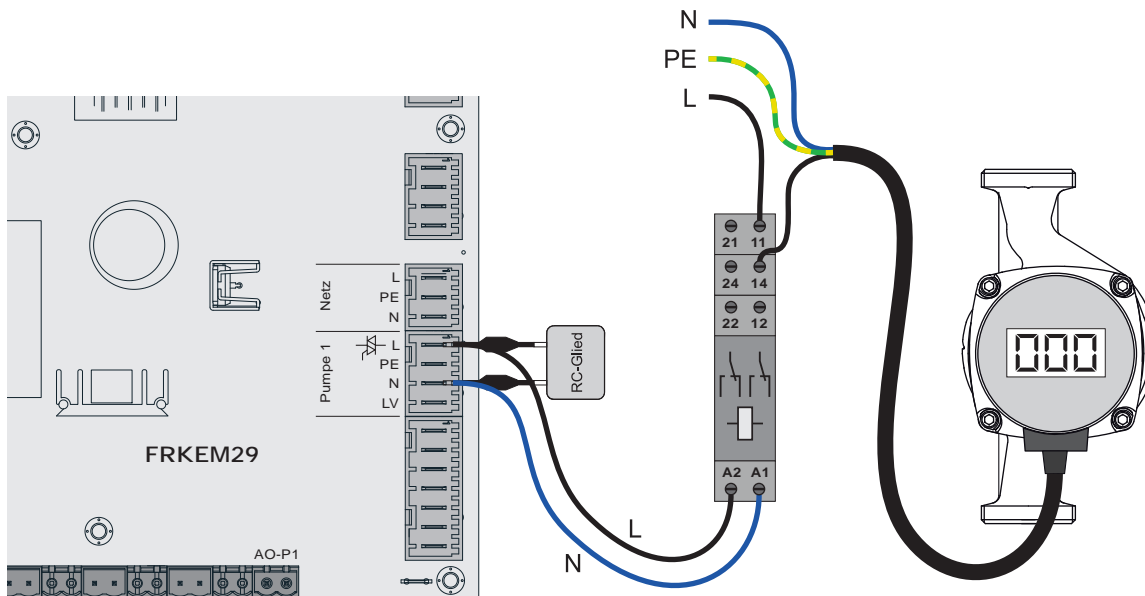

- ☐ Connect pump with relay and RC element isolated from the output
- ☐ In the relevant menu, set the pump control to "HE pump without control signal"

### AC pump without control signal (pulse package control)


On older pumps without a control signal that are not highly efficient, the speed control is implemented via a pulse package control. Please note that the minimum speed may need to be adjusted on some pumps (default setting: 30%).

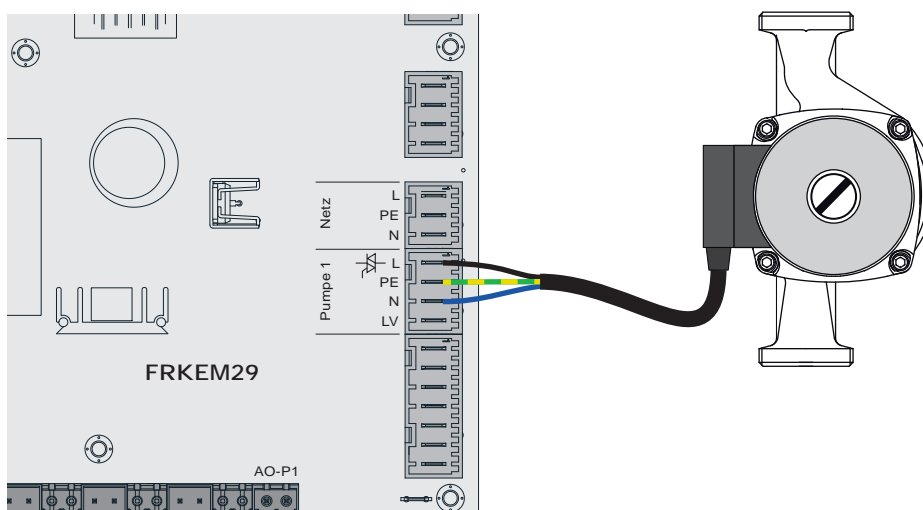

- ☐ Connect pump to output "Pump 1" of the core module
- ☐ In the relevant menu, set the pump control to "Pump without control signal"

### 2.1.7 Connecting an isolating valve to the core module




If an isolating valve is connected to the speed-controlled pump outlet, an RC element must be used.

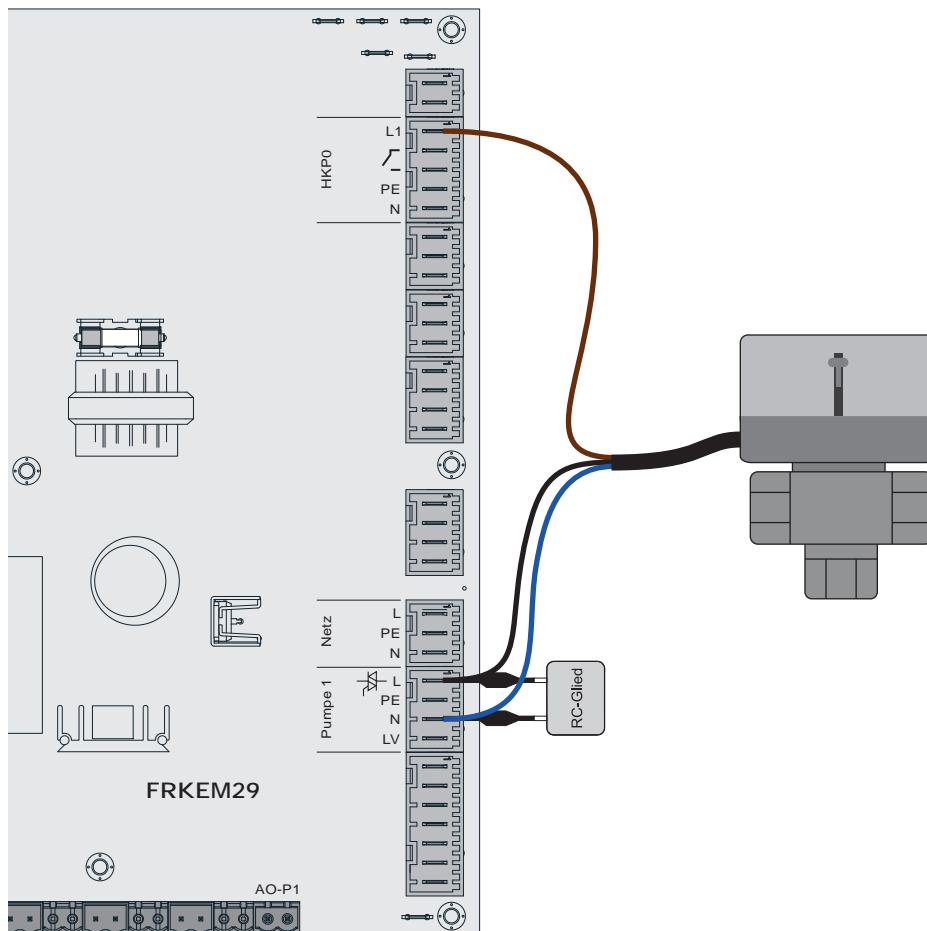

- ☐ Phase (L) for switching the valve and connecting neutral conductor (N) to output "Pump 1" with the RC element
- ☐ Phase (L) for continuous supply (switches the valve back to the initial position) at output "HCP0" – connect terminal "L1"

### 2.1.8 Heating circuit pump 0 / burner relay

Depending on the system setting, the connection “Heating circuit pump 0” can be used for heating circuit pump 0 or as a burner relay. The following connection instructions must be observed:

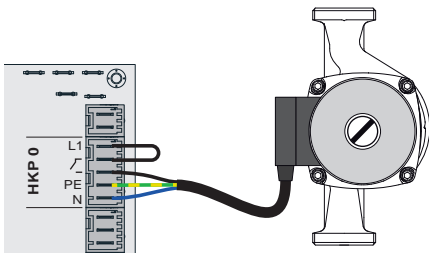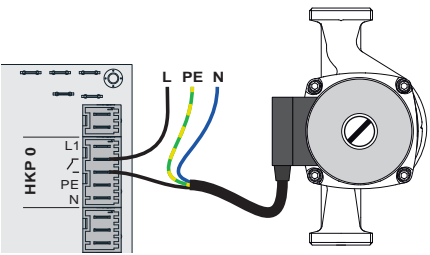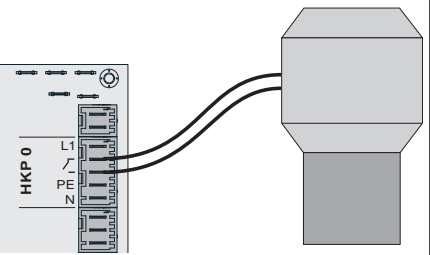Heating circuit pump 0	Burner relay
 <p>The pump can be supplied with up to a max. 2 Ampere directly via the output. During this process, phase (L1) of the output is connected to the switch contact.</p>	 <p>The pump must be supplied externally with 2 Ampere. Up to max. 5 Ampere, the floating contact can be used to switch the phase. At above 5 Ampere, the pump must be isolated with a relay.</p>
	 <p>Wire the floating output contact as an enabling signal to control the standby boiler.</p>

### 2.1.9 Operating signal

On the core module (connection position KM-35), it is possible to issue a floating operating signal. The status is displayed under the “Standby relay” output in the “Manual” -> “Digital outputs” menu.

Operating status	Relay status
Boiler off, standby, fault	0
All other operating statuses (e.g. preparation, heating up, pre-heating, ignition, heating, slumber, cleaning, shutdown wait 1, shutdown wait 2, etc.)	1


## 2.2 Expansion modules

### 2.2.1 Heating circuit module

Two heating circuits can be controlled as standard with the core module.

To add further heating circuits, the heating circuit module boards must be expanded. Expansion can include up to eight heating circuit modules (address 0 to 7). A total of up to 18 heating circuits can be controlled. It is important to ensure that the module address is set correctly.

⇒ See "Setting the module address" [page 32]

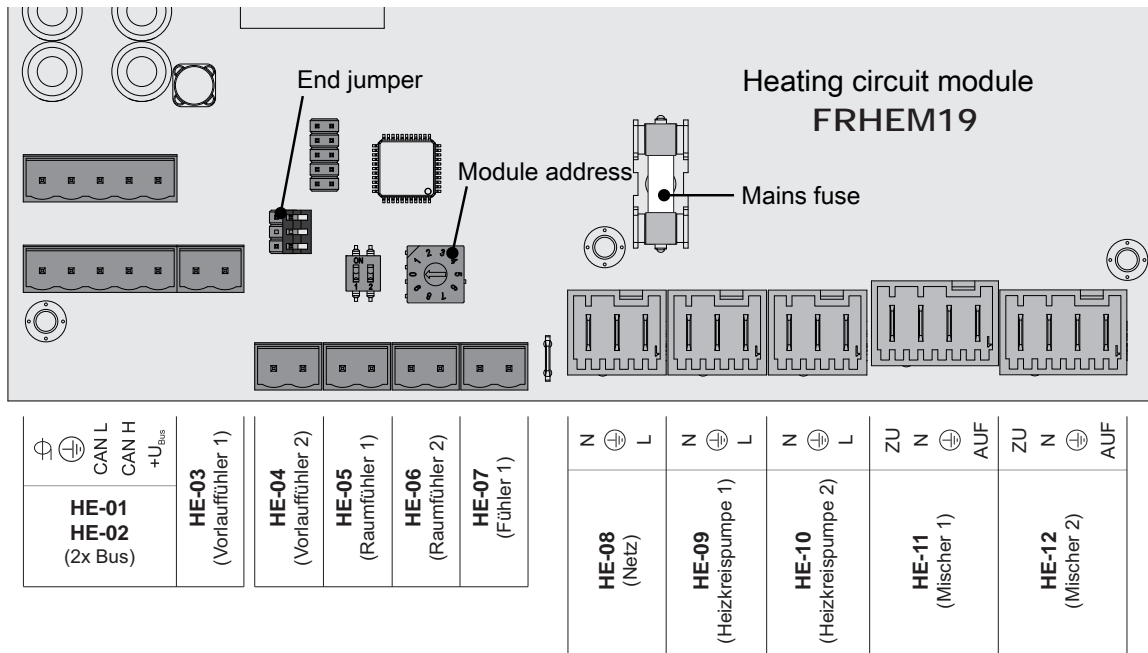

Connection / Name		Note
HE-01	BUS	Connection with cable – LIYCY paired 2x2x0.5; ⇒ See "Connecting the bus cable" [page 31] Caution! CAN L and CAN H must not be connected to +U <sub>BUS</sub> !
HE-02	BUS	
HE-03	Flow temperature sensor 1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> ;
HE-04	Flow temperature sensor 2	
HE-05	Room temperature sensor 1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> ; shielded from 25 m cable length
HE-06	Room temperature sensor 2	
HE-07	Sensor 1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> ; Connection of the outside temperature sensor if this is not to be connected to the core module. The address of the heating circuit module to which the outside temperature sensor is connected must be set in the "Heating – General settings" menu.
HE-08	Mains	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , fuse 10A
HE-09	Heating circuit pump 1	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 2.5A / 230V / 500W
HE-10	Heating circuit pump 2	
HE-11	Mixing valve 1	Connection cable <sup>1)</sup> 4 x 0.75 mm <sup>2</sup> , max. 0.15A / 230V
HE-12	Mixing valve 2	

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5



**Fuses**

F1	6.3 AT	Mixer 1, mixer 2, heating circuit pump 1, heating circuit pump 2
----	--------	--


**2.2.2 Hydraulic module**

The hydraulic module makes the connections of sensors and pumps available for the hydraulic components of the system (storage tank, DHW tank etc.).

A hydraulic module is included in the delivery as standard (address 0). A further seven modules (addresses 1 to 7) can be retrofitted.

You must ensure that the module address is assigned correctly.

⇒ See "Setting the module address" [page 32]

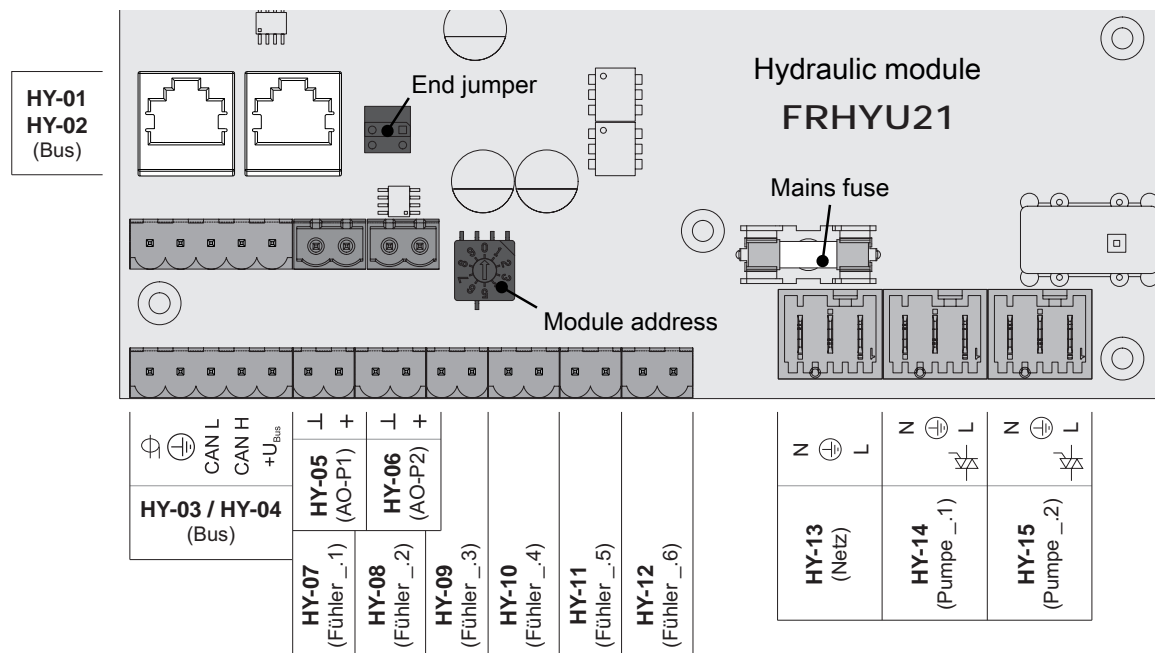
**Hydraulic module up to version FRHYU21**

Connection / Name		Note
HY-01	BUS	Patch cable CAT 5 RJ45 SFTP 1:1 configuration;
HY-02	BUS	
HY-03	BUS	Connection with cable – LIYCY paired 2x2x0.5; ⇒ See "Connecting the bus cable" [page 31] Caution! CAN L and CAN H must not be connected to +U <sub>BUS</sub> !
HY-04	BUS	
HY-05	AO-P1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
HY-06	AO-P2	Connection of the control signal (PDM or 0-10V) of the relevant pump (AO-P1 = pump 1 of the board)
HY-07 : HY-12	Sensor _1 : Sensor _6	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , shielded from 25 m cable length Sensor inputs on the board. The correct sensor designation is determined by the set module address (0-7). Example: Module address "2" = sensor 2.1 to sensor 2.6
HY-13	Mains	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , fuse 10A

Connection / Name		Note
HY-14	Pump _1	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 1.5A / 230V / 280W Pump outlets on board. The correct pump designation is determined by the set module address (0-7). Example: module address "2" = pump 2.1 and pump 2.2
HY-15	Pump _2	

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

### Hydraulic module starting with version FRHYU22

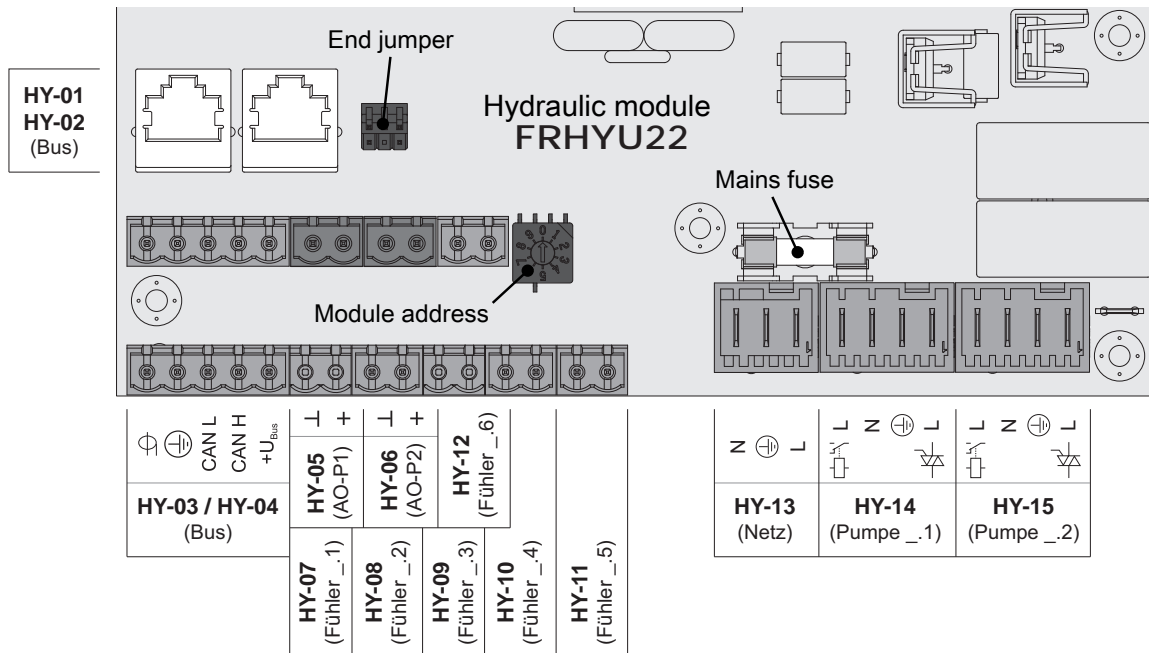

Connection / Name		Note
HY-01	BUS	Patch cable CAT 5 RJ45 SFTP 1:1 configuration;
HY-02	BUS	
HY-03	BUS	Connection with cable – LIYCY paired 2x2x0.5; ⇒ See "Connecting the bus cable" [page 31] Caution! CAN L and CAN H must not be connected to +U <sub>BUS</sub> !
HY-04	BUS	
HY-05	AO-P1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
HY-06	AO-P2	Connection of control signal for relevant pump
HY-07	Sensor _1	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , shielded from 25 m cable length Sensor inputs on the board. The correct sensor designation is determined by the set module address (0-7). Example: Module address "2" = sensor 2.1 to sensor 2.6
:	:	
HY-12	Sensor _6	
:	:	
HY-13	Mains	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , fuse 10A
HY-14	Pump _1	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 1.5A / 230V / 280W Pump outlets on board. The correct pump designation is determined by the set module address (0-7). Example: module address "2" = pump 2.1 and pump 2.2 Depending on the type of pump, the phase (L) is either connected to the relay output or triac output. ⇒ See "Connecting a circulating pump to the hydraulic module" [page 19]
HY-15	Pump _2	


1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

**Connecting a circulating pump to the hydraulic module**

**CAUTION!** As of module version FRHYU22, one relay output is available at each of the pump outlets in addition to the triac output. Observe the following connection diagrams to correctly implement the wiring of the circulating pump.

**High efficiency pump with control line (PDM / 0-10V)**


On high efficiency pumps with an additional wired control line, the speed control is implemented via the additional connection for the PDM or 0-10V signal.

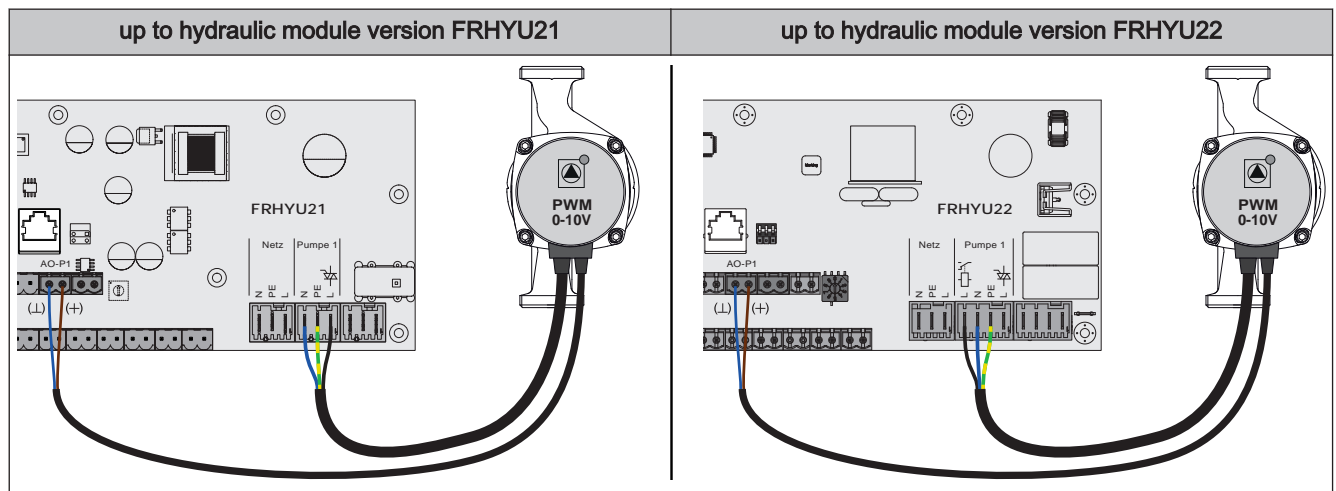

- ☐ **Hydraulic module FRHYU21:** Connect the power supply for the high efficiency pump to output "Pump 1" or "Pump 2"
- ☐ **Hydraulic module FRHYU22:** Connect the power supply for the high efficiency pump to output "Pump 1" or "Pump 2" and use the relay output for phase (L)
- ☐ Connect the PDM cable of the high efficiency pump to the corresponding port "AO-P1" or "AO-P2"
  - Make sure that the cables are configured correctly (polarity) in accordance with the connection diagram of the pump!
- ☐ Set control of the pump in the relevant menu to "Field pump / PDM" or "Field pump / 0-10V"

**High efficiency pump without control signal**


It is possible to control the speed when using this type of pump. The use of a line regulating valve (e.g.: Setter balancing valve) is recommended.

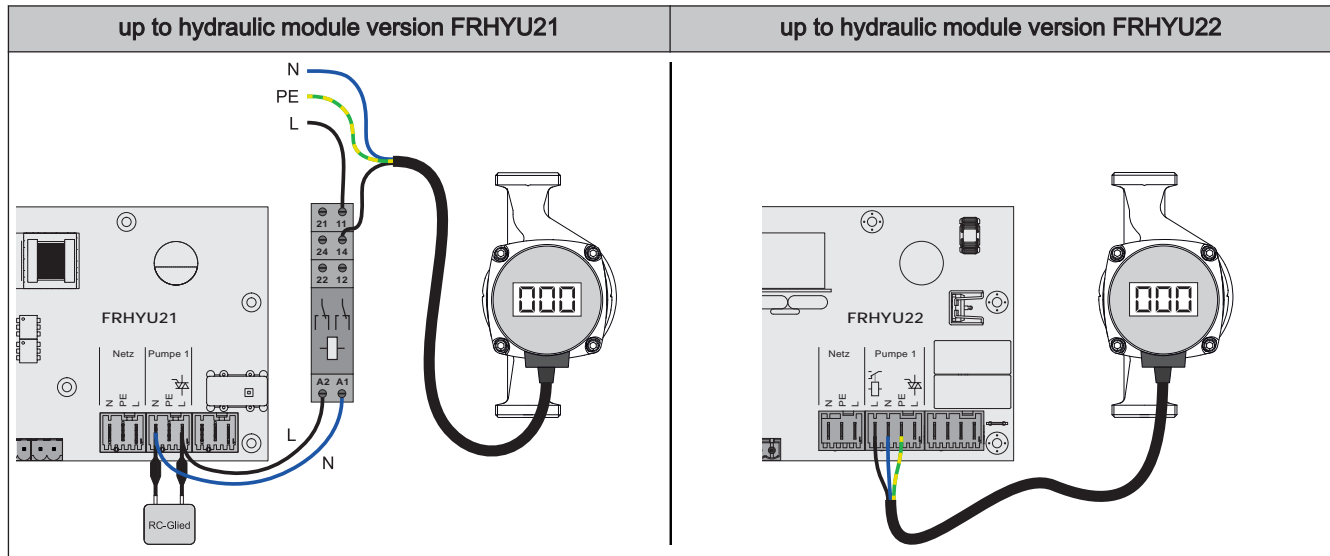

- ☐ **Hydraulic module FRHYU21:** Connect pump with relay and RC element isolated from the output
- ☐ **Hydraulic module FRHYU22:** Connect the power supply for the high efficiency pump to output "Pump 1" or "Pump 2" and use the relay output for phase (L)
- ☐ In the relevant menu, set the pump to "HE pump without control signal"

**AC pump without control signal (pulse package control)**

On older pumps without a control signal that are not highly efficient, the speed control is implemented via a pulse package control. Please note that the minimum speed may need to be adjusted on some pumps (default setting: 30%).

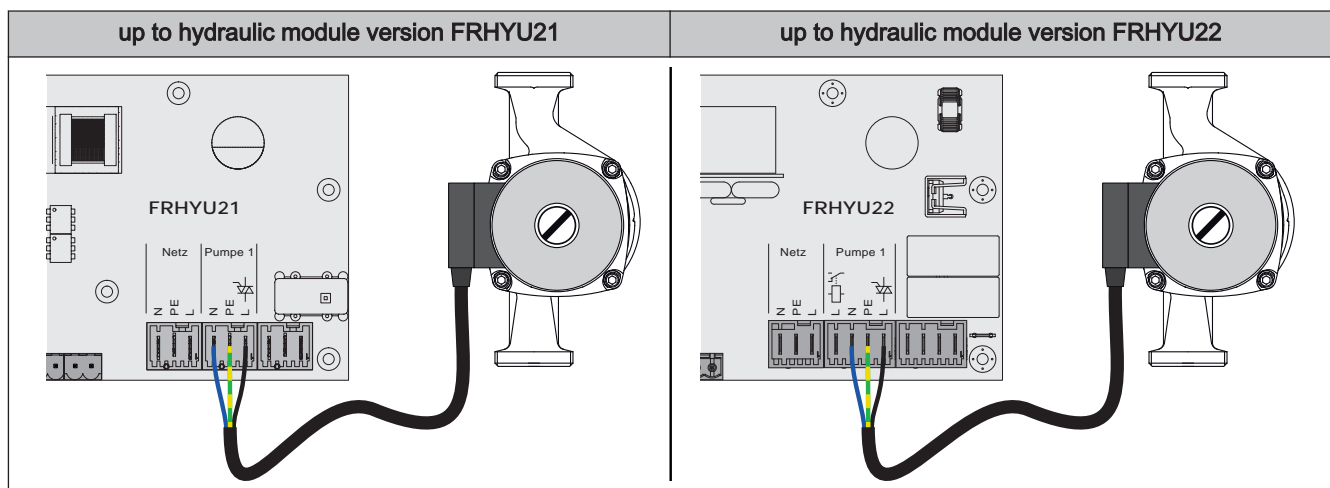

- ☐ **Hydraulic module FRHYU21:** Connect the power supply for the pump to output "Pump 1" or "Pump 2"
- ☐ **Hydraulic module FRHYU22:** Connect the power supply for the pump to output "Pump 1" or "Pump 2" and use the triac output for phase (L)
- ☐ In the relevant menu, set the pump to "Pump without control signal"


up to hydraulic module version FRHYU21

- up to hydraulic module version FRHYU22
- 

- Service manual Lambdatronic P 3200 for pellet boiler | B1441022\_en

### Connecting an isolating valve to the hydraulic module


**CAUTION!** As of module version FRHYU22, one relay output is available at each of the pump outlets in addition to the triac output. Observe the following connection diagrams for the correct wiring.

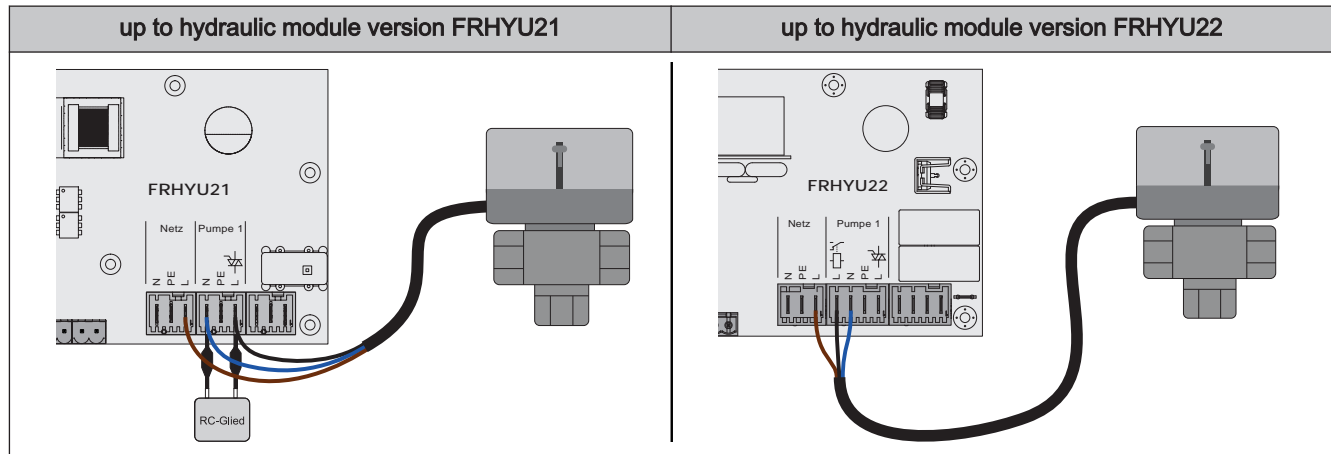

- ☐ **Hydraulic module FRHYU21:** Phase (L) for switching the valve and connecting neutral conductor (N) to output “Pump 1” or “Pump 2” with the RC element
- ☐ **Hydraulic module FRHYU22:** Phase (L) for switching the valve and connecting neutral conductor (N) to output “Pump 1” or “Pump 2” using the relay output for phase (L)
- ☐ Connect the phase (L) for continuous supply (switches the valve back to the initial position) to the power supply at terminal “L”

## 2.2.3 Pellet module

The pellet module is included in standard delivery and provides the connections of the hardware components for the pellet feed and pellet combustion:

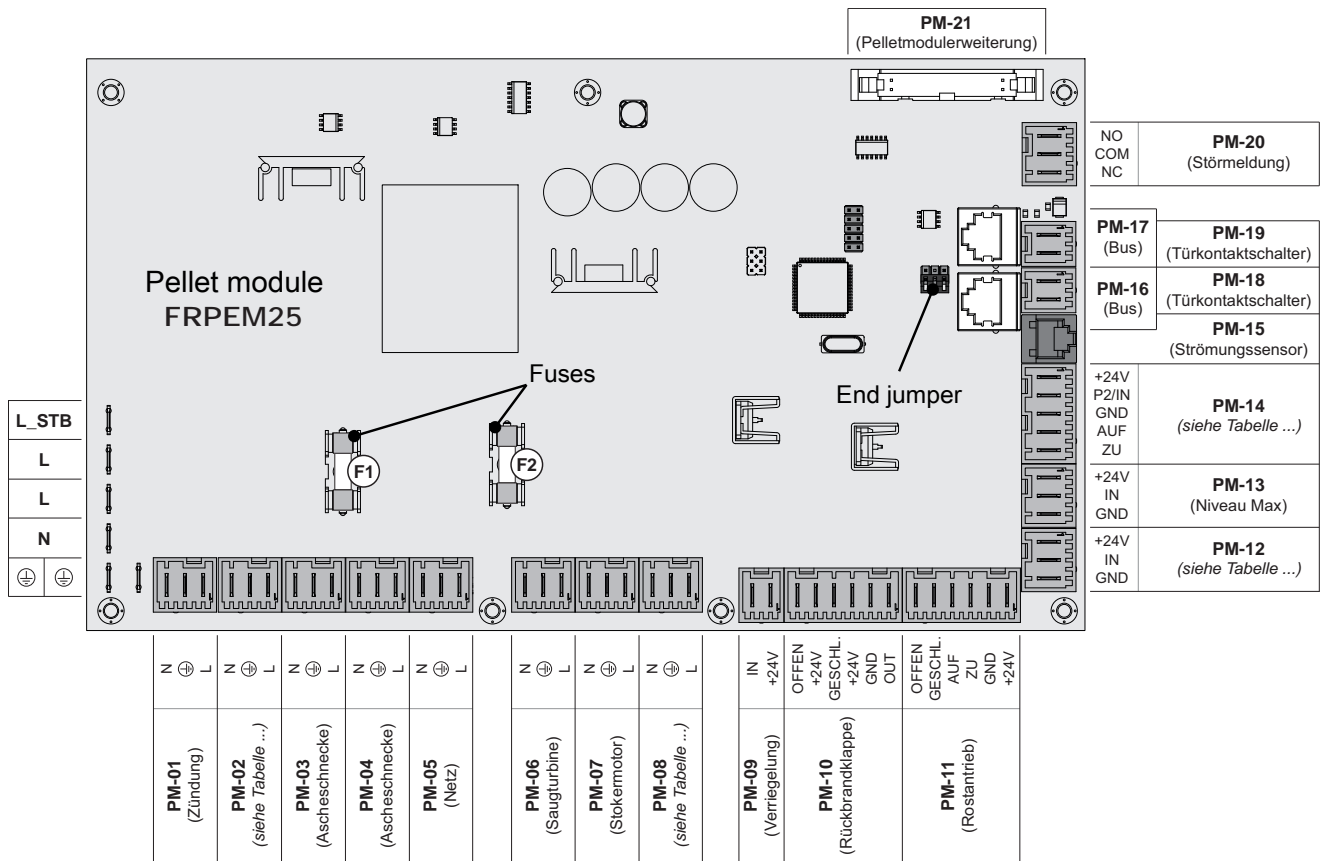

Connection / Name			Note
PM-01	Ignition		Use connection cable of the component
PM-02	WOS drive	PE1 Pellet P4 Pellet	
	Vibrator	PE1c Pellet PE1e	
PM-03	Ash screw		
PM-04	Ash screw		
PM-05	Mains connection		Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup>
PM-06	Pellets suction turbine		Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup>
PM-07	Stoker motor		Use connection cable of the component
PM-08	Vibrator	PE1 Pellet P4 Pellet	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup>
	Feed screw	PE1c Pellet	Use connection cable of the component
PM-09	Lock		Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup>
PM-10	Burn back flap		Use connection cable of the component
PM-11	Grate drive	PE1 Pellet P4 Pellet	
	Combi drive	PE1e	


Connection / Name			Note
PM-12	Min level	P4 Pellet	
PM-13	Max level		
PM-14	Underpressure transmitter	PE1 Pellet P4 Pellet	
	Gate valve	PE1c Pellet P4 Pellet	
PM-15	Flow sensor	P4 Pellet	
PM-16	BUS		Patch cable CAT 5 RJ45 SFTP 1:1 configuration
PM-17			
PM-18	Door switch		Use connection cable of the component
PM-19			
PM-20	Fault message		Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 1A
PM-21	Pellet module expansion		Ribbon cable to connect pellet module expansion

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

### Fuses

F1	10 AT	Stoker motor, vibrator/delivery screw
F2	10 AT	Suction unit

### Connection configuration for max level S1 and min level S4




☐ The black wire of the sensor is not used.

### Common fault relay (on the pellet module)

Two floating switch contacts are available ("normal open" and "normal closed") for control of external warning devices (signal lights, signal horn, SMS box, etc.). If a fault occurs both contacts are activated, and the "normally open" closes and the "normally closed" opens.


☐ Maximum load of the contact: 1A

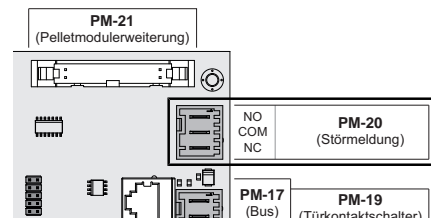



## 2.2.4 Pellet module expansion

The pellet module controls a suction delivery unit as standard. The pellet module expansion is necessary if the suction screws or other discharge systems or system components from third-party manufacturers are used. The power supply line and the communication line must be connected to the pellet module.

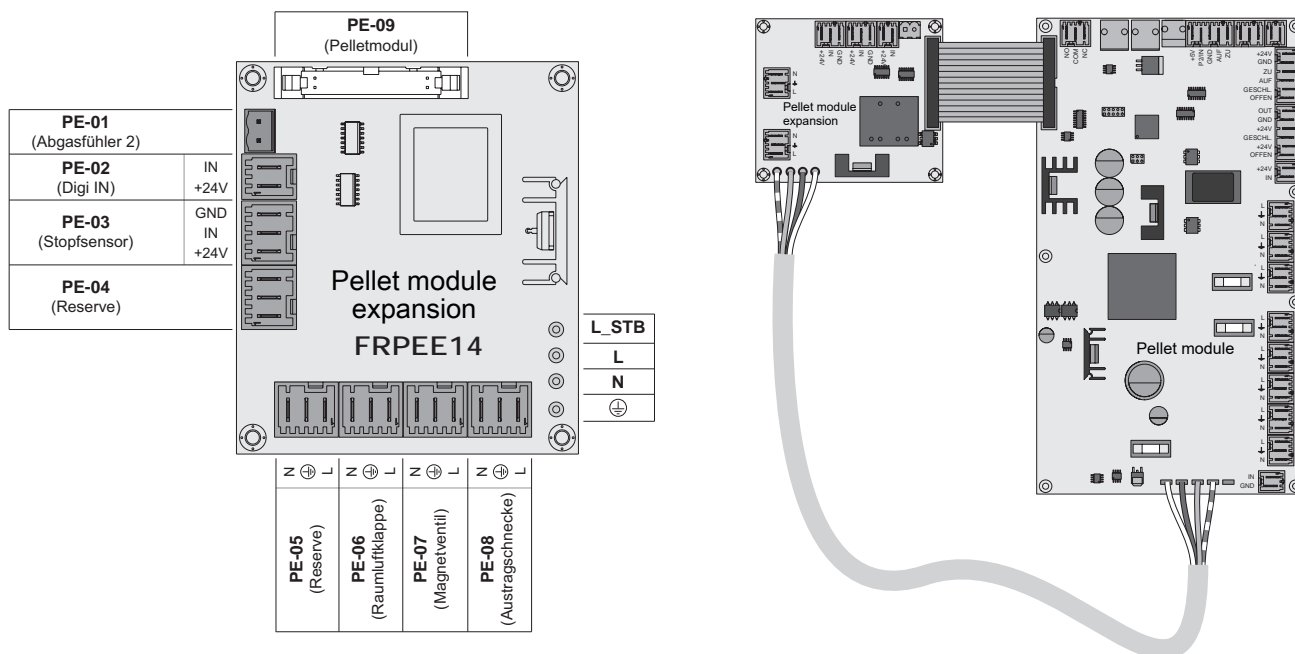


Connection / Name		Note
PE-01	Flue gas temperature sensor 2	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> Connection of second flue gas temperature sensor in conjunction with the condensing boiler heat exchanger.
PE-02	Digi IN	Connection cable <sup>1)</sup> 2 x 0.75 mm <sup>2</sup> , 24VDC Digital input (24V) that determines the position of the room air flap: <ul style="list-style-type: none"> <li>Digital input = 1 =&gt; Flap open</li> <li>Digital input = 0 =&gt; Flap closed</li> </ul>
PE-03	Jam sensor	Jam sensor in suction piece on vacuum screw delivery system. Connection layout: <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="margin-right: 10px;"> Jam sensor S2  GND  IN  +24V </div> <div style="margin-right: 10px;"> </div> <div style="margin-right: 10px;"> blue  black  brown </div> <div> </div> </div> <p><b>IMPORTANT! The white wire of the sensor is not used.</b></p>
PE-04	Reserve	Not in use
PE-05	Reserve	
PE-06	Room air flap	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 1A / 230V
PE-07	Solenoid valve	Connection cable <sup>1)</sup> 3 x 1 mm <sup>2</sup> Connection of the solenoid valve in conjunction with the condensing boiler heat exchanger.
PE-08	Discharge screw	Connection cable <sup>1)</sup> 3 x 1.5 mm <sup>2</sup> , max. 4A / 230V / 900W
PE-09	Pellet module	Ribbon cable to connect to pellet module

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

### Connection instructions for pellet mole

The diagram below shows the electrical connection of the Schellinger pellet mole to the Fröling Lambdatronic 3200 boiler controller. The pellet module expansion is required for operation.

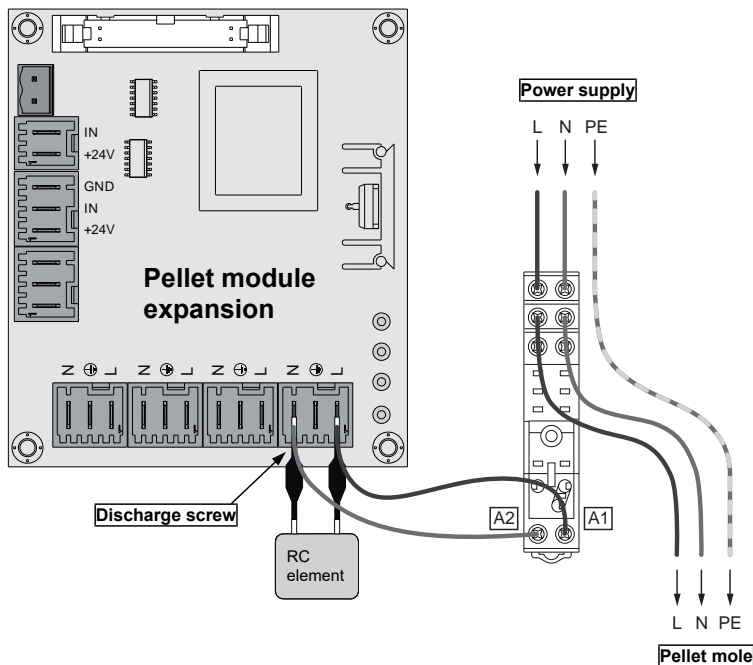

- ☐ Using the RC element provided, connect terminals A1 and A2 of the relay base to ports L and N on the “discharge screw” output of the pellet module expansion as illustrated
- ☐ Connect L and N of the power supply line for the pellet mole to the "COM" terminals of the relay switch contacts and wire from the "NO" terminals to the pellet mole

### Automatic room air flap

An output for controlling an automatic room air flap is available on the pellet module expansion.


Function: When the boiler starts the output is activated and the room air flap is opened. This function is monitored at the input “Digi IN”.

- Digital input = 1 => Flap open
- Digital input = 0 => Flap closed


If the room air flap is activated and the digital input is not engaged within 5 minutes, the notice, “Automatic room air flap will not open” appears on the display and the boiler does not start.

If the digital input changes during heating mode (1 => 0) the boiler shuts down again under controlled conditions. Once the boiler has shutdown, the output is deactivated and the room air flap closes.

**NOTICE!** The return signal of the room air flap at input “Digi IN” must have a floating design.

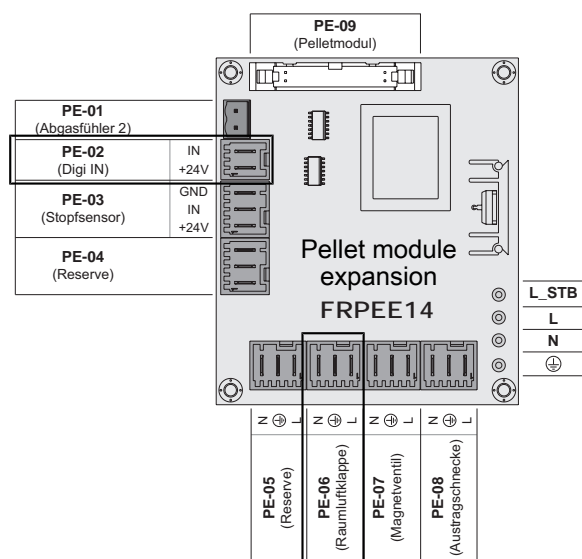

## 2.2.5 Analogue module

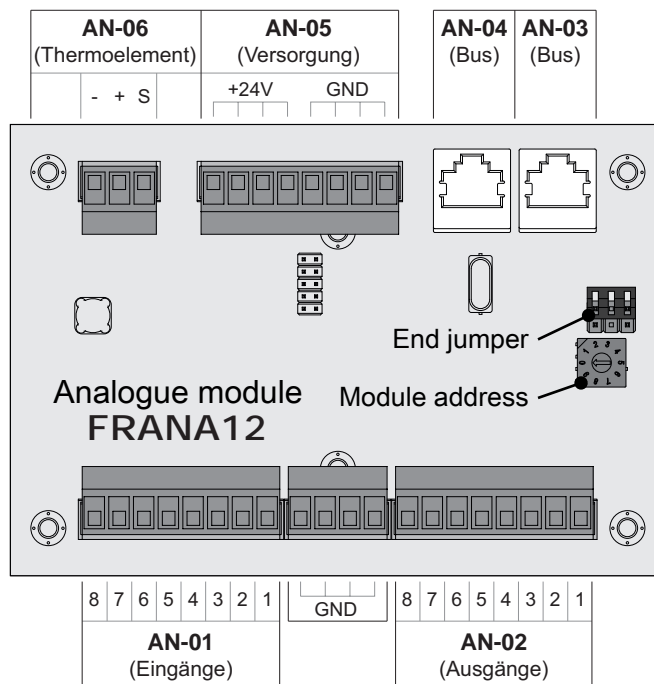

Connection / Name		Note
AN-01	Inputs 1...8	Connection cable <sup>1)</sup> 1 x 0.75 mm <sup>2</sup>
AN-02	Outputs 1...8	Connection cable <sup>1)</sup> 1 x 0.75 mm <sup>2</sup>
AN-03	Bus	CAT 5 patch cable grey RJ45 SFTP 1:1 configuration
AN-04	Bus	
AN-05	Power supply	24 V power supply of the module, connection cable <sup>1)</sup> 2 x 1.0 mm <sup>2</sup> - Pellet boiler: 24 V power supply - pellet boiler and dual fuel boiler: Pellet module, "MIN sensor" terminal - Wood chip boiler: Supply via 24 V power supply unit
AN-06	Thermocouple	Use sensor connection

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

**Standard configuration – Analogue module with address 0**

Input	Designation
3	External power specification (0-10V)

### ***External power demand***

The type of power demand can be set using the “Source for ext. power demand (0 – off, 1 – 0-10 V, 2 – modbus)” parameter. The percentages are transferred directly if the power demand is made via modbus. If 0-10 V is selected as the source, the boiler release/boiler output can be controlled via an adjustable input at the analogue module using a voltage signal.


If the signal at the input is above 35%, the boiler starts in continuous load mode; if the signal drops below 30%, the boiler shuts down.

By default 0V = 0% and 10V = 100%. This can be changed using the “Invert ext. power demand via analogue input” parameter.

To initiate start-up via the power demand, “Automatic” mode must be selected and the contact must be closed if a release contact is used (“Boiler release input available” parameter = YES).

Necessary parameters for setting the power demand can be found in the “*Boiler – General settings*” menu.

## 2.2.6 Digital module

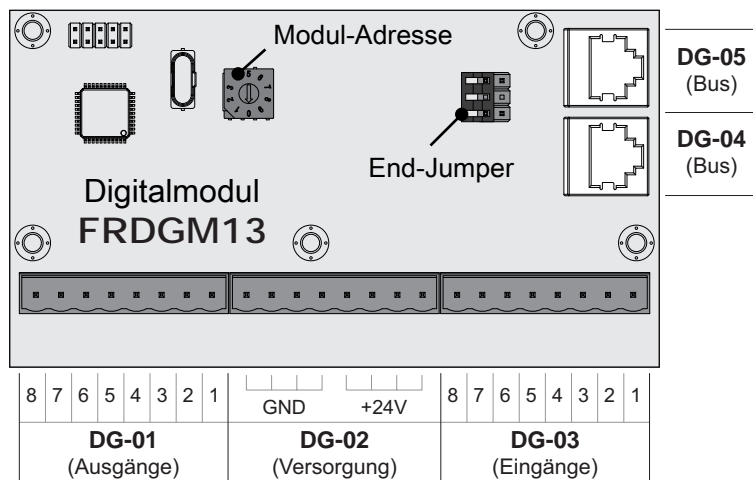

Connection / Name		Note
DG-01	Outputs 1...8	Connection cable <sup>1)</sup> 1 x 0.75 mm <sup>2</sup>
DG-02	Power supply	24 V power supply of the module, connection cable <sup>1)</sup> 1 x 1.0 mm <sup>2</sup> - Pellet boiler and dual fuel boiler: Pellet module, "Sensor level MIN" (PM-12) terminal - wood chip boiler: Supply via 24 V power supply unit
DG-03	Inputs 1...8	Connection cable <sup>1)</sup> 1 x 0.75 mm <sup>2</sup>
DG-04	Bus	CAT 5 patch cable grey RJ45 SFTP 1:1 configuration
DG-05	Bus	

1. YMM as per ÖVE-K41-5 or H05VV-F as per DIN VDE 0881-5

**Standard configuration – Digital module with address 1**


Output		Designation
1	PE1c Pellet	1-2-3 suction module – "PL OPEN" terminal
2		1-2-3 suction module – "PL CLOSED" terminal
3		1-2-3 suction module – "SL OPEN" terminal
4		1-2-3 suction module – "SL CLOSED" terminal

## 2.3 BUS connection


All of the bus models are connected with a bus line. The specification of the cable that is used must adhere to the LIYCY 2x2x0.5 type. A maximum cable length of 200 m must be observed. The cable length can be extended using the Fröling bus repeater.

The bus modules must be connected in series; although no specific sequence of the module types and addresses is specified. A star/stub cable is not permitted.

As the control units are supplied with voltage in addition to transferring data, problems caused by voltage drops can occur depending on the number of modules and existing cable lengths.

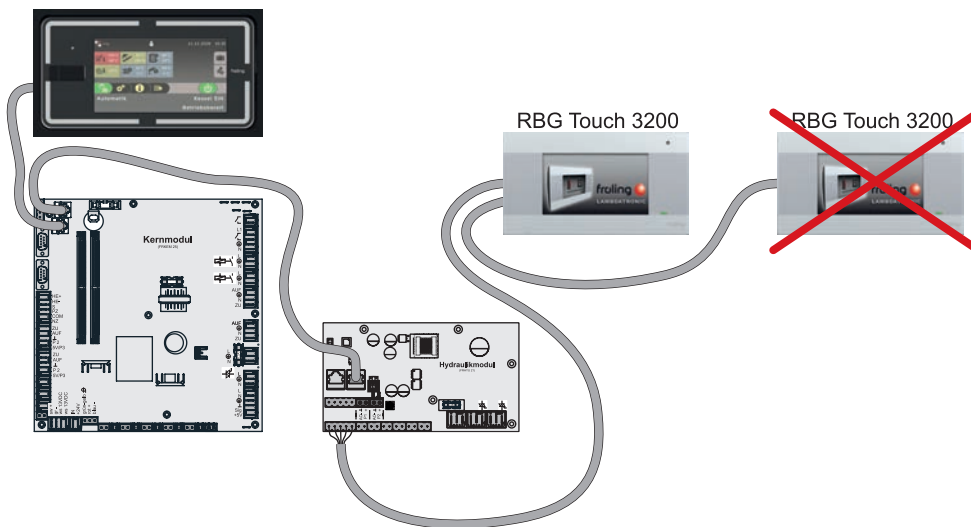


A voltage supply unit must be used for every touch room console (heating circuit module, hydraulic module).

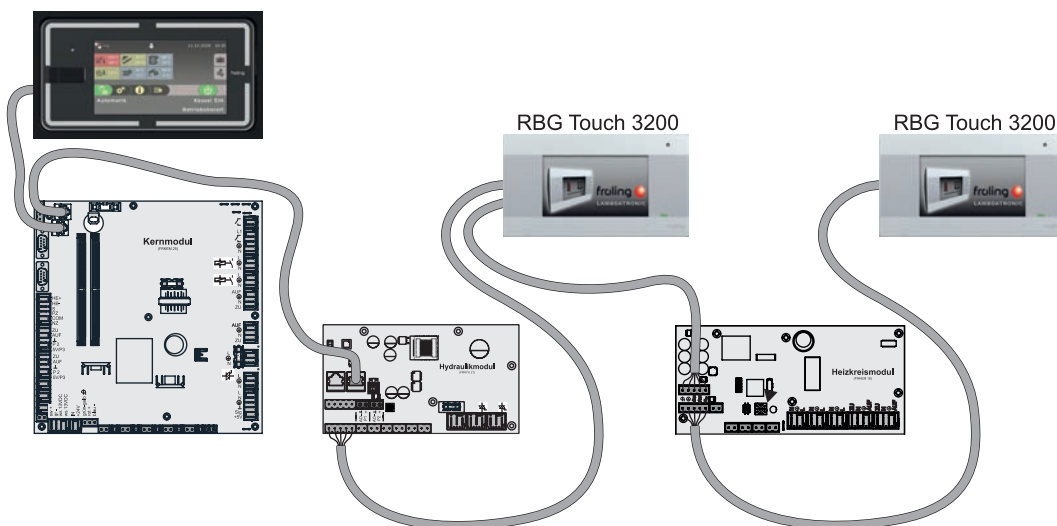

### 2.3.1 Connecting the bus cable


For the bus connections between the individual modules, cable type **LIYCY paired 2x2x0.5** should be used. The connection to the 5-pin plugs should be carried out according to the following diagram:

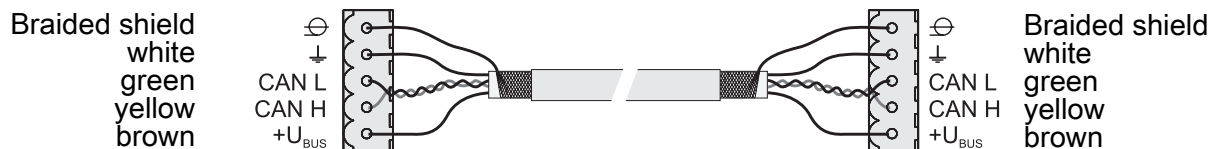

### 2.3.2 Setting end jumpers

**NOTICE!** To ensure smooth running of the bus system, the jumper must be set on the first and last module.

When using a bus repeater, the two galvanically separated sub-networks must be considered separately. The jumpers for each network must be set on the first and last module.

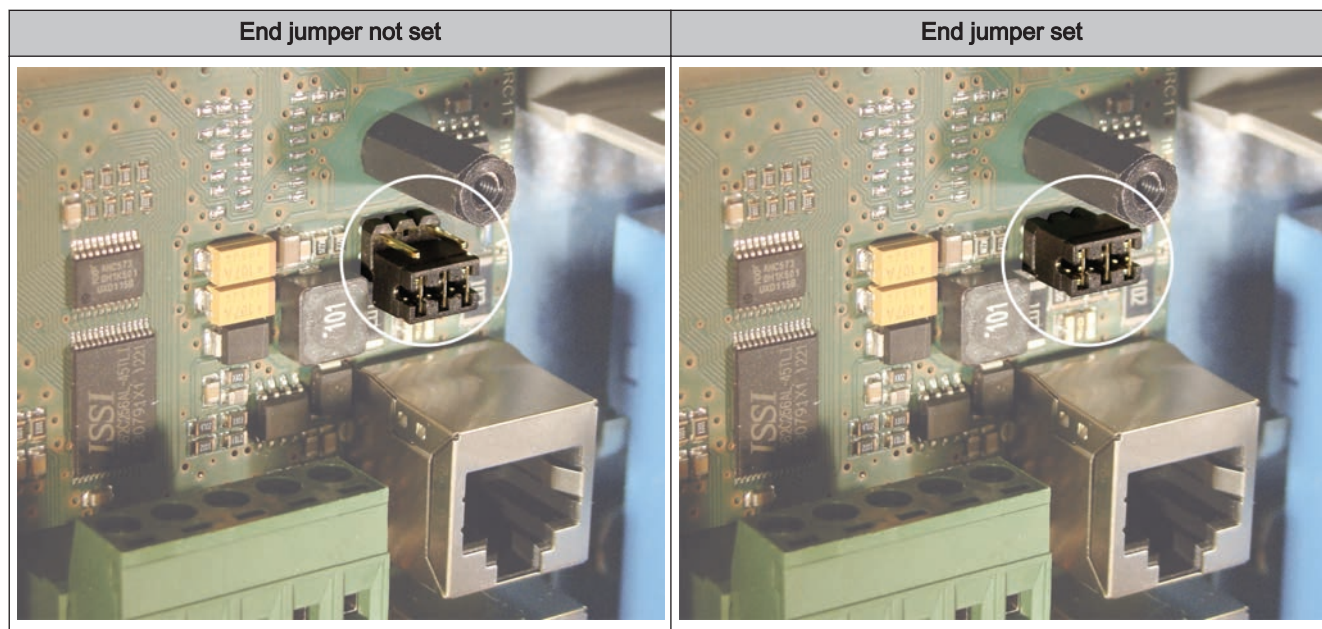


If the contacts at the base of the end jumper are not bridged (image left), it is referred to as "not set". In this case there is no bus termination. If the contacts are closed (image right), the end jumper is set and the bus connection is terminated.



### 2.3.3 Setting the module address

The necessary order for hydraulic modules and heating circuit modules is set with the module addresses. The first board of a module type should always have the address 0, so that the standard hydraulic systems set do not have to be subsequently configured. For further module types rising module addresses (address 1 - 7) are set.

**Important! Only set the module address when the device is disconnected from the power supply!**

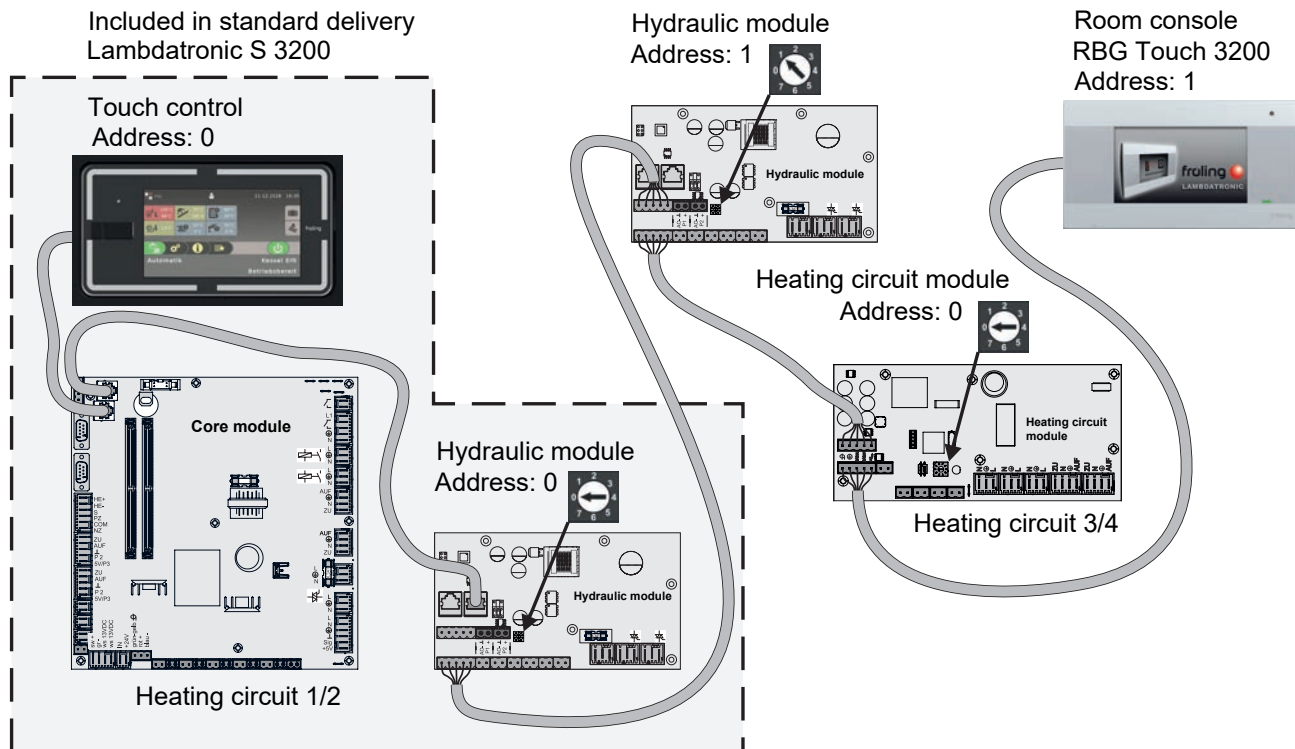


Module address set	Heating circuit module	Hydraulic module	
	Heating circuit	Sensors	Pump
0	03 – 04	0.1 – 0.6	0.1 – 0.2
1	05 – 06	1.1 – 1.6	1.1 – 1.2
2	07 – 08	2.1 – 2.6	2.1 – 2.2
3	09 – 10	3.1 – 3.6	3.1 – 3.2
4	11 – 12	4.1 – 4.6	4.1 – 4.2
5	13 – 14	5.1 – 5.6	5.1 – 5.2
6	15 – 16	6.1 – 6.6	6.1 – 6.2
7	17 – 18	7.1 – 7.6	7.1 – 7.2

### 2.3.4 Potential equalisation / potential separation

There can be potential shifts between buildings. In this case, equalising currents flow via the bus connection shield which can damage the modules.


To prevent this, buildings must be connected using a potential equalisation conductor.



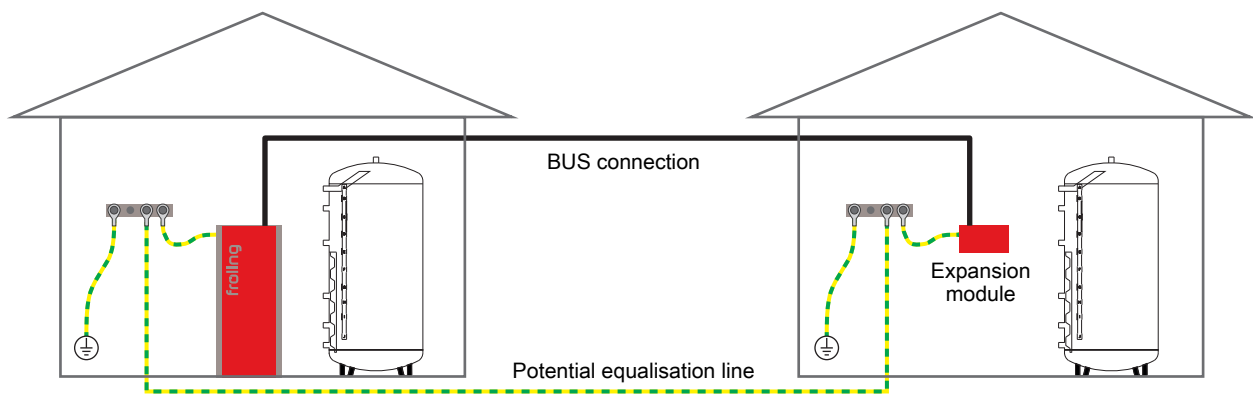

**NOTICE!** The dimensions of the equalization line must be installed by a specialist in accordance with regional regulations.



Instead of the potential equalisation, a Fröling bus repeater can be used in the bus connection line to the next building. The potential separation (galvanic isolation) allows the bus network to be split into two separate sub-networks.

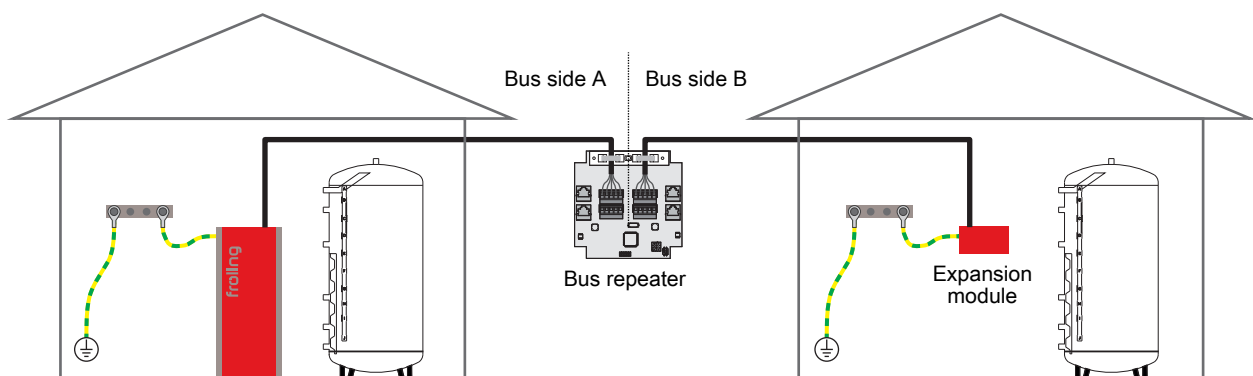



## 2.4 Connection information according to pump types

Either a 2-pin, 3-pin, or 4-pin control cable is used for the connection depending on the pump type. Please follow the connection instructions below for the wiring depending on the pump type used:



### Pump type with 2-pin control cable

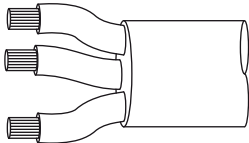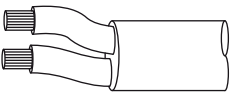Power supply	2-pin control cable
(brown) L (blue) N (yellow/green) PE 	(blue) ⊥ (brown) + 
Wire the power supply to the pump outlet on the board	Connect the control cable to the PDM output on the board, making sure that the polarity is correct: - blue wire to earth - brown wire to plus

### Pump type with 3-pin control cable

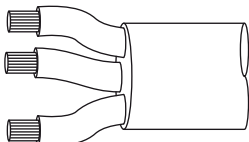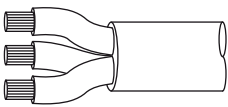Power supply	3-pin control cable
(brown) L (blue) N (yellow/green) PE 	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <b>PWM</b>   <b>not used</b> </div> <div>           (blue) ⊥            (brown) +            (black)            </div> </div>
Wire the power supply to the pump outlet on the board	Connect the control cable to the PDM output on the board, making sure that the polarity is correct: - blue wire to earth - brown wire to plus Do not use the black wire and insulate if necessary

### Pump type with 4-pin control cable

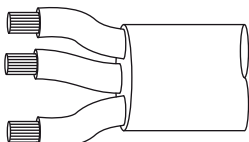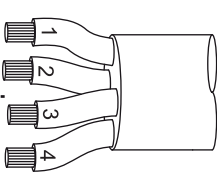Power supply	4-pin control cable
(brown) L (blue) N (yellow/green) PE 	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <b>PWM</b>   <b>not used</b> </div> <div>           (brown) ⊥            (white) +            (blue)            (black)            </div> </div>
Wire the power supply to the pump outlet on the board	Connect the control cable to the PDM output on the board, making sure that the polarity is correct: - brown wire to earth - white wire to plus Do not use the other two wires (blue, black) and insulate

## 3 Initial start-up with settings wizards

### 3.1 Before switching on for the first time

#### NOTICE

You should have the initial startup carried out by the authorised heating engineer from Froling customer services.

#### 3.1.1 Controller check

- ☐ Check boards for foreign bodies (pieces of wire, washers, screws ...)
- ☐ Carry out a wiring check:  
Check for loose, uninsulated wires, which could cause a short-circuit
- ☐ Check plug configuration of pumps, mixing valves and other units, which have NOT been prepared by Froling
- ☐ Check the connection of the BUS cable for short-circuits
- ☐ Check the specified addresses and terminal jumpers on the individual modules (heating circuit modules, hydraulic modules, displays...)

#### 3.1.2 Check on the connected units

- ☐ Check that all units that are used are connected correctly
- ☐ Carry out wiring check:  
Check for loose or uninsulated wires in the terminal boxes of the pumps, mixing valve and switch valve, which could cause a short-circuit

#### 3.1.3 System check










- ☐ Check that the main fuse for the boiler has a sufficient rated amperage

⇒ See "Mains connection" [page 8]

## 3.2 General information about the settings wizard

A wide variety of setting wizards are available to start-up the boiler system. A small selection of these can be found on the “Customer” operating level in the “Quick menu”; the rest are only on the “Service” operating level. The settings wizards can be used to set various sections of the boiler system (boiler, lambda probe, hydraulic system, etc.) with guided queries of the controller.

The following settings wizards are available for specific systems. Because they are interdependent, the sequence is automatically determined by the controller.

Icon	Designation
	<b>Switching on for the first time</b> Queries are made regarding language, facility number, date and time
	<b>Boiler</b> Setting for boiler type, boiler output, fuel, return temperature control and boiler-specific options (ignition, filter, etc.)
	<b>Lambda probe</b> Selection and calibration of the type of sensor used
	<b>Feed system</b> Selection of the existing discharge system (only for boilers with automatic loading)
	<b>Hydraulic system</b> Selection of the hydraulic system (hydraulic system 1, 2, 3, etc.)
	<b>Additional components</b> Selection and activation of the existing load and control components (heating circuits, DHW tank, solar, difference controller, etc.)
	<b>Heating up</b> Initial filling of the pellet container for pellet and dual fuel boilers; filling of the discharge screw and defining the loading times for the start process for wood chip boilers
	<b>Connect</b> Setting parameters required for the boiler to use the “froeling-connect.com” online control (IP address, display password, etc.)
	<b>Heating up program</b> Activation and selection of a heating up program.

### 3.3 Switching on for the first time

Once you have connected the device to the power supply and switched on the main switch, the display begins with a query regarding the basic settings of the system (language, production number of the boiler system, date, and time). Then the basic screen of the touch display is shown.


1: Selection of the controller language




2: Setting the production number (see identification plate)



3: Setting the date and time

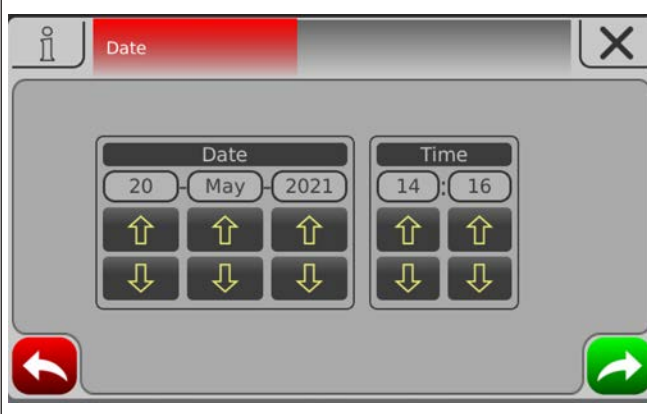


4: Display of the basic screen

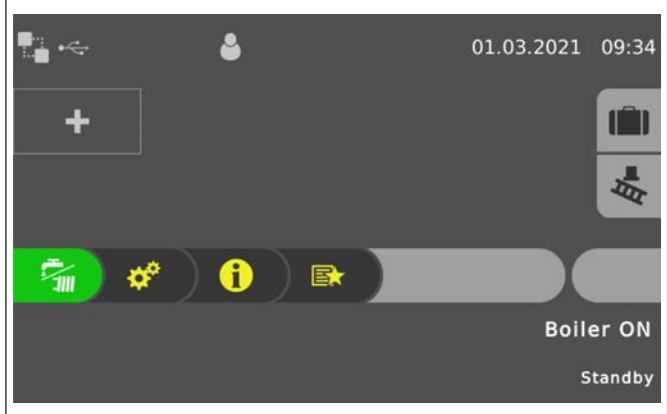


### 3.4 Starting the setting wizard


1: Tap the icon to change the user level

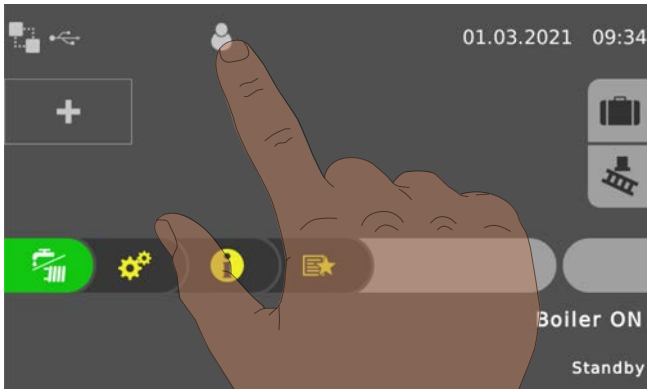

2: Type in the service code and confirm

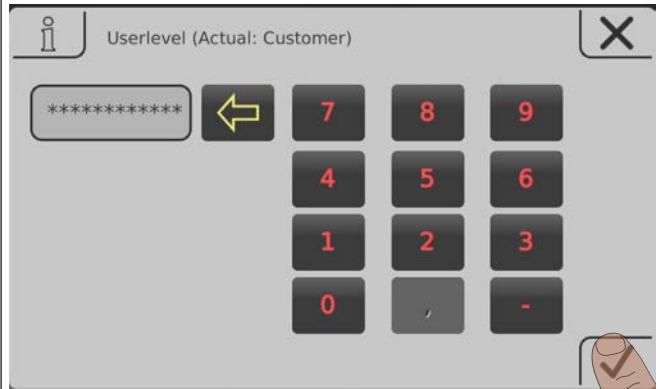

3: Tap the icon of the settings wizard

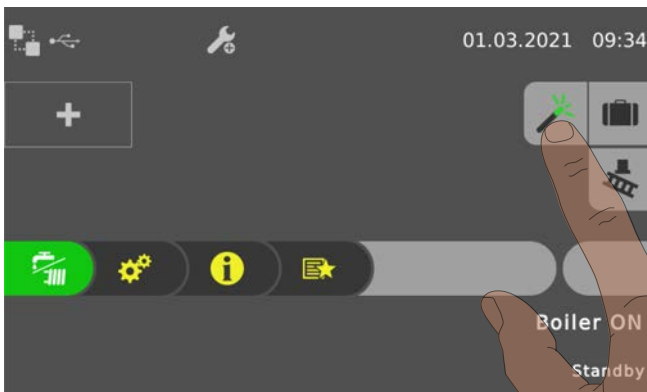


4: Tap the "Boiler" setting wizard




5: The settings wizard loads



6: Read the information text and continue with "YES" to start

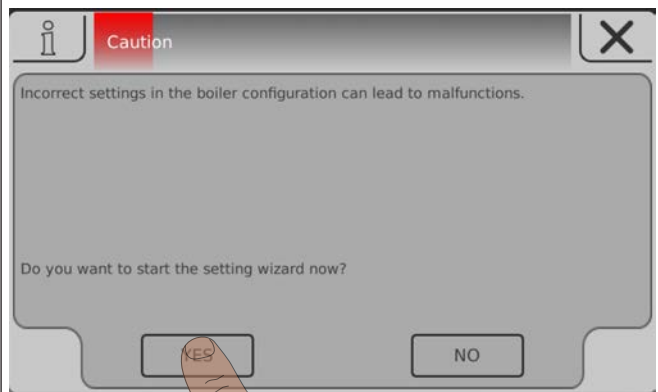

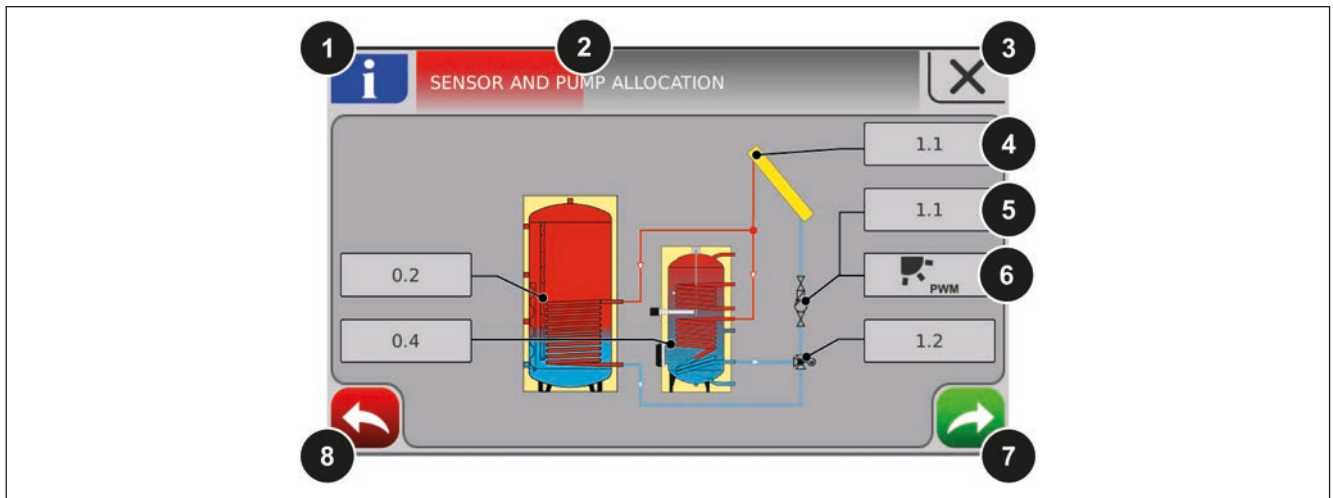
*Navigation as well as sensor and pump settings*

Number	Description
1	If the Info button has a blue background, more information is available for this overview page.
2	Progress bar for the respective settings wizards
3	Cancel setting wizard
4	Setting the address to which the respective sensor was connected
5	Setting the address to which the respective pump was connected
6	Defining the control signal of the respective pump. The following options are available depending on the selected menu:
	Pump without control line
	HE pump without control line
	Field pump / PDM
	Solar pump / PDM
	Field pump PDM + valve
	Solar pump PDM + valve
	Field pump / 0 - 10 V
	Solar pump / 0 – 10 V
	Field pump 0-10 V + valve
	Solar pump 0-10 V + valve
	Switch valve
	⇒ See "Activation options of pump outlets" [page 105]
7	Continue to the next step
8	Go back one step

## 4 Parameters overview

### 4.1 Heating

#### 4.1.1 Heating - Status

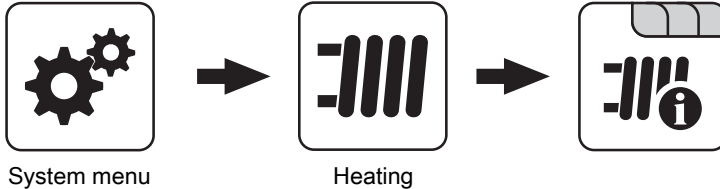

##### **Heating circuit mode**

Display and setting the heating circuit mode:



**Auto:**  
Automatic: heating phases according to the set heating times



**Extra heating:**  
The heating circuit is regulated to the set room temperature with no time limitation. To cancel this function, activate another mode/function



**Setback:**  
Setback mode; the current or next heating phase is ignored



**Continuous setback mode:**  
Heating circuit remains in setback mode until another mode is activated



**Party:**  
Party mode; the current or next setback phase is ignored



**OFF:**  
Switched off; heating circuit deactivated, only frost protection!

##### **Actual flow temperature**

Display of the current flow temperature.

##### **Flow temperature setpoint**

Display of the calculated flow temperature setpoint.

##### **Room temperature**

**Prerequisite:** Heating circuit used in conjunction with remote control


Display of the current room temperature.

##### **Outside air temperature**

Display of the current outside air temperature.



## 4.1.2 Heating – Temperatures

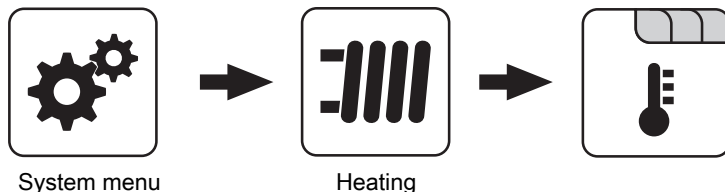**Desired room temperature during heating mode**

**Prerequisite:** Heating circuit used in conjunction with remote control

Room temperature which is regulated during the set heating times.

**Desired room temperature during setback mode**

**Prerequisite:** Heating circuit used in conjunction with remote control


Room temperature which is regulated outside of the set heating times.

**Flow temperature SP at outside air temperature of +10°C**

First setting point for definition of heating curve.

**Flow temperature SP at outside air temperature of -10°C**

Second setting point for definition of heating curve.

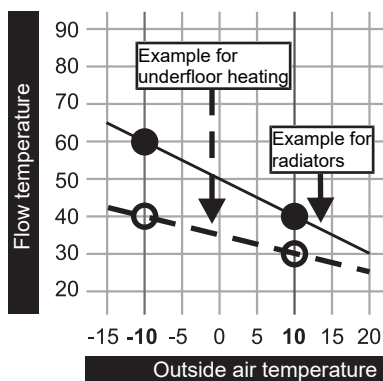**Controller gain room temperature Kp-Rm**

**Prerequisite:** Heating circuit used in conjunction with remote control

Influencing factor of room temperature on the flow temperature of the heating circuit. If there is a deviation in the room temperature of +/- 1°C, the set value of the flow temperature is corrected by this value. (Only in conjunction with remote control)

Recommended values:

- underfloor heating: 2-3
- Radiators (new build): 4-5
- Radiators (old build): 6-7

**NOTICE!** Observe external influences on the remote control!

**Reduction of flow temperature in setback mode**

The flow temperature is reduced by this value during setback mode.

**External temperature, at which heating circuit pump switches off in heating mode**

If the outside air temperature exceeds this value during heating, the heating circuit pumps and mixing valve are deactivated.

**External temperature, at which heating circuit pump switches off in setback mode**

If the outside air temperature falls below this value in setback mode, the heating circuit pumps and mixing valve are activated.

**Maximum heating circuit flow temp.**

Maximum temperature for limiting outfeed temperature at which the heating circuit is supplied.

**Maximum DHW tank flow temp.**

If DHW tank 1 is supplied directly from heating circuit 1, you can limit the maximum flow temperature for the duration of DHW tank loading.

**Frost protection temperature**

If the room temperature or the flow temperature is lower than the set value, the heating circuit pump will be switched on and the heating circuit mixer keeps to the maximum heating circuit flow temperature that is set.


**From which temperature at storage tank top should the overheating protection be activated?**

If the temperature at top storage tank exceeds the set value, the heating circuit is activated regardless of mode (boiler, remote control) and set heating times. The flow temperature is controlled to the value set in the parameter "Flow temperature SP at outside air temperature of -10°C". The function will remain active until the value falls below 2°C.


**Recommendation:** The overheating protection should be assigned to a high temperature heating circuit (e.g. radiators).

**Deviation of room temperature sensor**

If a deviation of the room temperature is determined from the evaluated value to the displayed value, the evaluation of the room temperature sensor can be adjusted with this parameter. The temperature measured by the sensor is increased (positive value) or reduced (negative value) by the pre-set value.

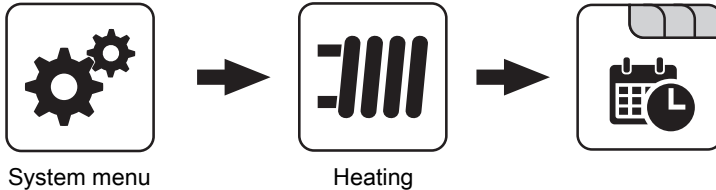**4.1.3 Heating - Times**

⇒ See "Setting times" [page 115]

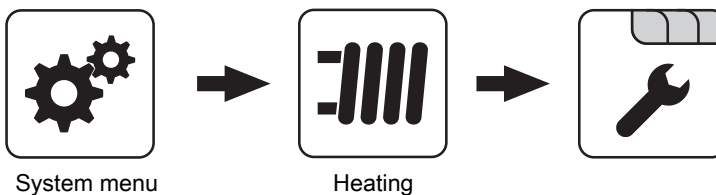**4.1.4 Heating - Service****Heating circuit pump**

Used for testing the pump output:

- **A 0:** Automatic, Off; **A 1:** Automatic, On
- **1:** Manual, On
- **0:** Manual, Off

**Heating circuit mixer OPEN**

Used for testing the mixing valve output:

- **A 0:** Automatic, Off; **A 1:** Automatic, On
- **1:** Manual, On
- **0:** Manual, Off

**Heating circuit mixer CLOSED**

Used for testing the mixing valve output:

- **A 0:** Automatic, Off; **A 1:** Automatic, On
- **1:** Manual, On
- **0:** Manual, Off

**Mixer runtime**

Here you can set the mixer runtime of the mixer in use.

**NOTICE!** To avoid mixer vibration, do not set value < 150s!

**Switch off heating circuit pump when outfeed setpoint is lower than**

**Prerequisite:** Heating circuit is operated without remote control

If a flow temperature setpoint is calculated below the value set, the heating circuit pump switches off and the mixing valve closes.

**Should this heating circuit heat when there is DHW tank priority?**

- **NO:** During DHW tank loading this heating circuit is deactivated.
- **YES:** Despite active DHW tank priority, this heating circuit is supplied with heat during DHW tank loading.

**From which buffer tank or distributor is the heating circuit supplied (0 = boiler)**

**Prerequisite:** Parameter can only be used in conjunction with multiple house systems (variants)

This parameter defines the allocation of the heat source for this heating circuit.

- **0** = boiler
- **1** = buffer tank 01, ...

*High temperature requirement because of DHW tank loading*

**IMPORTANT!** Parameter only available for heating circuit 1 and 2!

**Set Pellet as the unit model for “DHW tank 1” in the case of pellet boiler PE1!**

- **No DHW tank:** the heating circuit is operated according to the selected heating curve
- **DHW tank 1:** only DHW tank 1 is supplied via the heating circuit
- **DHW tanks 2-8:** all DHW tanks apart from DHW tank 1 are supplied via the heating circuit
- **All DHW tanks:** all DHW tanks are supplied via the heating circuit

*High temperature requirement because of DHW tank loading*

The DHW tank can be loaded via the heating circuit. If there is a requirement from the DHW tank and the criteria for DHW tank loading have been met, the switch valve immediately clears the way for DHW tank loading. The heating circuit pump starts running as soon as the “Load if temperature difference between boiler and DHW tank is” criterion is reached. Once DHW tank loading is complete, the heating circuit pump will stop, the switch valve will remain active for a specified period of time and the heating circuit mixer will close. If time has run out, the heating circuit will go back to being supplied on a weather-compensated basis.


#### 4.1.5 Heating - Heating up program



System menu



Heating

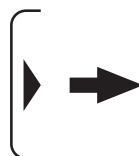Heating up program  
Service*Heating up program active*

- **NO:** Heating up program deactivated, all heating circuits are operated according to the selected heating times.
- **YES:** The 30-day heating up program that has been set starts. After the 30 days, the heating circuit that has been selected operates based on the set heating times again.
- The heating times of the selected heating circuit, as well as the boiler/buffer tank loading times are automatically set to 0:00-24:00 and the outside air temperature heating limit is ignored.
- When using a firewood boiler, a corresponding heat supply must be ensured.
- If the actual flow temperature setpoint required cannot be reached or maintained (e.g. boiler output, ...), then no warning is displayed!
- In the event of a power failure, the program continues from the point at which it was interrupted.

If the current room temperature falls below the set frost protection temperature setpoint, this influences the set flow temperature setpoint of the heating up program.

**NOTE:** Only in conjunction with remote control!

*Current day of the heating up program*

Shows the current day of the heating up program that is running. By adjusting this parameter, you can jump forward or return to a specific day of the program.

*Which heating up program is used*

There are set options for the progression of the flow temperature in heating up programs 1 – 6. With heating up program 7 the flow temperature can be selected freely over the entire 30 days.


Heating up program 8 allows you to pre-define the progression of the flow temperature for each individual day.

*Outfeed setpoint for all days in program 7*


If heating up program 7 is active, the selected heating circuit is adjusted to the specified flow temperature.

### Heating up programs


Heating up program 1:

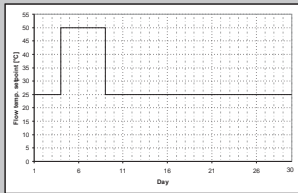


Heating up program 2:

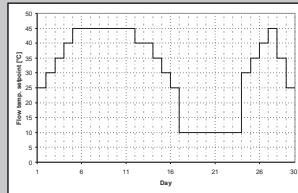


Heating up program 5:

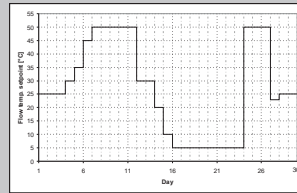


Heating up program 6:

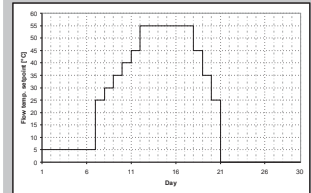


Heating up program 3:

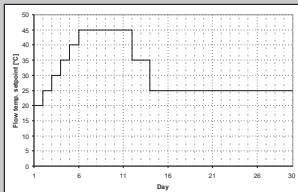

Heating up program 4:

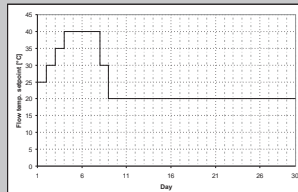

Heating up program 7:

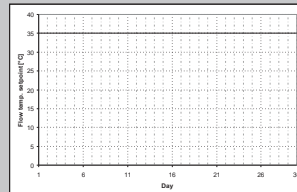

The heating up programs listed are non-binding recommendations. If the heating up program is to be used for floor screed drying, you must consult the manufacturer of the floor finish and/or the installer!

### Configure program 8



Configure program 8

Heating up program  
Service

### Outfeed temperature setpoint on day 1 ... 30

If "heating up program 8" is selected, the flow temperature setpoint can be preset for each day using this setting.

### Heating circuits used



Heating circuits used

Heating up program  
Service

### Using heating circuit 01 ... 18

The number of heating circuits used depends on the system configuration. If only 2 heating circuits are installed, then only 2 heating circuits will be available for selection.

The heating up program selected will be used for all heating circuits!


## 4.1.6 Heating - General settings



System menu



Heating

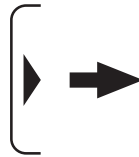General settings  
service**Correction value for external sensor**

If a deviation of the outside temperature is determined from the evaluated value to the displayed value, the evaluation of the outside temperature sensor can be adjusted with this parameter. The temperature measured by the sensor is increased (positive value) or reduced (negative value) by the pre-set value.

**Heating circuit module to which the external sensor is connected (0 = core module)**

If the outside temperature sensor is not connected to the core module, the address of the relevant heating circuit module +1 must be set here (sensor 1 on relevant module).


**Using room sensor inputs for room thermostat**

**NOTICE! This parameter influences all sensor connections to which an analogue room temperature sensor can be connected!**

- **NO:** At the sensor connector of the room sensor, a room sensor must be connected to control the room temperature.
- **YES:** At the sensor connector of the room sensor, room thermostats can be connected to control the room temperature.
- Contact of room thermostat open: Heating circuit pump deactivated, mixing valve is closed
- Contact of room thermostat closed: Heating circuit pump and mixer control active

## 4.2 Water

### 4.2.1 Water - Status

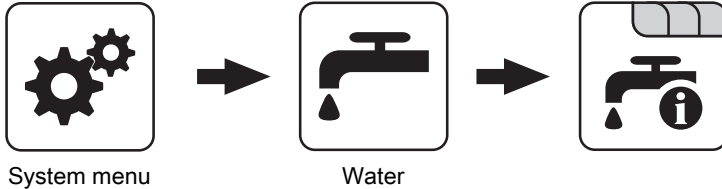

#### DHW tank top temperature

Current temperature of the DHW tank. If the time window for DHW tank loading is reached and the temperature falls below the value set under parameter “Reload if DHW tank temperature is below”, the DHW tank will be loaded. The DHW tank is loaded either until the time window has elapsed or the temperature set under “Desired DHW tank temperature” has been reached.


#### DHW tank bottom temperature

**Prerequisite:** Solar panel system is regulated by Froling!  
Current temperature in the area of the reference sensor of the solar panel system.

#### DHW tank pump control

Specifies the speed of the DHW tank pump as a percentage of maximum speed.

### 4.2.2 Water - Temperatures

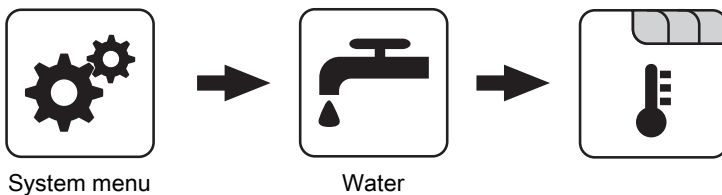

#### Set DHW temperature

When this DHW temperature is reached, DHW tank loading is stopped.

#### Reload if DHW tank temperature is below

If the DHW tank temperature falls below the value set here, the time window is active and the loading source (boiler or buffer tank) indicates the set loading increase, and the DHW tank loading is started.

#### Load if temperature difference between storage tank and DHW tank is

If the top storage tank temperature is above the current DHW tank temperature by this value and the time window is active, DHW tank loading starts (only for systems with a storage tank).

#### Load if temperature difference between boiler and DHW tank is

If the boiler temperature is above the current DHW tank temperature by this value and the time window is active, DHW tank loading starts (only for systems without a storage tank).


#### Setpoint for temperature difference between boiler and DHW tank

Adjust the boiler temperature setpoint to reach the desired DHW tank temperature.

Boiler temperature setpoint = Set DHW temperature + difference


If the current boiler temperature setpoint calculated is higher than the result from the above calculation, the boiler temperature setpoint is maintained (only for systems without storage tank).

### 4.2.3 Water - Times

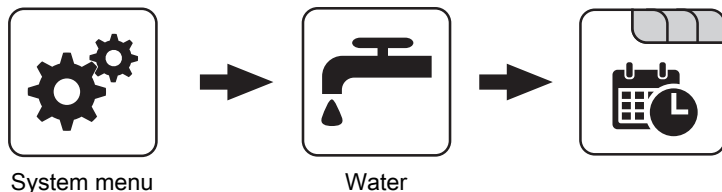

⇒ See "Setting times" [page 115]

### 4.2.4 Water - Service

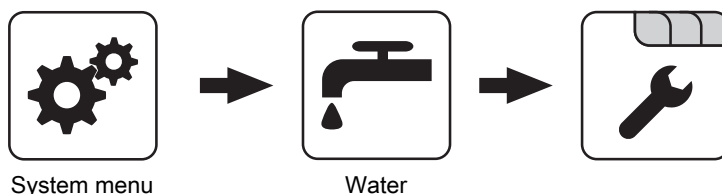

#### Residual heat use

**Prerequisite:** Hydraulic system 0 and return temperature control with mixing valve

- **YES:** Diverts the residual heat to the DHW tank. The "Minimum boiler temperature to release all pumps" parameter is ignored. The pump is set to minimum speed until the boiler temperature is lower than the DHW tank temperature + 3°C.

#### Only load DHW tank once a day

- **NO:** A DHW loading takes place always when the DHW tank temperature falls below the value, which is set under "Reload if DHW tank temperature is below", and the time window is active and the heat source (boiler or buffer tank) indicates sufficient temperature.
- **YES:** If the DHW tank has already been loaded once on the current day, a further DHW tank loading is prevented.

#### Legionella heating activated

- **NO:** A legionella heating of the DHW tank is not carried out.
- **YES:** Once a week the DHW tank is heated to the temperature set under the parameter "DHW tank temp. setpoint for legionella heating (same for all DHW tanks)".

#### When should the legionella heating be carried out?

Determines the day of the week on which the legionella heating of the domestic hot water is carried out.

#### DHW tank temp. setpoint for legionella heating (same for all DHW tanks)

If the parameter "Legionella heating activated" is set to "YES", the DHW tank is heated to the set temperature on the specified day of the week.

#### Which buffer tank or heat distributor supplies the heat to this DHW tank (0 = boiler)

**Prerequisite:** Parameter can only be used in conjunction with multiple house systems (variants)

This parameter defines the allocation of the heat source for this DHW tank.

- **0** = boiler
- **1** = buffer tank 01, ...

#### DHW tank pumps run-on ⇒ (this setting applies for all DHW tanks)

When DHW tank loading has finished, the DHW tank loading pumps continue to run for the time set here.

#### Sensor input of DHW tank 01 top sensor

Sensor input to which the DHW tank sensor is connected.

#### Sensor input of DHW tank 01 solar reference sensor

Sensor input to which the sensor for the DHW tank solar reference is connected.

#### Pump output of DHW tank 01 pump

Pump outlet to which the boiler loading pump is connected.

#### Control of DHW tank pump

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]



**Minimum DHW tank speed**

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

**Maximum DHW tank pump speed**

If you need to limit the maximum speed of the boiler loading pump for systemic reasons, you can do so by adjusting this parameter.

## 4.3 Solar

### 4.3.1 Solar - Status



System menu



Solar

**Collector temperature**

Display of the current temperature at the solar collector.

**Top storage tank solar sensor**

Display of the current temperature at the solar reference sensor in the top part of the buffer tank.

**Solar temperature buffer tank bottom**

Display of the current temperature at the solar reference sensor in the lower part of the buffer tank.

**Collector return temperature**

**Prerequisite:** Hydraulic system 12 or 13

Display of the current temperature at the collector return.

**Actual power from solar heat meter [kW]**

Display of the current output which is generated by the solar collector. The calculation of the output is only performed either when a per litre output of the collector pump has been set or an external volume pulse transmitter is used. In order to perform the calculation more precisely, the use of a collector return sensor is recommended.

**Flow through [l/h]**

**Prerequisite:** External volume pulse transmitter installed

Display of the water quantity currently being pumped through the solar collector.

**Todays yield [kWh]**

Display of the heat quantity that has been supplied by the solar panel system today.

**Daily yield 1 ... 6 days ago [kWh]**

Shows the historical progression of the solar panel system. The yields of the last 6 days are available.

**Total yield [kWh]**

Display of the heat quantity which has been supplied by the solar panel system since activation of the heat meter.

**DHW tank bottom temperature**

Current temperature in the area of the reference sensor of the solar panel system.

**Heat exchanger sec. return temperature (line to buffer tank)**

**Prerequisite:** Hydraulic system 12 or 13

Current temperature at heat exchanger flow on the secondary side.

**Collector pump runtime**

Display of the total runtime of the collector pump.

**Collector pump control**

Display of the current speed of the collector pump as a percentage of maximum speed.

**Pump between heat exchanger and buffer tank**

**Prerequisite:** Hydraulic system 12 or 13

Display of the current speed of the pump between heat exchanger and buffer tank.

**Pump between heat exchanger and DHW tank**

**Prerequisite:** Hydraulic system 12

Display of the current speed of the pump between heat exchanger and DHW tank.

**Diverter valve for top/bottom coils**

**Prerequisite:** Hydraulic system 12 or 13

Current control of the isolating valve on the solar side.

- 0% ... bottom buffer tank
- 100% ... top buffer tank



### 4.3.2 Solar - Temperatures



System menu

Solar

#### ***Boiler target temperature during solar charging***

Up to this temperature the DHW tank is heated by the solar system. If the solar panel system is equipped with an isolating valve for switching between DHW tank and buffer solar coil, then this parameter is responsible for switching between both of these solar coils.

#### ***Temp differential to start collector pump***

The collector pump activates when the collector temperature exceeds the reference temperature in the DHW tank or buffer tank by this value.

#### ***Temp difference to stop collector pump***

The collector pump switches off when the difference between the collector temperature and reference temperature in the DHW tank or buffer tank is lower than this value.

#### ***Maximum buffer tank bottom temperature during solar charging***

**Prerequisite:** Hydraulic system 12 or 13

If the sensor for the solar reference temperature in the buffer tank exceeds the specified value, the collector pump is switched off.

#### ***Minimum collector temperature***

Minimum temperature at collector which must be reached in order for the solar control to start.

#### ***Collector/pump protection from a collector temp.***

If the measured value of the solar collector sensor exceeds the set value, the solar collector must cool down by 20°C within 15 minutes, otherwise the solar collector pump stops in order to protect the pump.

#### ***Heat exchanger - buffer tank pump start delay***

**Prerequisite:** Hydraulic system 12 or 13

Delay for switching on the pump between heat exchanger and buffer tank.

#### ***Heat exchanger - buffer tank pump stop delay***

**Prerequisite:** Hydraulic system 12 or 13

Delay for switching off the pump between heat exchanger and buffer tank.

#### ***Buffer tank top solar setpoint (fast loading until this temperature)***

**Prerequisite:** Hydraulic system 12 or 13

When the upper sensor in the buffer tank reaches the specified value, the solar isolating valve switches to the lower area of the buffer tank.

#### ***Collector - buffer tank top differential***

**Prerequisite:** Hydraulic system 12 or 13


This is the overcharge for the collector pump controller for the top or bottom temperature in the buffer tank.

#### ***Top storage tank - secondary HE flow difference***

**Prerequisite:** Hydraulic system 12 or 13

This parameter indicates how much lower the temperature at the heat exchanger secondary outfeed is than the collector temperature should be. If the difference is less than the set value, the speed of the pump between heat exchanger, DHW tank and storage tank is reduced.

### 4.3.3 Solar - Times

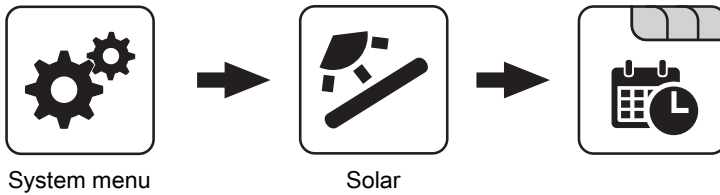


#### *The solar panel system pump is allowed to start from*

If the criteria for starting the collector pump have been reached from the set time, the collector pump starts.

#### *The solar panel system pump is allowed to run until*

Also when the criteria for starting the collector pump have been reached, the collector pump is only active up to the set time.

### 4.3.4 Solar - Service

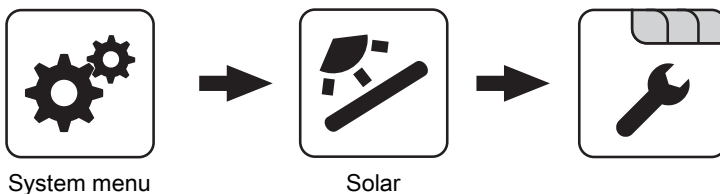

#### *Solar system*

- 1: The solar panel system supplies only the DHW tank
- 2: The solar panel system supplies only the buffer tank
- 3: The solar panel system is expanded with a switch valve and is used to supply two different heat sinks. For example: Switch from domestic hot water tank to buffer tank, or between top and bottom solar coils with the hygienic solar layered tank or modular solar layered tank with 2 solar coils)

**NOTICE!** This parameter is not displayed when hydraulic system 12 or 13 is set.

#### *Pump output of collector pump*

Pump outlet to which the collector pump is connected.

#### *Control of collector pump*

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

#### *Minimum collector pump speed*

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

#### *Maximum collector pump speed*

If you need to limit the maximum speed of the collector pump for systemic reasons, you can do so by adjusting this parameter.

#### *Collector monitoring*

- **YES:** The collector pump is switched on at regular intervals for 10 seconds. The time can be defined using the following parameter. If the collector sensor detects an increase in temperature, the pump is kept on. This function is active from 8:00 am - 7:00 pm and the threshold value of the collector temperature, from which this function is active, is dynamically adjusted.
- **NO:** The collector pump only starts when the criteria which is defined under parameter "Temp differential to start collector pump" is reached.

#### *Collector monitoring every*

If the collector pump is not active within the time window between 8:00 am – 7:00 pm, the pump is activated for 10 seconds at the end of the specified time set. If the collector sensor detects an increase in temperature, the pump is kept on. If no temperature increase on the collector sensor is detected, the collector pump switches off and the time starts to run afresh.

***For solar to store and DHW tank, the DHW tank has priority***

- **YES:** The DHW tank is loaded until the temperature set under "Set DHW temperature during solar charging" is reached. Only then does it switch to the storage tank by means of the switch valve.
- **NO:** The DHW tank is charged until the temperature difference between the sensor on the solar collector and the solar reference sensor in DHW tank is no longer sufficient. The switch valve then switches to the storage tank and supplies it for 20 minutes. Afterwards the collector pump is stopped for 20 minutes and a check is carried out to see if the temperature difference is now sufficient for DHW tank charging.

***Solar charging to which storage tank***

This parameter defines the storage tank to which the solar charging takes place.

***Solar charging to which DHW tank***

This parameter defines the DHW tank to which the solar charging takes place.

***Sensor input of solar collector sensor***

Sensor input to which the collector sensor is connected.

***Sensor input of solar reference storage tank top sensor***

**Prerequisite:** Hydraulic system 12 or 13

Sensor input to which the solar reference sensor in the top part of the buffer tank is connected.

***Sensor input of solar reference storage tank bottom sensor***

Sensor input to which the solar reference sensor in the lower part of the buffer tank is connected.

***Sensor input of secondary HE Sensor flow***

**Prerequisite:** Hydraulic system 12 or 13

Sensor input to which the sensor at heat exchanger flow on the secondary side is connected.

***Sensor input of collector return sensor***

Sensor input to which the sensor for the collector return is connected.

***Pump output of solar isolating valve***

Pump outlet to which the solar isolating valve is connected.

***Pump output of storage tank – heat exchanger pump***

**Prerequisite:** Hydraulic system 12 or 13

Pump outlet to which the pump between the solar heat exchanger and buffer tank is connected.

***Control of storage tank – heat exchanger pump***

**Prerequisite:** Hydraulic system 12 or 13

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

***Pump outlet of DHW tank – heat exchanger pump***

**Prerequisite:** Hydraulic system 12

Pump outlet to which the pump between the solar heat exchanger and DHW tank is connected.

***Control of DHW tank – heat exchanger pump***

**Prerequisite:** Hydraulic system 12

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

***Invert switch valve output***

**Prerequisite:** Solar system 3, hydraulic system 12 or 13

- **NO:** The pump outlet, to which the solar switch valve is connected, is supplied with 230V if the solar panel system is supplying energy to the DHW tank solar element or the top part of the storage tank. If there is not 230V at this output, the valve clears the way to the storage tank solar element or the lower area of the storage tank.
- **YES:** If the solar switch valve switches incorrectly, the way it is controlled can be adjusted using this parameter.

***Is a PT1000 sensor used as a solar sensor?***

- **NO:** A KTY81 sensor is used as a collector sensor
- **YES:** A PT1000 sensor is used as a collector sensor

***Collector pump control Kp value***

Control parameter for the speed control of the collector pump.

***Collector pump control Tn value***

Control parameter for the speed control of the collector pump.

***Secondary HE pumps control Kp value***

**Prerequisite:** Hydraulic system 12 or 13

Control parameter for the speed control of the pump between the solar heat exchanger and buffer tank, as well as for the pump between the solar heat exchanger and DHW tank (if installed).

***Secondary HE pumps control Tn value***

**Prerequisite:** Hydraulic system 12 or 13

Control parameter for the speed control of the pump between the solar heat exchanger and buffer tank, as well as for the pump between the solar heat exchanger and DHW tank (if installed).

**Minimum pump speed secondary HE**

**Prerequisite:** Hydraulic system 12 or 13

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

**Minimum pump speed secondary HE**

This parameter applies for the pump between the solar heat exchanger and storage tank, as well as for the pump between the solar heat exchanger and DHW tank (if installed).

**4.3.5 Solar - Heat meter**

System menu



Solar

**Collector temperature**

Display of the current temperature at the solar collector.

**Collector return temperature**

**Prerequisite:** Hydraulic system 12 or 13

Display of the current temperature at the collector return.

**Actual power from solar heat meter [kW]**

Display of the current output which is generated by the solar collector. The calculation of the output is only performed either when a per litre output of the collector pump has been set or an external volume pulse transmitter is used. In order to perform the calculation more precisely, the use of a collector return sensor is recommended.

**Flow through [l/h]**

**Prerequisite:** External volume pulse transmitter installed

Display of the water quantity currently being pumped through the solar collector.

**Today's yield [kWh]**

Display of the heat quantity that has been supplied by the solar panel system today.

**Daily yield 1 ... 6 days ago [kWh]**

Shows the historical progression of the solar panel system. The yields of the last 6 days are available.

**Total yield [kWh]**

Display of the heat quantity which has been supplied by the solar panel system since activation of the heat meter.

**Nominal flow of collector pump for heat meter [L/h]**

If no external volume pulse transmitter is used, the pump of the heat meter can be activated by entering the per litre output. The flow rate at 100% collector pump speed must be entered here.

**NOTICE!** This parameter can be ignored if using an external volume pulse transmitter.

**Litres per pulse of flow sensor**

If an external volume pulse transmitter is used, adjust this value according to the volume pulse transmitter used [0.5 – 5 pulses/L].

**Sensor input of collector return sensor**

Sensor input to which the sensor for the collector return is connected.

**Sensor input of heat meter flow temperature sensor**


Sensor input to which the sensor for the heat meter flow temperature is connected.

**Is an external flow through counter used**

- **YES:** An external volume pulse transmitter is in use.

## 4.4 Buffer tank

### 4.4.1 Buffer tank - Status

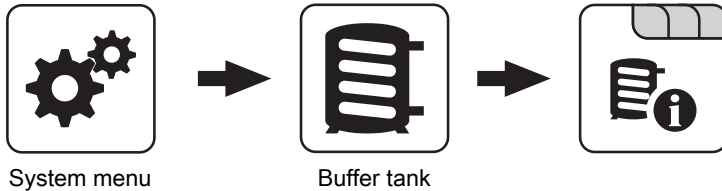

#### ***Buffer tank top temperature***

Display of the current temperature in the top part of the buffer tank.

#### ***Storage tank temperature sensor 2 ... 7***

**Prerequisite:** Multi-sensor management with 3 – 8 sensors  
Displays the current temperature at the respective sensor position at the storage tank. All of the configured sensors are used to calculate the storage tank charge status.

#### ***Buffer tank middle temperature***

**Prerequisite:** Middle buffer tank temperature sensor installed

Display of the current temperature in the mid area of the buffer tank.

#### ***Buffer tank bottom temperature***

Display of the current temperature in the lower part of the buffer tank.


#### ***Buffer tank pump control***

Display of the current speed of the buffer loading pump.

#### ***Storage tank charge***

Display of the current storage tank charge.

### 4.4.2 Buffer tank - Temperatures

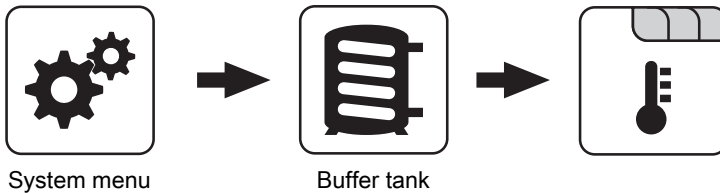

#### **Heating circuit release from following buffer tank temperature**

Temperature value which must be reached to release the heating circuit pumps in the top part of the buffer tank.

**NOTICE! This parameter applies for all available heating circuits!**

#### **Boiler start if difference between boiler setpoint and top buffer is larger**

If the difference between the upper buffer tank temperature and the boiler temperature setpoint is greater than the specified value, the boiler starts.

#### **Start of buffer tank charging from charge**

**Prerequisite:** Master boiler in the cascade or hydraulic system 4

If the buffer tank charge is below the specified value, the boiler starts.

#### **100% boiler control output when buffer charge is lower than**

**Prerequisite:** Master boiler in the cascade or hydraulic system 4

If the buffer tank charge is below the specified value, the boiler system runs at nominal load.

#### **0% boiler output if buffer charge is over**

**Prerequisite:** Master boiler in the cascade or hydraulic system 4

If the buffer tank charge is greater than the specified value, the boiler system follows the shutdown procedure.

#### **Storage tank charge is 100% at boiler setpoint parameter**

**Prerequisite:** Master boiler in the cascade or hydraulic system 4

The storage tank charge is 100% if the average temperature of the storage tank is below the specified boiler temperature setpoint by the specified value. This parameter defines the end point of the charging curve of the storage tank.

#### **Buffer tank charge is 0% at the following temperature (absolute value)**

**Prerequisite:** Master boiler in the cascade or hydraulic system 4

The buffer tank charge is 0% if the average temperature of the buffer tank reaches the specified value. This parameter defines the base point of the charging curve of the buffer tank.

#### **Buffer tank fully loaded if temperature difference between boiler and bottom buffer tank**


From this difference between the boiler temperature setpoint that has been set and the current temperature in the lower part of the buffer tank, buffer tank loading is stopped.

#### **Storage tank – storage tank difference**

**Prerequisite:** Variant 3


Difference, which must be given for loading a storage tank e.g. in an adjacent building. If this difference is not reached, the storage tank loading stops.

### 4.4.3 Buffer tank - Times

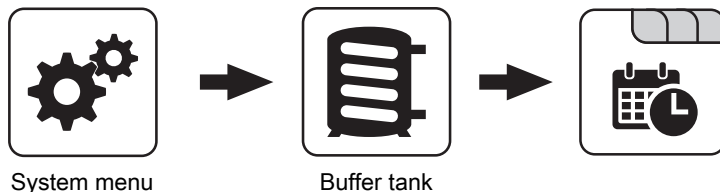

⇒ See "Setting times" [page 115]

### 4.4.4 Buffer tank - Service

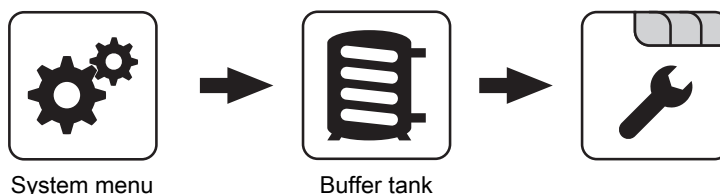

**Enable heating circuit pump 0 according to top buffer temp.**

- **NO:** Release of heating circuit pump 0 according to the boiler temperature parameter "Minimum boiler temperature to release all pumps"
- **YES:** Release of heating circuit pump 0 according to the temperature in the top part of the buffer tank parameter "Heating circuit release from following buffer tank temperature"

**In pellet mode stop buffer tank loading bec. of middle buffer tank sensor**

- **NO:** The sensor in the lower area of the buffer tank is used as the loading criterion.
- **YES:** The sensor in the mid area of the buffer tank is used as the loading criterion.

**Control buffer tank requests according to system environment**

- **NO:** The start criterion of the boiler is defined via the parameter "Boiler start if difference between boiler setpoint and top buffer is larger".
- **YES:** All heating circuits and DHW tanks that are connected to the boiler system and activated report requirements back to the controller on the basis of temperature specifications or according to the outside air temperature. These requirements are compared with the current temperature in the top buffer tank and if this temperature is too low the boiler is started. If there is no requirement from the system or if the loading criterion is fulfilled, the boiler switches off.

**According to system environment, buffer tank request shutdown delay of**

If there is no requirement from the heating circuit and DHW tank, the boiler system stops at the end of the specified time.

**NOTICE!** Parameter only if "Control buffer tank requests according to system environment" parameter is relevant.

**Sensor input of storage tank top sensor**

Sensor input to which the sensor in the top part of the buffer tank is connected.

**Sensor input of storage tank sensor 2-7**

The number of sensors displayed depends on the configuration. All of the configured sensors are used to calculate the storage tank charge status.

**Sensor input of storage tank middle sensor**

Sensor input to which the sensor in the mid area of the buffer tank is connected.

**Sensor input of storage tank bottom sensor**

Sensor input to which the sensor in the bottom part of the buffer tank is connected.

**Pump output of storage tank pump**

Pump outlet to which the buffer loading pump is connected.

**Control of storage tank pump**

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]



***Minimum storage tank pump speed***

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

***Maximum buffer tank pump speed***

If you need to limit the maximum speed of the store loading pump for systemic reasons, you can do so by adjusting this parameter.

***Minimum value for the reload quantity***

If the calculated reload quantity is less than the minimum value setting, an instruction is displayed to the user that he need not heat up/reload.

***If the boiler is active then charge all storage tanks***


**Prerequisite:** Variant 3 or variant 4

- **YES:** Starting the boiler due to a heating requirement by the storage tank in the boiler system not only loads this storage tank, but all of the storage tanks in sub-stations. This increases the runtime related to a boiler system start.



## 4.5 Boiler

### 4.5.1 Boiler - Status

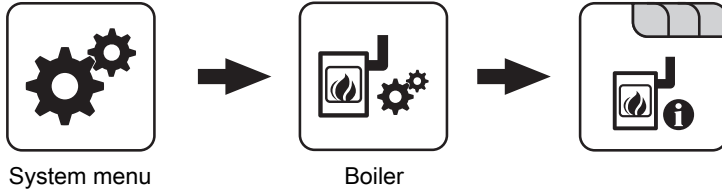

#### **Boiler temperature**

Display of the current boiler temperature.

#### **Flue gas temperature**

Display of the current flue gas temperature. If a flue gas temperature sensor is not connected, the board temperature of the core modules is displayed.

#### **Flue gas temperature after calorific value heat exchanger**

**Prerequisite:** PE1c Pellet condensing boiler

Shows the current flue gas temperature after calorific value heat exchanger.

#### **Flue gas setpoint**

Display of the calculated flue gas setpoint.

#### **Boiler control variable**

Display of the signal for the combustion controller.

#### **ID fan control**

Display of the current ID fan control.

#### **ID fan speed**

Display of the current ID fan speed.

#### **Boiler request via heating circuit or DHW tank pending**

- **0:** There is currently no demand from the boiler by the heating circuits and DHW tank. The boiler therefore does not start.
- **1:** A heating circuit or DHW tank requires heat. The start criterion must be fulfilled for a boiler start (e.g. boiler times active, boiler is not in "Boiler off" mode, etc.)

#### **Residual oxygen content**

Display of the current residual oxygen content.

#### **Air speed at suction opening**

Display of the current air speed at suction opening.

#### **Calculated boiler setpoint**

Display of the current boiler temperature setpoint depending on the specified hydraulic system.

#### **Sensor 1**


Display of the current temperature at sensor 1.

#### **Return sensor**

**Prerequisite:** Return temperature control with mixing valve or bypass pump

Display of the current temperature at the boiler return.

## 4.5.2 Boiler - Temperatures

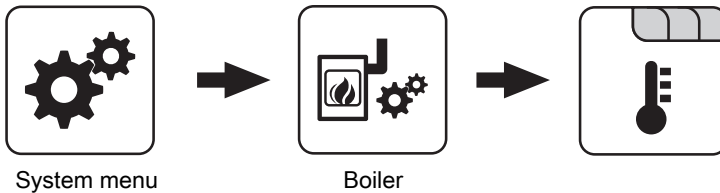

### **Boiler temperature setpoint [PE1c Pellet]**

The boiler temperature is regulated to this temperature.  
Setting range PE1c Pellet 15 – 20: 20 – 90°C

### **Boiler temperature setpoint [PE1 Pellet]**

The boiler temperature is regulated to this temperature.  
Setting range PE1 Pellet 7 – 20: 40 – 90°C

Setting range PE1 Pellet 25 – 35: 50 – 90°C

#### **Recommendation:**

- System without storage tank: 40°C/50°C
- System with storage tank: 70 °C

### **Boiler temperature setpoint [P4 Pellet]**

The boiler temperature is regulated to this temperature.  
Setting range P4 Pellet 8 – 38: 40 – 80°C

Setting range P4 Pellet 45 – 105: 40 – 90°C

#### **Recommendation:**

- System without storage tank: 40°C
- System with storage tank: 70 °C

### **Shutdown if current boiler temperature is higher than boiler setpoint +**

If the boiler temperature setpoint is exceeded by this value, the boiler follows the shutdown procedure. The boiler starts up again below the boiler temperature setpoint.

### **Always shutdown when boiler maximum setpoint is exceeded by +**

If the maximum boiler temperature setpoint is exceeded by this value, the available heating circuit pumps and DHW tank loading pumps are also activated for cooling the boiler. If the current boiler temperature falls below the boiler temperature setpoint, the boiler starts up again.

### **Minimum boiler temperature to release all pumps**

When the current boiler temperature reaches this value, the storage tank loading pump starts (hysteresis: 2°C).

**Recommendation for PE1 Pellet and P4 Pellet:** For systems with a storage tank, this value should be about 20°C below the specified boiler temperature setpoint (prevention of cold through flow!).

### **Minimum return temperature**

**Prerequisite:** Return temperature control with mixing valve  
Minimum temperature of return to boiler.

### **Enable return mixer only with active storage tank pump**

**Prerequisite:** “Variant 2 and 5” or “Variant 3”

Return mixer is controlled only when the store loading pump is active. If the pump stops, the mixer closes the total return / opens the bypass.

### **Temperature in the hi-limit stat housing at which all pumps run**

When the current temperature on the safety temperature limiter reaches this value, the buffer loading pump is activated and also the heating circuit pumps and boiler loading pumps.

### **Start emergency skimming from STL sensor temperature**


If the current temperature on the safety temperature limiter exceeds this value, the heating circuit pumps, the DHW tank loading pumps and the buffer tank pump are also activated for cooling the boiler.

### **Heating circuit overheat invariable mode**

**Prerequisite:** Variable mode activated or boiler system in the cascade


The boiler setpoint temperature in heating mode is increased by this value compared to the required flow temperature.

### 4.5.3 Boiler - Times

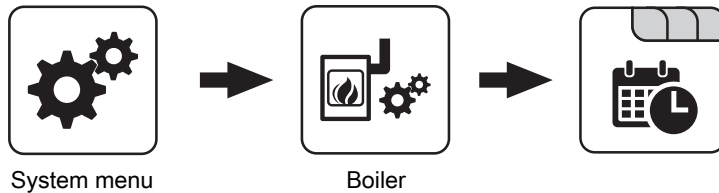

⇒ See "Setting times" [page 115]

### 4.5.4 Boiler - Service

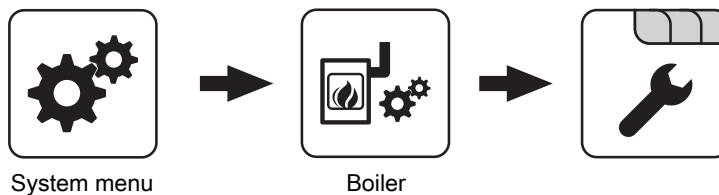

#### Variable mode activated

- **NO:** The boiler temperature is regulated to the boiler temperature setpoint that is set. When used in conjunction with a storage tank, this parameter should be set to "NO".
- **YES:** The boiler temperature is regulated according to the calculated flow value for the heating circuit/DHW tank.

#### Pump outlet for skimming

If there is no option of skimming via the heating circuits or DHW tank, a pump or a valve can be controlled via the assigned pump outlet to cool the boiler.

#### Skim pump

Shows the current control of the pump output for skimming.

#### Mixer runtime

**Prerequisite:** Return temperature control with mixing valve  
Setting the runtime of the mixer used for the return temperature control.

**Recommendation:** To reduce mixer vibration, do not set value below 150s!

#### Control boiler loading pump using pump 1

**Prerequisite:** System 0, system 3 or variant 4

- **NO:** Connection of boiler loading pump at output "HKP0" on core module
- **YES:** Connection of boiler loading pump at output "Pump 1 on core module"

#### Control of boiler loading pump

**Prerequisite:** System 0, system 3 or variant 4

- Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

#### Control of boiler loading pump in operation

**Prerequisite:** Variant 4

Variant 4 has no speed control of the boiler loading pump. If you need to limit the speed of the boiler loading pump for systemic reasons, you can do so by adjusting this parameter.

#### Function of boiler pump collective fault sig.

Defines whether and how the input of the boiler pump's collective fault message is to be interpreted.


#### Input for boiler pump collective fault signal

Preferred digital module address of boiler pump collective fault input

#### Boiler pump collect. fault sig.

Current input signal.

### 4.5.5 Boiler - General settings

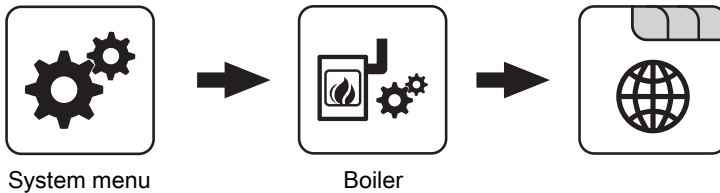

#### *Room air independent operation*

- **NO:** The boiler is operated in open flue mode.
- **YES:** The boiler is operated independently of room air.

#### *Remaining hours in heating mode till "ash box full" warning appears*

Display of the remaining heating hours until the warning "Ash box full, please empty" appears on the display.

#### *Reset the remaining heating hours until ash removal warning*

- **NO:** The service hours counter until ash removal warning continues to run.
- **YES:** The service hours counter is set to the value in menu "Pellet feed" under parameter "Heating hours until ash removal warning".

#### *Modem installed*

- **NO:** The boiler does not have a modem for data transfer installed.
- **YES:** The boiler has a modem for data transfer installed.

#### *Memory cycle of data logger*

If the boiler is equipped with a data logger the most important boiler data is stored on a SD card. This parameter specifies at what intervals the recording should be started.

#### *Interrupt cleaning mode*

- **NO:** The boiler goes through "Cleaning" mode until the end.
- **YES:** The "Cleaning" mode is interrupted and, depending on the setting, the boiler switches to "Preparation", "Standby" or "Boiler Off" mode.

#### *Output warnings through fault message relays*

- **NO:** When there is an "error" or "alarm" the common fault relay closes.
- **YES:** In addition to an "error" or "alarm", the common fault relay closes when a "warning" is present on the boiler.

#### *Which temperature scale should be used*

- **Celsius (°C):** Displayed temperature values and settings are shown in °C.
- **Fahrenheit (°F):** Displayed temperature values and settings are shown in °F.

#### *Always log data in °C*

- **YES:** In conjunction with a data logger, all temperature values are saved in °C.
- **NO:** In conjunction with a data logger, all temperature values are saved in °F.

#### *Send a line break when ASCII data output on COM2*

- **NO:** When a new data set is issued it will be added to the previous one.
- **YES:** A line break for better visualisation is sent between the individual data sets.

#### *Reset counter since last maintenance*

- **NO:** The service hours counter since last maintenance continues to run.
- **YES:** The service hours counter since last maintenance is set to "0".

#### *Source for ext. power demand (0 - off, 1 - 0-10V, 2 - Modbus)*

Defines whether the boiler is controlled via an external power demand. If "1 - 0-10V" or "2 - Modbus" is selected as the source, the boiler release and output can be controlled via an adjustable input at the analogue module (0-10V) or via the modbus.

⇒ See "External power demand" [page 28]

#### *Invert ext. power demand via analogue input*

Designed to invert the input signal (0V = 0% ⇒ 0V = 100%).

#### *Input external power demand*

Current input value for the external power demand.

#### *Current external power demand*

Current effective specified value for the boiler taking the minimum times into consideration.

**Adopt specified boiler values**

**YES:** The preset boiler parameters for the selected boiler type are adopted. When the process is completed the parameter changes back to "NO".

**Adopt standard settings (all values are reset)**


- **YES:** Adopting standard factory settings. This resets all parameters! Once the settings have been applied, the parameter automatically switches to "NO" and the boiler must be reset, otherwise, boiler function is no longer guaranteed.

**EEPROM reset**

- **YES:** All boiler settings and system configurations are deleted. The boiler is only functional again once it has been recommissioned by Froling customer services or authorized installer.

**Analogue module input for external power demand**

Defines the input for the external power demand with a specified power of "0-10V" (address of analogue module and input terminal, e.g. 0.3).

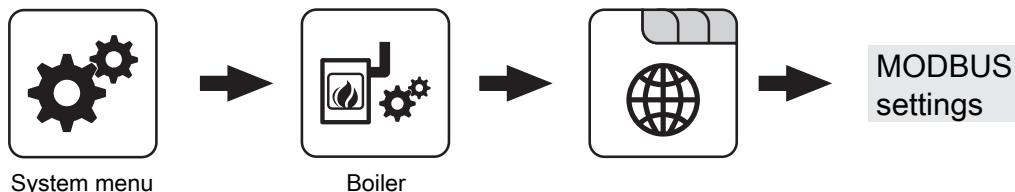**Boiler - General settings - MODBUS settings****COM 2 is used as a MODBUS interface**

- **NO:** The COM 2 interface sends the most important boiler values every second.
- **YES:** The COM 2 interface can be used to connect a MODBUS (RTU/ASCII).

**MODBUS address**

Defines the address of the boiler in the Modbus network.


**MODBUS protocol (1 – RTU / 2 – ASCII)**

Indicates which Modbus protocol is to be used for the transfer. Which protocol must be used can be found in the documentation of the Modbus system used on site.

**Use MODBUS protocol 2014?**

Indicates whether the Modbus protocol 2014 is to be used for communication. In this version, parameters can be written at the customer level. In addition to the previous version, the element addresses are newly grouped thematically.

If the parameter is set to "NO", the functionality and the element addresses remain the same as in the previous version to ensure compatibility with existing systems in the event of software updates.

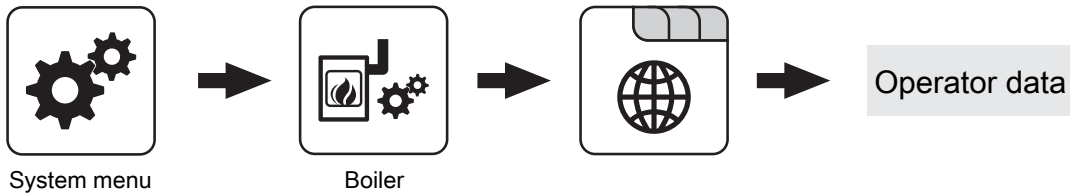**Boiler - General settings - Operator data****Production number**


For unique identification of the boiler on the froeling-connect server, the facility number listed on the identification plate must be set here.

**Boiler number**

By setting the boiler number, this is automatically transferred into the commissioning report when it is saved.

**Customer number**

By setting the customer number, this is automatically transferred into the commissioning report when it is saved.

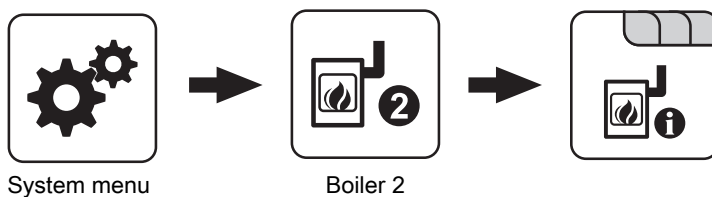**4.6 Boiler 2****4.6.1 Boiler 2 - Status****Temperature of secondary boiler**

Display of the current boiler temperature of the secondary boiler.

**Burner relay status**

Shows the current status of the burner relay:

- 0: Secondary boiler not active
- 1: Secondary boiler active

**Standby boiler pump**

**Prerequisite:** "Switch valve installed" parameter set to "NO"

Display of the current pump control for the standby boiler.

**Standby boiler switch valve**

**Prerequisite:** "Switch valve installed" parameter set to "YES"

Display of the current switch valve control of the standby boiler.

**Manual start of secondary boiler (only when ID fan is switched off)**

- **OFF:** Secondary boiler is controlled according to the program that is set
- **ON:** Secondary boiler is activated immediately

**NOTICE! Burner blockage noted.**

## 4.6.2 Boiler 2 - Temperatures



System menu

Boiler 2

**Secondary boiler start delay**

If there is a requirement from the heating circuit or DHW tank and the buffer tank or boiler has insufficient temperature, the secondary boiler starts after the specified delay time set here.

**Disable startup delay in case of fault?**

Indicates whether the startup delay is ignored in the event of a boiler fault and whether the standby boiler is activated immediately on request.

**Deactivate startup delay when boiler is switched off?**

Indicates whether the startup delay is ignored when the boiler is switched off and whether the standby boiler is activated immediately on request.

**Secondary boiler start, if buffer tank top temperature is below**

If the temperature in the top part of the buffer tank falls below the specified value, the secondary boiler is started once the set duration has elapsed.

**Start standby boiler only after storage tank top**

Standby boiler enabled after temperature decreases below minimum temperature on top storage tank. No consumers are taken into consideration.

**Secondary boiler minimum runtime**

If the secondary boiler is started, it will run for at least the length of time set here.

**No heat pump operation when outside air temperature less than**

**Prerequisite:** Heat pump as standby boiler

The heat pump stops working below the set temperature. This avoids operation with high energy consumption when the temperature outside is cold.

**Maximum outfeed temperature for heat pump operation**

**Prerequisite:** Heat pump as standby boiler

If a flow temperature higher than the set value is required, the main boiler takes over.

**Main boiler minimum runtime**

**Prerequisite:** Heat pump as standby boiler

If the main boiler is in operation, it only shuts down after the minimum runtime of the main boiler if the criteria for heat pump operation are fulfilled. This should prevent excessively short runtimes of the main boiler.

**Minimum temperature of secondary boiler**

When the secondary boiler reaches the specified temperature, the loading pump is started and switches the isolating valve.


**Temperature difference between secondary boiler and buffer tank**

Temperature difference between secondary boiler and upper temperature in layered tank to activate the loading pump of the secondary boiler.

**Oil valve shut delay**

If the current boiler temperature of the secondary boiler falls below the value that is set under "Minimum temperature of secondary boiler", the isolating valve only switches once the set duration has elapsed.

### 4.6.3 Boiler 2 - Service

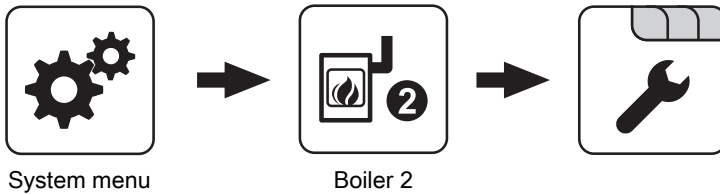

#### *Control secondary boiler variably to the target value*

- **NO:** The secondary boiler is operated with the boiler temperature that is set on the secondary boiler thermostat.
- **YES:** The boiler temperature of the secondary boiler is regulated to the target temperature specified from the heating circuit or DHW tank.

#### *Sensor input of backup boiler sensor*

Sensor input to which the sensor for the secondary boiler is connected.

#### *Pump output of secondary boiler unloading*

Pump outlet to which the loading pump of the secondary boiler or the secondary boiler switch valve is connected.

#### *Control of boiler 2 pump*

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

#### *Maximum speed of boiler 2 pump*

If you need to limit the maximum speed of the loading pump of the secondary boiler for systemic reasons, you can do so by adjusting this parameter.

#### *Invert secondary boiler isolating valve*

**YES:** If the valve switches incorrectly, the way it is controlled can be adjusted using this parameter.



#### *Burner relay*

- **A:** Standby boiler is controlled according to the program that is set.
- **1:** Standby boiler was started manually.
- **0:** Standby boiler was stopped manually.





## 4.7 Feed system

### 4.7.1 Feed system - Selection unit probes

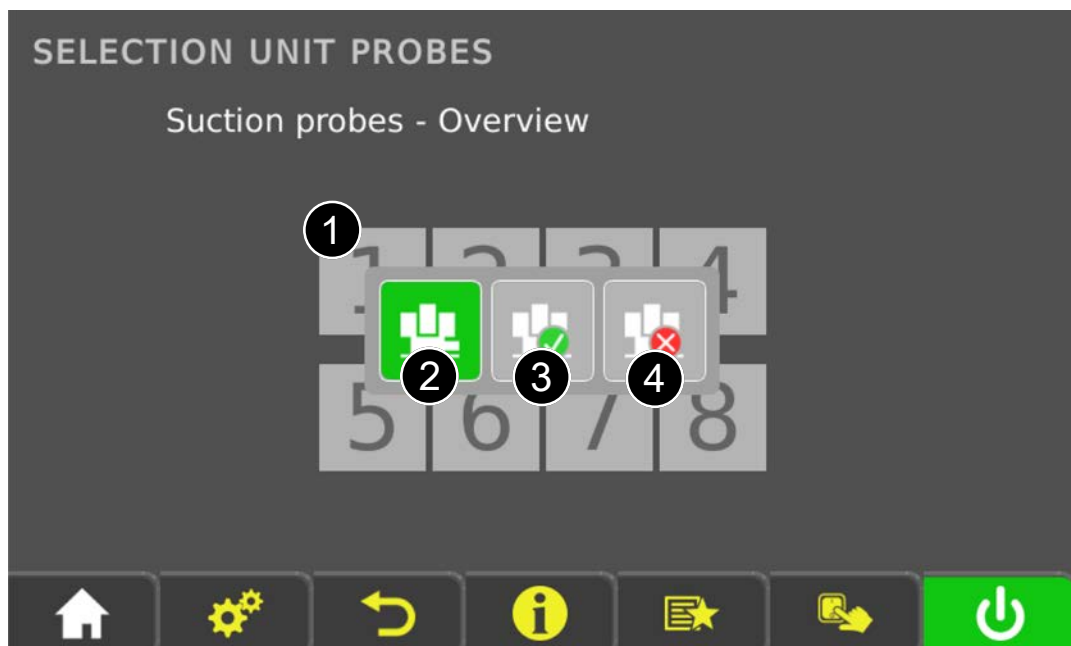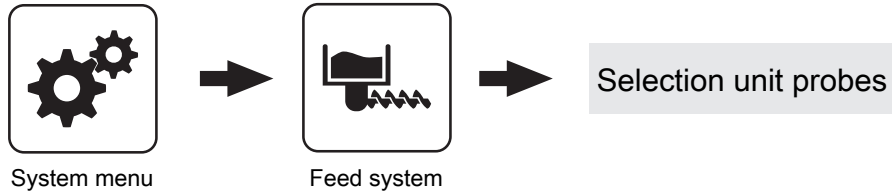


Number	Description
1	Overview of the maximum available suction probes. If the RS4 suction system is selected, only four positions are shown. Tap the respective suction point to open a window in which various functions can be called up.
2	Selected suction point should be started by the selection unit probes. The area of the suction point flashes alternately grey/green until the desired position is reached.
3	Selected suction point is available.
4	If the selected suction point is generally not in use or should not be used due to a problem (suction hose, blockage by pellets, etc.) the suction point can be locked by tapping on this area.

## 4.7.2 Feed system - 1-2-3 suction module

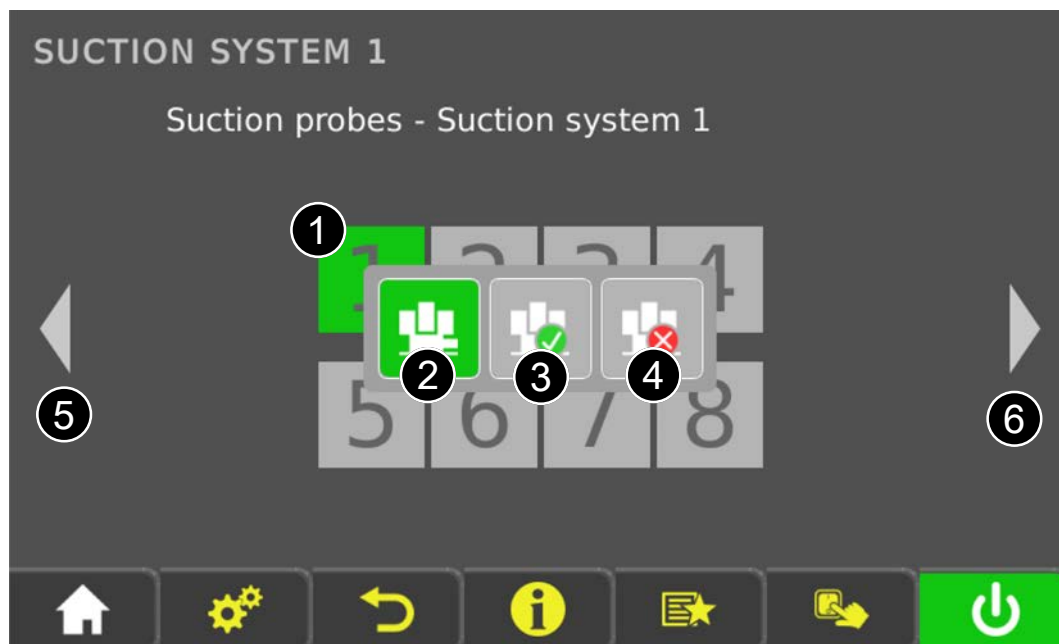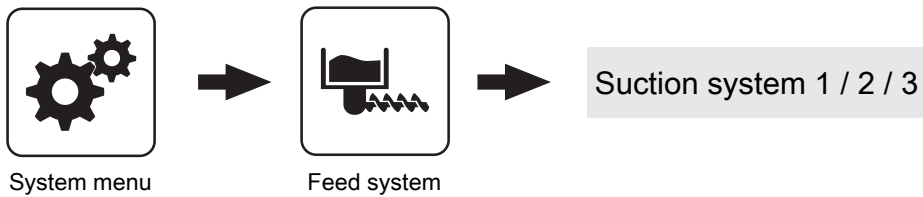

Number	Description
1	Overview of the maximum available suction probes. If the RS4 suction system is selected, only four positions are shown. Tap the respective suction point to open a window in which various functions can be called up.
2	Selected suction point should be started by the selection unit probes. The area of the suction point flashes alternately grey/green until the desired position is reached.
3	Selected suction point is available.
4	If the selected suction point is generally not in use or should not be used due to a problem (suction hose, blockage by pellets, etc.) the suction point can be locked by tapping on this area.
5, 6	If a combination of several RS4/RS8 pellet discharge systems is being used, then these buttons can be used to switch to the other suction systems.

### 4.7.3 Feed system - Times

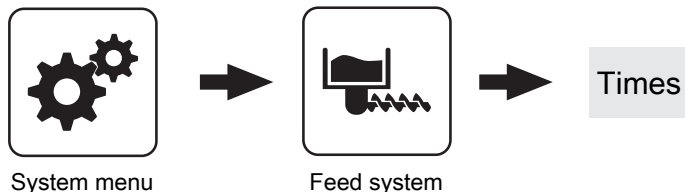


#### *Start of 1st pellet filling*

First start for a filling process. A filling process is only carried out if the fill level in the pellet container is below 85%.

#### *Start of 2nd pellet filling*

Second start for a filling process. This is likewise only carried out if the pellet container level is below 85%. If you only want one filling time, then set the second filling time to the same time as the first filling time.

### 4.7.4 Feed system - Service

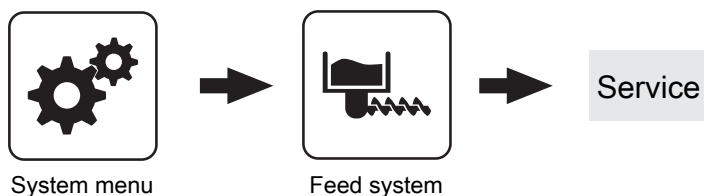

#### *Refill of cyclone from*

When set to "0%" the filling process is started according to the filling times that are set. If there is a shortage of pellets during the "Heating" status, the pellet container is filled regardless of the current time.

#### *Maximum time until switching of probe*

**Prerequisite:** Feed system, universal suction, with automatic toggle

Time period, during which the cyclone must reach a fill level of 100% from a probe. If this time is exceeded, the change-over unit automatically changes to the next probe. If all probes are started and the fill level of 100% in the cyclone is not reached, an error message appears on the screen.

#### *Probe suction reversal*

**Prerequisite:** Feed system, universal suction, with automatic toggle

Before switching to the next probe, each probe that was last used is back-flushed for the time set.

**NOTICE!** This parameter is not in use for feed system "3 probe switch"!

#### *Suction run-on*

When the fill level sensor detects fuel in the cyclone, the suction turbine remains active for the time set.

#### *Refill cyclone after buffer charging*

- **NO:** A filling process of the pellet container is carried out according to the filling times that are set.
- **YES:** If the boiler shuts down once buffer tank loading is complete, this parameter can then be used to fill the cyclone without having to wait for the next filling point.

#### *Refill during grate cleaning during heating hours*

- **NO:** A filling process of the pellet container is carried out according to the filling times that are set.
- **YES:** If the boiler cleans the grate because the number of heating hours has been reached ("Clean after how many hours heating" parameter), the pellet container is filled regardless of the time.

**Gate valve status**

Shows the status of the gate valve on the cover of the pellet container. The following displays are possible:

- **Stop:** The gate valve has reached the defined position and stopped.
- **Moving up:** The gate valve moves to a defined position where the opening for filling the container with pellets is open.
- **Closing:** The gate valve moves to a defined position where the opening to the pellet suction hose is closed. The boiler does not start until this position has been reached.
- **Clear the blockage:** If the gate valve is blocked (defined position not reached), an attempt is made to clear the blockage. The sliding valve moves for a short time in the opposite direction and tries again to reach the defined position.
- **Blocked:** Displayed if the gate valve is unable to clear the blockage despite repeated attempts. In addition, a fault message is displayed in the fault list.
- **Manual:** The gate valve is actuated in manual operation.

**Vibration motor installed**

- **YES:** The vibration motor for improving the discharge rate of the bag silo is installed.


**Vibration timing**

The default vibration interval timing is 60%:

Time basis: 100 sec. → 60 sec. on / 40 sec. pause

**4.7.5 Feed system - Consumption**

System menu

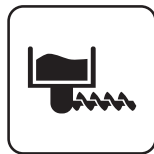

Feed system



Consumption

**Resettable t-counter**

Display of the amount of pellets used in tonnes since counting started or since the last counter reset.

**Resettable kg-counter**

Display of the amount of pellets used in kilograms since counting started or since the last counter reset. When the counter reaches 1000 kg, this value is reset to "0" and the "t-counter" is increased by one.

**Counter RESET**

- **NO:** The pellet consumption counter continues to run.
- **YES:** The "resettable t-counter" and also the "resettable kg-counter" is set to "0".

**Remaining pellet amount in store room**

Countdown from the set value in 100 kg increments. The value displayed is the reference point for the remaining amount of fuel in the storeroom.

**Minimum pellet level fuel storeroom**

If the minimum level setting in the storeroom is not reached, a warning appears on the display. When set to "0.0t" the function is deactivated and no warning appears on the display.

**Total pellet consumption**


Display of the total calculated pellet consumption. Upon start-up or after a software update to software "version 50.04 – Build 05.09" or higher, the counter is automatically activated.

**Delivered amount of pellets at 100% feed**

Values have already been predefined based on the boiler type and boiler rating. If the required amount of pellets was recalculated, this setting can be used to adjust the pellet amount for calculating pellet consumption.

## 4.8 Network pump

### 4.8.1 Network pump - Status

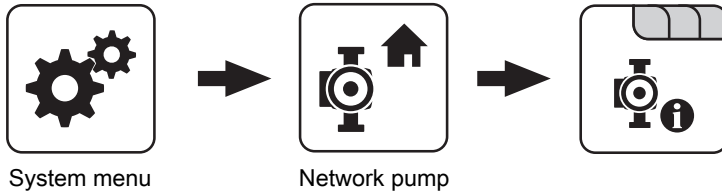

#### *Network return temperature*

Display of the current return temperature of the remote line.

#### *Network pump speed*

Specifies the current speed of the network pump.

#### *Return temperature distributor 1*

**Prerequisite:** Variant 1 and feeder pump for distributor 1 installed

Display of the current return temperature from distributor 1.

#### *Speed, distributor 1 pump*

**Prerequisite:** Variant 1 and pump for distributor 1 installed

Display of the current speed of distributor 1 pump.

#### *Return temperature distributor 2 ... 4*

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed


Display of the current return temperature from distributor 2 ...4.

#### *Speed, distributor 2 ...4 pump*

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

Display of the current speed of the distributor 2 ... 4 pump.

### 4.8.2 Network pump - Temperatures

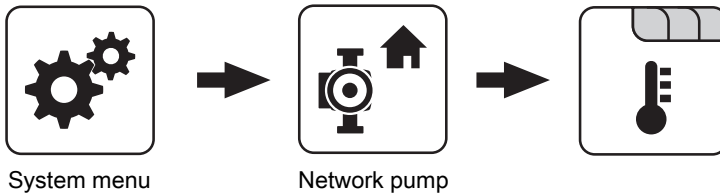

#### *Network return setpoint*

**Prerequisite:** Network pump installed

The network return setpoint is regulated to the value set here. When the network return temperature reaches the specified value, the network pumps starts up at minimum speed.

#### *Return temperature setpoint distributor 1*

**Prerequisite:** Variant 1 and pump for distributor 1 installed


The return temperature from distributor 1 is regulated to the value set here. When the return temperature from distributor 1 reaches the specified value, the pump for distributor 1 starts up at minimum speed.

#### *Return temperature setpoint distributor 2 ... 4*

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

The return temperature from distributor 2 ... 4 is regulated to the value set here. When the return temperature from distributor 2 reaches the specified value, the pump for distributor 2 ... 4 starts up at minimum speed.

### 4.8.3 Network pump - Service

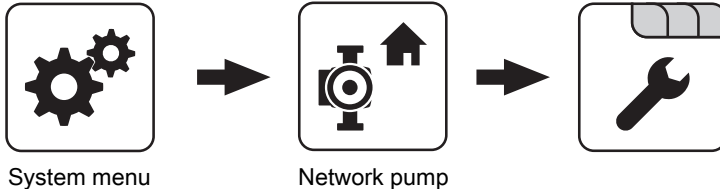

#### *Only switch on the network pump when required by the storage tank (variant 3 / 4)*

**Prerequisite:** Variant 3 or variant 4

- **NO:** The network pump is activated as soon as a consumer in the hydraulic system requires heat.
- **YES:** The network pump is only activated when one or more layered tanks require heat.

**NOTICE!** Parameter only relevant if a layered tank is installed in all buildings to be supplied!

#### *Sensor input of network return temperature sensor*

Sensor input to which the sensor for the network return temperature is connected.

#### *Pump output of network pump*

Pump outlet to which the network pump is connected.

#### *Control of network pump*

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

#### *Minimum speed of network pump*

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

#### *Maximum speed for network pump*

If you need to limit the maximum speed of the network pump for systemic reasons, you can do so by adjusting this parameter.

#### *Sensor input of distributor 1 return sensor*

**Prerequisite:** Variant 1 and pump for distributor 1 installed  
Sensor input to which the sensor for the return distributor 1 is connected.

#### *Pump output of distributor 1 pump*

**Prerequisite:** Variant 1 and pump for distributor 1 installed  
Pump outlet to which the pump for distributor 1 is connected.

***Control of distributor 1 pump***

**Prerequisite:** Variant 1 and pump for distributor 1 installed  
Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

***Minimum speed for distributor 1 pump***

**Prerequisite:** Variant 1 and pump for distributor 1 installed  
Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

***Maximum speed for distributor 1 pump***

**Prerequisite:** Variant 1 and pump for distributor 1 installed  
If you need to limit the maximum speed of the distributor 1 pump for systemic reasons, you can do so by adjusting this parameter.

***Sensor input of distributor 2 ... 4 return sensor***

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

Sensor input to which the sensor for the distributor 2 ... 4 return is connected.

***Pump outlet of distributor 2 ... 4 pump***

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

Pump outlet to which the pump for distributor 2 ... 4 is connected.

***Activation of distributor 2 ... 4 pump***

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

***Minimum speed for distributor 2 ... 4 pump***

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).


***Maximum speed for distributor 2 ... 4 pump***

**Prerequisite:** Variant 2 or variant 3 and pump for distributor 2 ... 4 installed

If you need to limit the maximum speed of distributors 2 ... 4 pump for systemic reasons, you can do so by adjusting this parameter.

## 4.9 Cascade


### 4.9.1 Cascade - Status

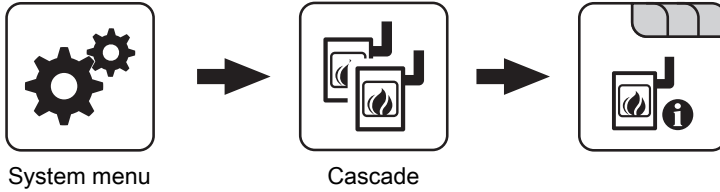

#### *Buffer tank charge*

Display of the current buffer tank charge.

### 4.9.2 Cascade - Backup boiler

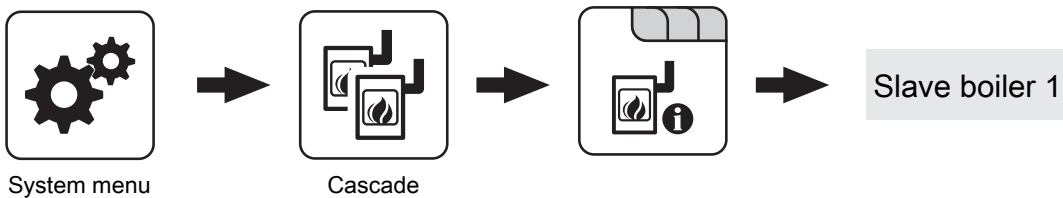

#### *Slave boiler boiler temperature*

Display of the current boiler temperature of the backup boiler.

#### *Slave boiler OK*

Display of whether the backup boiler is ready for operation.

#### *Backup boiler is heating*

Display of whether the backup boiler is in "Heating" operating status.

#### *Slave boiler control variable*

Display of the signal for the combustion controller.

#### *Boiler charging pump speed*

Display of the current speed of the boiler loading pump.



## 4.9.3 Cascade - Temperatures



System menu

Cascade

**Buffer tank charge is 100% at boiler setpoint parameter**


The buffer tank charge is 100% if the average temperature of the buffer tank is below the specified boiler temperature setpoint by the specified value. This parameter defines the end point of the charging curve of the buffer tank.

**Buffer tank charge is 0% at the following temperature (absolute value)**


The buffer tank charge is 0% if the average temperature of the buffer tank reaches the specified value. This parameter defines the base point of the charging curve of the buffer tank.

**Start point 1 at storage tank charge**


If the storage tank charge is lower than this value, the first boiler is started. This can be the boiler with the highest priority or with the fewest operating hours, and consequently both the master and the slave boiler.

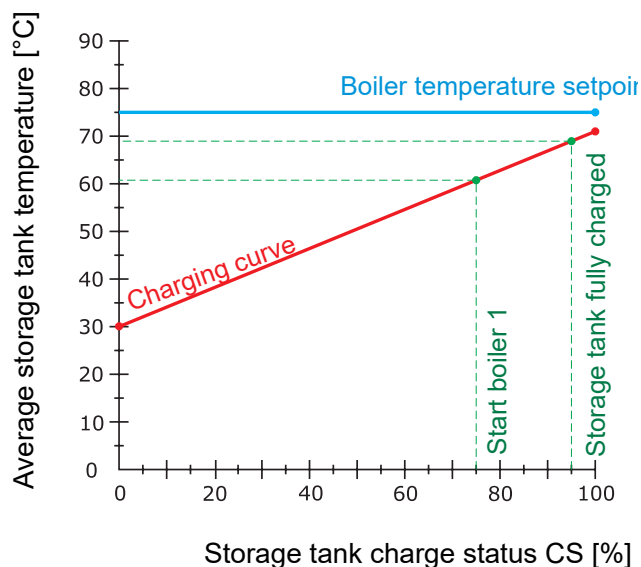**Start point 2 at storage tank charge**

If the storage tank charge is lower than this value, the second boiler is started.

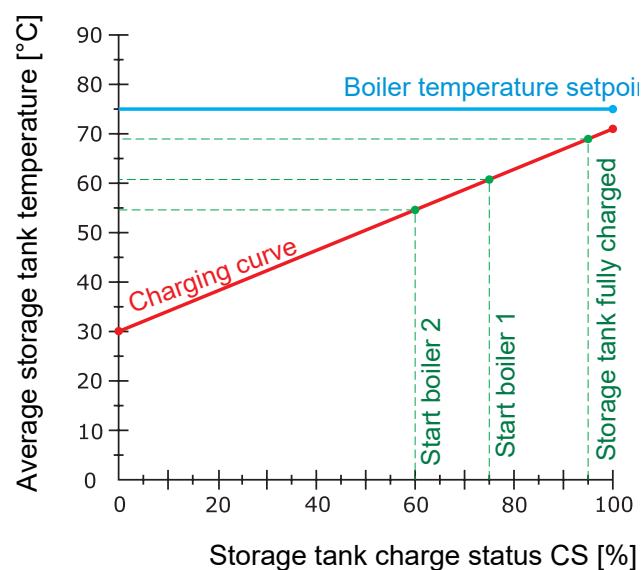**Start point 3 at storage tank charge**

If the storage tank charge is lower than this value, slave boilers 3 and 4 are started.

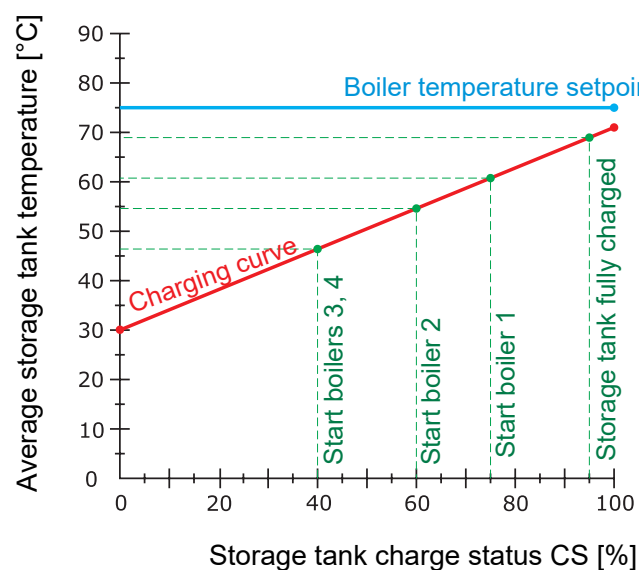

**Quick start if buffer tank discharge is greater than (% / 10min)]**

If the storage tank discharge is greater than the set value within 10 minutes, the boiler with the greatest rated heat output will be started (quick start).

**Reduce the overall output of the cascade before the storage tank is fully charged**

When the storage tank charge exceeds the value which is set under "Start point 1 at storage tank charge", the boiler control variable for the boilers that are still active will be reduced using the boiler loading pump.

**4.9.4 Cascade - Service**

System menu



Cascade



Boiler priorities are used to specify the order in which the boilers start. Where boilers have the same priority, the boiler currently with the fewest operating hours always starts first. With this setting the master boiler always starts first as it has the **highest priority**; the boilers then start in numerical order.


<b>Start priority of the master boiler</b>	<b>1</b>
<b>Start priority of slave boiler 1</b>	<b>2</b>
<b>Start priority of slave boiler 2</b>	<b>3</b>
<b>Start priority of slave boiler 3</b>	<b>4</b>

With this setting the current **number of operating hours** is used as the start criterion as all boilers have equal priority.

<b>Start priority of the master boiler</b>	<b>1</b>
<b>Start priority of slave boiler 1</b>	<b>1</b>
<b>Start priority of slave boiler 2</b>	<b>1</b>
<b>Start priority of slave boiler 3</b>	<b>1</b>

## 4.10 Difference regulator

### 4.10.1 Difference regulator - Status

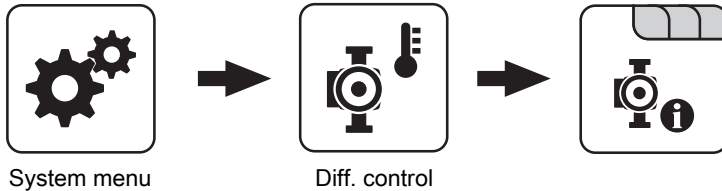

#### *Heat source temperature*

Display of the current heat source temperature of the differential controller (e.g. tiled stove with water pocket, ...).


#### *Pump speed*

Specifies the current speed of the differential controller pump.

#### *Heat sink sensor*

Display of the current temperature of the heat sink for the differential controller (e.g. layered tank, etc.).

### 4.10.2 Difference regulator - Temperatures

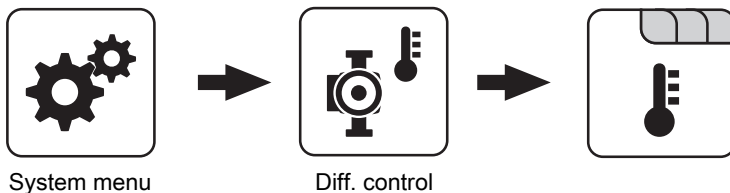

#### *Startup difference*

Temperature difference between heat source and heat sink which must be reached to activate the pump of the differential controller.

#### *Minimum temperature for heat source*

If the temperature in the heat source falls below this value the differential controller will be deactivated.


#### *Shutdown difference*

If the temperature difference between the heat source and the heat sink falls below this value, the pump of the differential controller is deactivated.

#### *Maximum temperature for heat sink*


When the heat sink reaches this value, the pump of the differential controller is deactivated.

### 4.10.3 Difference regulator - Times

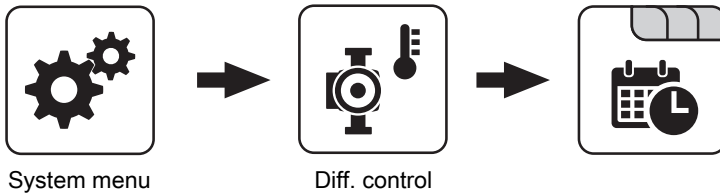

⇒ See "Setting times" [page 115]

### 4.10.4 Difference regulator - Service

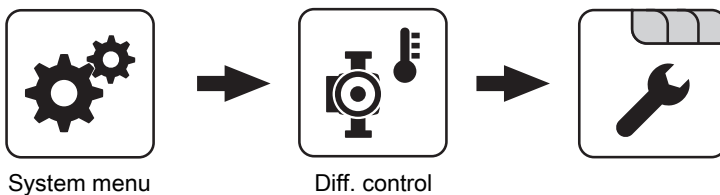

#### ***Pump output of diff. control pump***

Pump outlet to which the pump of the differential controller is connected.

#### ***Control of diff. control pump***

Definition of control signal for pump type used.

⇒ See "Activation options of pump outlets" [page 105]

#### ***Minimum pump speed***

Adjustment of the minimum speed to the pump type (set mode of pump in accordance with pump manufacturer).

#### ***Maximum pump speed***

If you need to limit the maximum speed of the pump of the differential controller for systemic reasons, you can do so by adjusting this parameter.

#### ***Sensor input of heat source sensor***

Sensor input to which the heat source sensor is connected.

#### ***Sensor input of heat sink sensor***


Sensor input to which the heat sink sensor is connected.

#### ***Sensor monitoring***

- **YES:** If temperatures around freezing point occur, an error message appears on the display.
- **NO:** The error messages of the differential controller sensor are suppressed.

## 4.11 Circulation pump

### 4.11.1 Circulation pump - Status

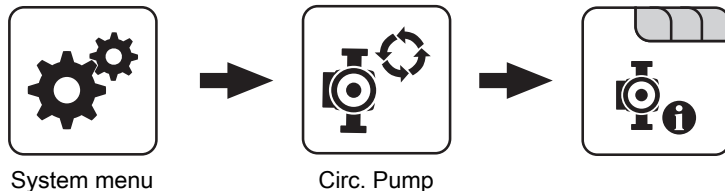

#### *Return temperature in circulation line*

Display of the current temperature at the return feed sensor of the circulation line.

**NOTICE!** If the parameter "Return sensor present" is set to "NO", 0°C is permanently displayed.


#### *Flow switch on the domestic hot water line*

- **0:** Flow switch detects no flow rate.
- **1:** Flow switch detects flow rate.

#### *Speed of the circulation pump*

Specifies the current speed of the circulation pump.

### 4.11.2 Circulation pump - Temperatures

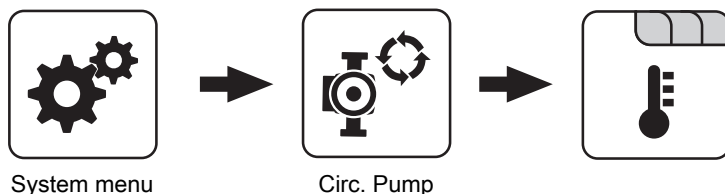

#### *Return sensor present*

- **NO:** The circulation pump is controlled according to time program. In conjunction with the use of a flow valve, the circulation pump is also activated at a signal from the flow valve.
- **YES:** The circulation pump is controlled according to time program and temperature at the return circulation line. In conjunction with the use of a flow switch, the circulation pump is also activated at a signal from the flow switch.

**NOTICE!** Connect the flow sensor as the return sensor!

#### *Switch off the pump at what return temperature in the circulation line*

If the set temperature at the return circulation line is reached, the circulation pump will be deactivated.


**NOTICE!** Parameter only relevant when using a return feed sensor in the circulation line!

#### *Circulation pump run-on*

If the flow stops at the flow switch, the circulation pump still remains active for the time set.


**NOTICE!** Parameter only relevant when using a flow switch!

### 4.11.3 Circulation pump - Times

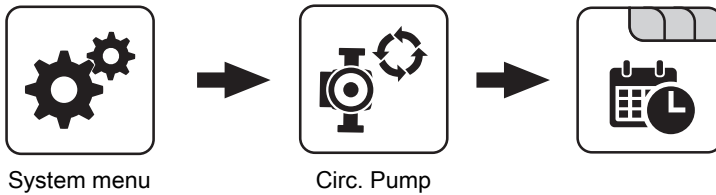

⇒ See "Setting times" [page 115]

### 4.11.4 Circulation pump - Service

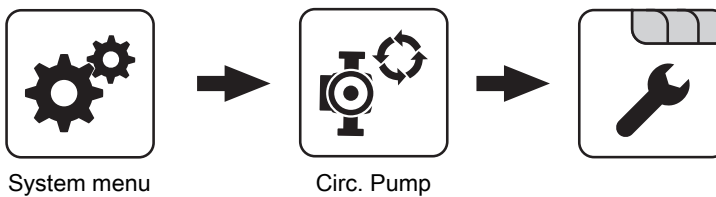

#### **Sensor input of circulation return sensor**

Sensor input to which the sensor at the return line of the circulation is connected.

#### **Which sensor is used for the flow switch**

Sensor input to which the flow switch is connected.

#### **Pump output of circulation pump**

Pump outlet to which the circulation pump is connected.

#### **Control of circulation pump**

Definition of control signal for pump type used.


⇒ See "Activation options of pump outlets" [page 105]

#### **Maximum speed of the circulation pump**

If you need to limit the maximum speed of the circulation pump for systemic reasons, you can do so by adjusting this parameter.

## 4.12 Manual

### 4.12.1 Manual - Manual operation

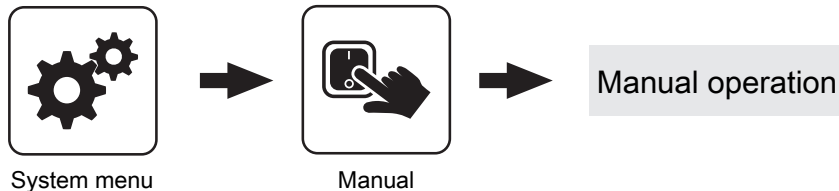

When exiting the “Manual operation” menu, all active parameters are automatically set to “OFF”! The parameters displayed depend on the boiler configuration!

#### *Manual fuel feed*

- **ON:** Grate closes, back-fire flap slide valve opens, then the stoker screw starts.

**WARNING! Overfilling hazard!**

#### *Ash screw manual*

- **ON:** Both ash screw drives are activated.

**NOTICE! Parameter only for P4 Pellet 32 – 105 in use!**

#### *Ash screw drive*

- **ON:** Ash screw drive is activated.

**Prerequisite:** Boiler with ash screw.

#### *WOS drive*

- **ON:** The heat exchanger cleaning system is activated.

**NOTICE! With PE1c Pellet, the WOS is activated via a combined drive with the ash screw!**

#### *Ignition*

- **ON:** The hot air blower / ignition rod for igniting the fuel is activated.

#### *Back burn flap drive*

- **ON:** Burn back flap is opened.

#### *Manual filling of pellet container (only starts when gate valve is open)*

- **ON:** The gate valve of the pellet container opens, the container is then filled with pellets until the switch point of the level sensor is reached. If the container is full the “Pellet container level” value is set to 100%.

#### *Grate - Drive*


- **FORWARD:** Close grate
- **BACK:** Open grate

#### *Rinse the condenser manually – only possible if boiler off / on standby*

- **ON:** The solenoid opens and the calorific value heat exchanger is cleaned.


**NOTICE! This parameter can only be activated when the boiler is in “Standby” or “Boiler off” status.**

### 4.12.2 Manual - Digital outputs

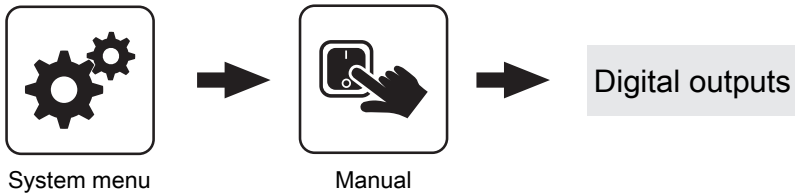


The parameters displayed depend on the boiler configuration!

- **A 0**: Automatic, Off; **A 1**: Automatic, On
- **1**: Manual, On
- **0**: Manual, Off

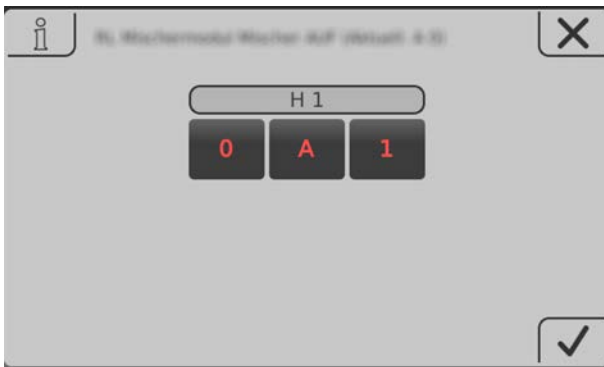


### 4.12.3 Manual - Analogue outputs

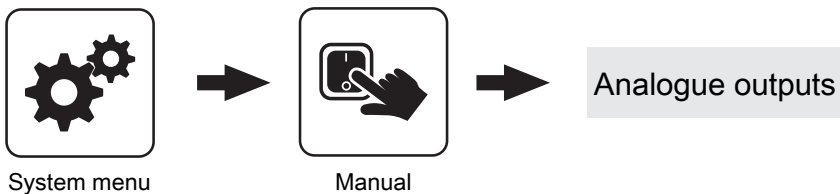

The parameters displayed depend on the boiler configuration!

- **A 0**: Automatic, Off; **A 1-100%**: Automatic, with % value ON
- **1-100%**: Manual, with % value ON
- **0%**: Manual, Off

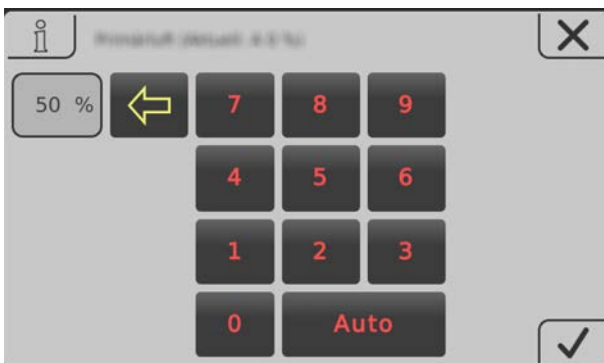



#### 4.12.4 Manual - Digital inputs



System menu




Manual



Digital inputs

The parameters displayed depend on the boiler configuration!


- **A 0**: Automatic, Off; **A 1**: Automatic, On
- **1**: Manual, On
- **0**: Manual, Off

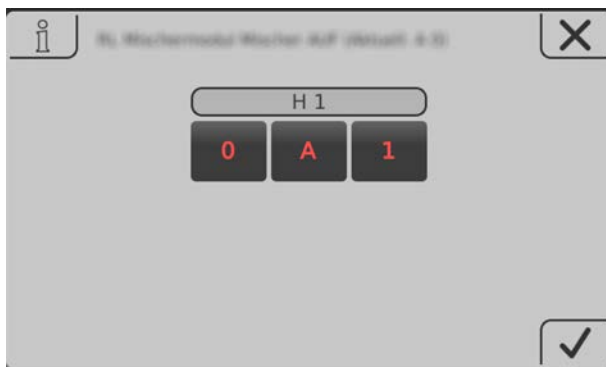

## 4.13 System


### 4.13.1 System - Settings

#### *Setting - Boiler temperature*

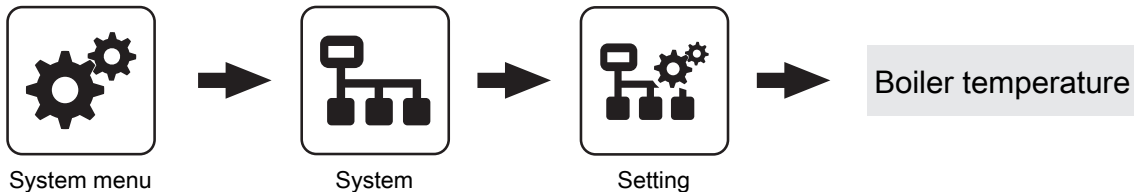

⇒ See "Boiler - Temperatures" [page 58]

#### *Setting - Flue gas*

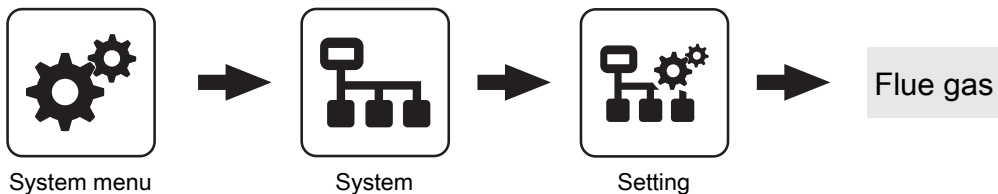

#### *Minimum flue gas temperature*

Lowest operation point of flue gas temperature for continuous operation.

#### *Maximum flue gas temperature*

Highest operation point of flue gas temperature for continuous operation.

#### *Boiler output at flue gas temperature of 20°C*

Lower point of the start ramp of boiler controller at system startup.

#### *100% boiler output from a flue gas temperature of*

Upper point of the start ramp of boiler controller. If the flue gas temperature reaches the value set here, the fuel output should reach 100%.

#### *Minimum difference between flue gas temperature and boiler temperature in HEATING*

As a condition for the "Heating" operating status, the difference between the current flue gas temperature and the current boiler temperature must at least exceed the value set here.

#### *Flue gas - Flue gas difference for start process*

When the boiler controller changes to "Pre-heating" status the current value of the flue gas temperature is stored. When the flue gas temperature rises by the value set here during "Pre-heating" or "Ignition" status, the boiler controller switches to "Heating" status.

#### *Safety time*

If the condition "Minimum difference between flue gas and boiler temperature in HEATING" is not fulfilled for the set duration, the message "Safety time expired, flue gas temperature too low for too long" appears on the display.

## Condenser



Setting



Flue gas



Condenser

**Condenser cleaning interval (heating hours)**

Once the boiler has reached the specified operating hours in "Heating" status, the condensing boiler heat exchanger is rinsed.

**On-time of spray valve. Overall cycle 20 sec**

The entire washing process is set with the "Condenser cleaning duration" parameter. The cleaning time is regarded as the time in which the spray valve is active. Pause times (spray valve off) are not included in the cleaning time.

Example:

100% = spray valve active for the specified time

75% = spray valve active for 15 sec and 5 sec pause


**Calorific value heat exchanger cleaning possible from**

Time from which the washing process can be activated.

**Calorific value heat exchanger cleaning possible until**

Time to which the washing process can be activated.

## External elec. sep.

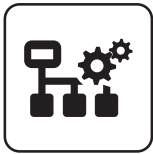

Setting



Flue gas



External elec. sep.

## State

**Separator status**

Displays the current operating status of the electrostatic separator as a numeric code. The following statuses are possible:

- Status "0": Separator deactivated
- Status "1": Separator OFF
- Status "2": Separator ON
- Status "3": Measuring mode
- Status "4": RFI
- Status "5": Wait for bypass flap
- Status "6": Cleaning - Pause
- Status "7": Cleaning - Rinse
- Status "8": Wait for water sensor
- Status "9": Waiting for drying time
- Status "10": Separator error
- Status "11": Quick cleaning
- Status "12": Waiting for drying time
- Status "13": Cleaning – Waiting
- Status "14": Cleaning – Shaking
- Status "15": Cleaning – Waiting

**Elec. separ. return signal**

Shows the separator's status as a numeric code. Following status values are possible:

- Status "0": No error
- Status "1": Power supply fault
- Status "2": RS485 error
- Status "3": Temperature box error
- Status "4": High voltage error
- Status "5": Wait for ready-to-measure state
- Status "6": Values critical
- Status "7": Measure
- Status "8": Measuring mode error

**Water detected**

Shows the status of the water sensor in the ash drawer. If the water sensor detects a water level that is too high, the electrostatic separator is deactivated.

**Time until next cleaning**

Shows the remaining time (in minutes) until the next cleaning process.

**Elec. separ. operating hours**

Shows the operation hours since the electrostatic separator was first activated.

**Number of cleaning processes**

Shows the total number of cleaning processes since the electrostatic separator was first activated.

**Output HV module 1 ... 4**

Displays the current output of the respective HV module as a numeric code. The following displays are possible:

- Output "0": The current output of the HV module is between 0 - 25%
- Output "1": The current output of the HV module is between 25 - 50%
- Output "2": The current output of the HV module is between 50 - 75%
- Output "3": The current output of the HV module is above 75%

**Service*****The electrostatic separator function is active***

Used to activate/deactivate the electrostatic separator's function. When the electrostatic separator is deactivated, the bypass flap is open and the flue gas is fed directly into the chimney.

***Time until bypass flap is open***

Specifies the time for opening the bypass flap in seconds. The specified time must correspond at least to the actuating time of the flap drive.

***Close bypass flap when filter switched off***

This parameter is set to "NO" by default and should only be changed after consultation with the manufacturer.

***Cleaning interval***

Specifies after how many operation hours of the electrostatic separator a cleaning cycle must be started. Depending on the raw dust content, this value is set between 4 and 8 hours.

***Duration of cleaning cycle***

Defines the total time for a cleaning process. Via this duration, the spray valve is periodically switched on and off.

***On-time of spray valve. Overall cycle 10 sec***

Defines the cycle of the spray valve, which is repeated until the total time (parameter "Duration of cleaning cycle") has elapsed. The cycle of the spray valve is set in percentages of 10 seconds.

Example: On-time of spray valve: 60%, duration of cleaning cycle: 23s;  
Spray valve is switched on for 6 seconds, waits for 4 seconds. This cycle is repeated until the total time is reached. (6s ON - 4s OFF - 6s ON - 4s OFF - 3s ON)

***Dry time***

Defines the waiting time after a cleaning cycle before the HV electrodes are activated again.

***Is there a siphon fitted?***

By default this parameter is set to "YES" and cleaning of the filter is performed according to the specified interval. In case of problems with the drain system (e.g. blocked duct) this parameter can be set to "NO" in the interim. The cleaning times are then adjusted so that the collection tank is not overfilled.

***Quick/compulsory cleaning active?***

Specifies whether the function of the quick/compulsory cleaning should be active.

Quick/compulsory cleaning: If the output of the HV module is below 25% for a defined period, a quick cleaning is carried out during operation. If the output of the HV module remains below 25%, then a set waiting time is observed until the next quick cleaning.

***Duration of quick cleaning***

Defines the on-time of the spray valve during a quick cleaning.

***Minimum time between quick/compulsory cleaning***

Specifies the waiting time between two quick cleanings in minutes.

***Cleaning possible from***

In conjunction with the "Cleaning possible till" parameter, this defines a time window in which the automatic cleaning of the separator may be activated.

***Cleaning possible until***

In conjunction with the "Cleaning possible as of" parameter, this defines a time window in which the automatic cleaning of the separator may be activated.

*IO allocation*

Setting of the relevant address for the respective component for the inputs and outputs on the digital module.

- Address HV in 1
- Address HV in 2
- Address water sensor 1
- Address water sensor 2
- Safety switch address
- Address HV out 1
- Address HV out 2
- Address bypass flap open
- Address washer valve 1
- Address washer valve 2

**Internal elec. sep.**

Setting



Flue gas



Internal elec. sep.

*State***Separator status**

Displays the current operating status of the electrostatic separator as a numeric code. The following statuses are possible:

- Status "0": Separator deactivated
- Status "1": Separator OFF
- Status "2": Separator ON
- Status "3": Measuring mode
- Status "4": RFI
- Status "5": Wait for bypass flap
- Status "6": Cleaning - Pause
- Status "7": Cleaning - Rinse
- Status "8": Wait for water sensor
- Status "9": Waiting for drying time
- Status "10": Separator error
- Status "11": Quick cleaning
- Status "12": Waiting for drying time
- Status "13": Cleaning – Waiting
- Status "14": Cleaning – Shaking
- Status "15": Cleaning – Waiting

**Elec. separ. return signal**

Shows the separator's status as a numeric code. Following status values are possible:

- Status "0": No error
- Status "1": Power supply fault
- Status "2": RS485 error
- Status "3": Temperature box error
- Status "4": High voltage error
- Status "5": Wait for ready-to-measure state
- Status "6": Values critical
- Status "7": Measure
- Status "8": Measuring mode error

**Current response HV module 1**

Actual voltage of the HV modules in kV.

**Power response HV module 1**

Actual current of the HV module in mA.

**Time until next cleaning**

Shows the remaining time (in minutes) until the next cleaning process.

**Elec. separ. operating hours**

Shows the operation hours since the electrostatic separator was first activated.

**Number of cleaning processes**

Shows the total number of cleaning processes since the electrostatic separator was first activated.

**Number of flashovers**

Shows the total number of flashovers since the electrostatic separator was first activated.

**Absorbed energy**

Shows the total amount of absorbed energy since the electrostatic separator was first activated.

**Service****Enable elec. separ. function**

Used to activate/deactivate the electrostatic separator's function.

**Max. output HV modules**

For setting the output power in watts of the HV module used. If two modules are used, the output of one module must be set here. If more than one module is used, HV modules with the same output power should always be used.

**Startup criteria for HV modules - Flue gas temperature**

If the flue gas temperature of the boiler exceeds the set value, the HV modules are switched on. If the flue gas temperature falls below the set value during heating mode, the HV modules remain switched on.

**Start ramp HV controller**

As soon as the start-up criterion (parameter "Start-up criterion for HV modules - Flue gas temperature") is reached, the high voltage is activated with the start value (parameter "Start value HV controller"). Within this set start ramp, the set times of the parameters for standard operation ("Interval voltage increase HV module" and "Interval voltage decrease HV controller") are reduced by a defined factor in order to achieve a rapid increase in the target voltage in the start phase.

**Dry time**

Defines the waiting time after a cleaning cycle before the HV electrodes are activated again.

**Quick/compulsory cleaning active?**

Specifies whether the function of the quick/compulsory cleaning should be active.

Quick/compulsory cleaning: If the output of the HV module is below 25% for a defined period, a quick cleaning is carried out during operation. If the output of the HV module remains below 25%, then a set waiting time is observed until the next quick cleaning.

**Output HV module 1**

Displays the current output of the respective HV module in watts.

**Output level HV module 1**

The output of the HV module is divided into four levels. The following output levels are displayed: <25% / 25-50% / 50-75% / >75%

**Duration of quick cleaning**

Defines the on-time of the spray valve during a quick cleaning.

**Minimum time between quick/compulsory cleaning**

Specifies the waiting time between two quick cleanings in minutes.

**Minimum target control for HV module(s)**

Defines the output of the HV module up to which it can be reduced in the event of flashovers. If the controller detects a defined number of flashovers at the minimum setpoint control, the HV module switches to standby mode for a certain period of time.

**Maximum target control HV module 1**

Determines the maximum output of the HV module up to which the voltage is increased in a defined interval (parameter "Interval voltage increase HV controller").

**Interval voltage increase HV controller**

If the controller does not detect a flashover within this set time, the voltage is increased by 1 percent.

**Interval voltage decrease HV controller**

A voltage reduction occurs after a flashover. Within the set interval, the voltage can only be reduced by 1 percent. If at least one flashover occurs again at the next interval, the voltage is reduced again by 1 percent.

**Start value HV controller**


Defines the starting point of the HV controller start ramp (parameter "Start ramp HV controller").

**Max. number of flashovers in start-up phase**

If the set number of flashovers is detected after activation of the elec. separator, the ramp-up phase with increased control speed is completed and the system is controlled at the set speed.

**Max. residual oxygen if elec. separ active**

If the measured residual oxygen exceeds the set value, the electronic separator is switched off (hysteresis 2%).

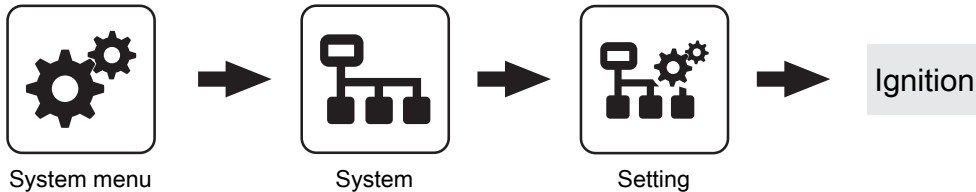**Setting - Ignition****Duration of pre-heating**

Time during which only the ignition is activated. The fuel slide-in is not active for this duration.

**Maximum ignition duration**

Specifies how long the ignition procedure should last. "Heating" status must be reached within this time.

**Infeed time without ignition**

Specifies how long fuel is fed to the combustion grate before "Pre-heating" operating status.

**Time until fuel feed-in**

Sets the waiting time before fuel infeed begins in the "Preheating" status.

**The time until the stoker is full is**

Specifies how long the stoker screw must be active to fill the stoker duct with fuel. The channel may only be filled so far that no fuel escapes on to the grate.

**Infeed during ignition**

Defined fuel feed-in for the "Ignition" status duration.

**Ignition Off during heating up**

**NOTICE!** When using the P1 Pellet 7/10 pellet boiler in conjunction with 270/280W heating cartridges, this parameter must be set to "YES (the power rating of the heating cartridges is located on the metallic cable entry).


**Oxygen decrease for heating status**

If the oxygen drops by the set value from the "Pre-heating" operating state, the system changes directly to the "Heating" operating state.

**Factor for feed pulse**

Parameter for the calculation of the feed pulse during ignition. If the oxygen does not drop in the first 900 seconds, a feed pulse with 100% feed rate is started. The duration of this pulse results from the feed time without ignition and this factor:

**Infeed time without ignition / factor for feed pulse**

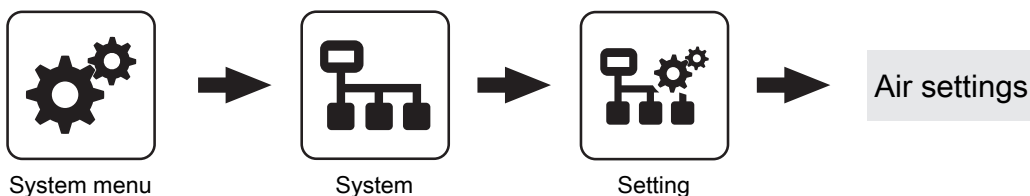**Setting - Air settings****Minimum ID fan speed**

Lower operation point of the ID fan characteristic line.

**ID fan min**

Base point for setting the ID fan characteristic line.

**ID fan max**

End point for setting the ID fan characteristic curve.

**ID fan during heating up**

In "Heating up" status, the induced draught blower fan is operated with the specified control.



**ID fan during pre-heating**

In "Pre-heating" status, the induced draught blower fan is operated with the specified control.

**ID fan during shutdown**

In "Shutdown" status, the induced draught blower fan is operated with the specified control.

**ID fan during ignition**

In "Ignition" status, the induced draught blower fan is operated with the specified control.

**Electrical room air flap on pellet module present**

- **NO:** If the boiler is not in "Off" or "Boiler off" status, an output of 230 V will be provided at the "room air flap" output on the "pellet module expansion" board. The corresponding input "Digi IN S8" is not analysed.
- **YES:** If an electrical room air flap is used, it is supplied with 230V via the "Room air flap" output on the "pellet module expansion" board. The room air flap function is monitored by the input, "Digi IN S8".

**Opening of primary air when boiler is off**

The primary air flap is set to this value in the "Boiler off", "Standby" and "Fault" operating statuses.

**Boiler underpressure setpoint**


Desired underpressure which is to be maintained during the operation of the boiler.

**Start value of ID fan if door open**

Start value of the ID fan control in the DOOR OPEN state.

**Rising of induced draft fan controller if door is open**

Gradient rate at which the ID fan control is increased in the DOOR OPEN state.

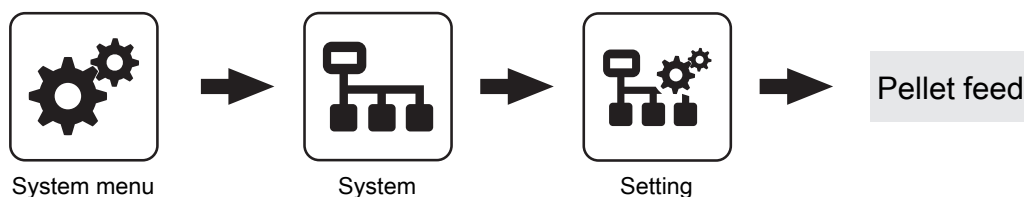**Setting - Pellet feed****Maximum infeed**

Feed rate in percent at maximum output.

**NOTICE!** Parameter only available if no Lambda probe is installed!

**Minimum infeed**

Minimum infeed of stoker screw.

**Time feed screw is on until stoker screw**

Runtime ratio between feed screw and stoker screw.

**Awaiting shutdown 1**

During this time period, the boiler is ventilated by the induced draught fan.

**The time until the stoker is empty is**

Theoretical runtime of the feed screw until there is no more fuel in the stoker.

**Awaiting shutdown 2**

Time between the operating statuses "Awaiting shutdown 1" and "Cleaning". In this operating status the induced draught fan is not active.

**Duration of LW Heat/Shut down**

If firewood is ignited via the pellet unit, then the pellet unit starts the cleaning process of the pellet unit at the end of the specified time.

**WOS start time**

Time from which the heat exchanger cleaning system can be activated.

**WOS stop time**

Time to which the heat exchanger cleaning system can be activated.

**Heating hours until ash removal warning**

Once the specified heating hours have elapsed (the hours in which the system was in "Heating" status), a message indicating that the ash box must be emptied appears on the display.

**WOS runtime**

Time which the heat exchanger cleaning system is activated.

***Cycle of ash discharge system***

Interval at which the ash screw is to be operated for the set runtime.

***Ash screw runtime***


Time which the ash screw drive is activated.

***Clean after how many hours heating?***

If the boiler has passed the set time in "Heating" status, the boiler shuts down for a cleaning cycle.

***Clean after how many shutdowns?***

This parameter defines the number of shutdowns after which the "Cleaning" operating status is implemented.

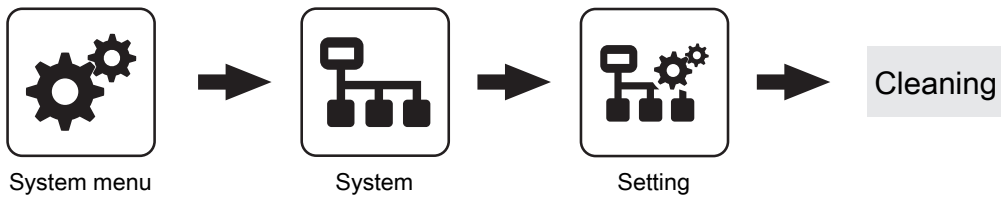***Set - Cleaning******The cleaning may start from***

Time from which cleaning is enabled. A time limit for the heat exchanger is not recommended.

***The cleaning may run until***

Time from which cleaning is blocked. A time limit for the heat exchanger function is not recommended.

***Ash screw runtime***

Time which the ash screw drive is activated.

***Ash screw positioning active***

YES: The function of the ash screw is monitored


NO: Function monitoring of the ash screw is deactivated

***Clean after how many hours heating?***

If the boiler has passed the set time in "Heating" status, the boiler shuts down for a cleaning cycle.

***Clean after how many shutdowns?***

This parameter defines the number of shutdowns after which the "Cleaning" operating status is implemented.

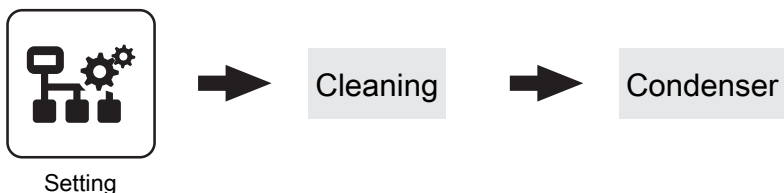***Condenser******Time elapsed since last heat exchanger cleaning***

Shows the hours the boiler has been in "Heating" status since the last rinsing process of the cleaning system of the condensing boiler heat exchanger.

***Number of rinsing processes***

Number of rinsing processes of the cleaning system of the condensing boiler heat exchanger.

***Condenser cleaning interval (heating hours)***

Once the boiler has reached the specified operating hours in "Heating" status, the condensing boiler heat exchanger is rinsed.

**On-time of spray valve. Overall cycle 20 sec**

The entire washing process is set with the “`Condenser cleaning duration`” parameter. The cleaning time is regarded as the time in which the spray valve is active. Pause times (spray valve off) are not included in the cleaning time.

Example:

100% = spray valve active for the specified time


75% = spray valve active for 15 sec and 5 sec pause

**Calorific value heat exchanger cleaning possible from**

Time from which the washing process can be activated.

**Calorific value heat exchanger cleaning possible until**

Time to which the washing process can be activated.

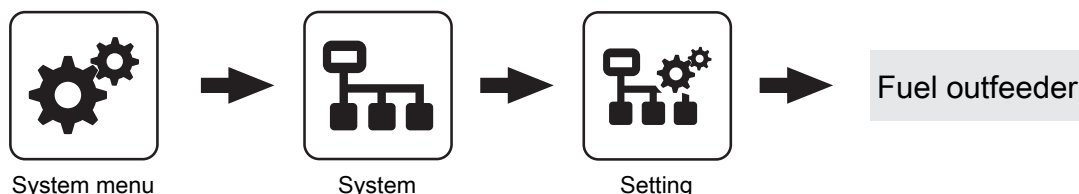**Setting - Fuel outfeeder****First start of cleaning**

**Prerequisite:** Supply bin installed

**Second start of cleaning**

**Prerequisite:** Supply bin installed

**Start of 1st pellet filling**

First start for a filling process. A filling process is only carried out if the fill level in the pellet container is below 85%.

**Start of 2nd pellet filling**

Second start for a filling process. This is likewise only carried out if the pellet container level is below 85%. If you only want one filling time, then set the second filling time to the same time as the first filling time.

**Refill of cyclone from**

When set to “0%” the filling process is started according to the filling times that are set. If there is a shortage of pellets during the “Heating” status, the pellet container is filled regardless of the current time.

**Refill cyclone after buffer charging**

- **NO:** A filling process of the pellet container is carried out according to the filling times that are set.
- **YES:** If the boiler shuts down once buffer tank loading is complete, this parameter can then be used to fill the cyclone without having to wait for the next filling start point.

**Refill during grate cleaning during heating hours**

- **NO:** A filling process of the pellet container is carried out according to the filling times that are set.
- **YES:** If the boiler cleans the grate because the number of heating hours has been reached (“`Clean after how many hours heating`” parameter), the pellet container is filled regardless of the time.

**Preliminary suction time**

Duration before the vacuum screw delivery system starts. Used to clear the lines before start of suction.

**Screw cycle**

The runtime of the delivery screw plus the preliminary suction time equals the screw cycle.

**Vacuum + screw filling run-on after reaching the MAX fill level**

Specifies how long the suction screw should deliver material after reaching the maximum fill level in the cyclone. After this runtime, the run-on time of the suction turbine starts (parameter “`Suction run-on`”)

**Suction run-on**

When the fill level sensor detects fuel in the cyclone, the suction turbine remains active for the time set.

**Max. runtime of suction fan**

**Prerequisite:** Vacuum + screw filling system installed or vacuum + screw filling system automatically operated installed

If the 100% fill level has not been reached within the specified runtime, the suction turbine switches off.

**Maximum current for delivery screw**

**Prerequisite:** Vacuum + screw filling system installed or vacuum + screw filling system automatically operated installed

Set parameter according to the identification plate of the discharge screw drive used.

**Maximum time until switching of probe**

**Prerequisite:** Universal suction, automatically operated  
Time period, during which the pellet container must reach a fill level of 100% from a probe. If this time is exceeded, the change-over unit automatically changes to the next probe. If all probes are started and the fill level of 100% in the pellet container is not reached, an error message appears on the display.

**Is position 1 ... 8 of the change-over unit being used?**

**Prerequisite:** Universal suction with automatic toggle

**Priority of suction position 1 ... 3**

**Prerequisite:** Vacuum + screw filling system, automatically operated

- 1: Off times for the weekdays and also weekends are active
- 2: Suction point is always active

**Start of locking window for suction positions with priority 1 (Mon-Fri)**

**Prerequisite:** Vacuum + screw filling system, automatically operated

From this point in time, the suction points with priority 1 are not available on weekdays.

**End of locking window for suction positions with priority 1 (Mon-Fri)**

**Prerequisite:** Vacuum + screw filling system, automatically operated

Until this point in time, the suction points with priority 1 are not available on weekdays.

**Start of locking window for suction positions with priority 1 (Sat-Sun)**

**Prerequisite:** Vacuum + screw filling system, automatically operated

From this point in time, the suction points with priority 1 are not available on weekends.

**End of locking window for suction positions with priority 1 (Sat-Sun)**

**Prerequisite:** Vacuum + screw filling system, automatically operated

Until this point in time, the suction points with priority 1 are not available on weekdays.

**Gate valve installed on pellet cyclone**

Indicates whether there is a gate valve on the pellet cyclone.

**Measured path of slide valve**

Display of the measured path during initialisation of the gate valve.

**Minimum path for gate valve**

This value is automatically set to 5% below the measured path of the gate valve after its initial startup.

**P4 Pellet 32/38 with small cyclone installed**


- **NO:** The P4 Pellet 32/38 standard pellet container is in use.
- **YES:** The P4 Pellet 32/38 has been equipped with the P4 Pellet 20/25 pellet container.

**Vibration motor installed**

- **YES:** The vibration motor for improving the discharge rate of the bag silo is installed.

**Vibration timing**

The default vibration interval timing is 60%:  
Time basis: 100 sec. → 60 sec. on / 40 sec. pause

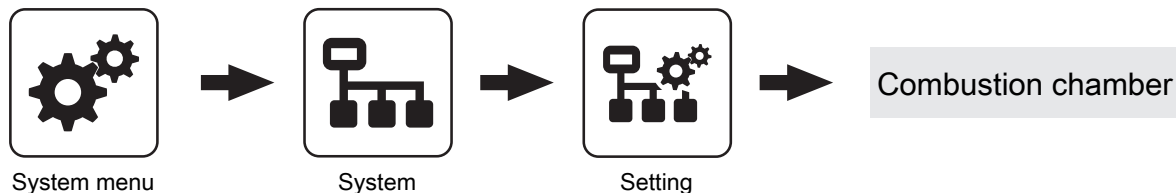**Setting - Combustion chamber****Boiler underpressure setpoint**

Desired underpressure which is to be maintained during the operation of the boiler.

**Underpressure in the boiler at maximum output during start phase**

Underpressure that must be maintained during the start phase at max. output.

**Under-pressure at minimum output**

At minimum boiler output the specified underpressure must be kept.

**Control pressure during preparation (seal control)**

In "Preparation" status, the minimum underpressure specified must be reached.

**Control pressure tolerance during preparation (seal control)**

In "Preparation" status, a maximum deviation for the parameter "Control pressure during preparation (seal control)" can be reached.

**The duration of the preparation is**

Duration of the seal check during "Preparation" status.

**Under-pressure during pre-heating**

In "Pre-heating" status, the specified underpressure is required as a minimum.

**Under-pressure during shutdown**

In "Shutdown" status, the specified underpressure is required as a minimum.

**Monitoring for decline in underpressure active**


If the underpressure decreases sharply, after a brief period the message "Boiler door open or underpressure transmitter defective" appears on the display.

**Neg. press. while FGR clean.**

Indicates the negative pressure required during the "Clean FGR" status.

**Neg. press. during Shutdown Wait 2**

Indicates the negative pressure required in the "Shutdown Wait 2" status.

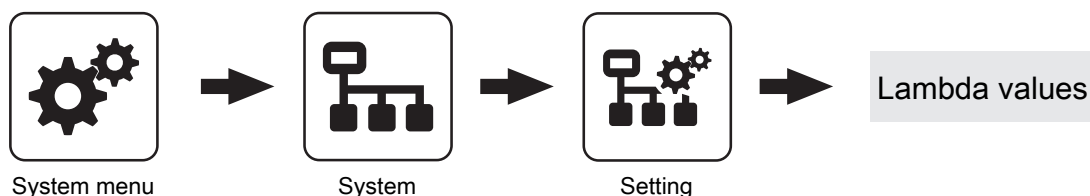**Setting - Lambda values****Residual oxygen content setpoint**

Residual oxygen content which is regulated during "Heating" status.

**No feed when residual O2 below**

If the current residual oxygen content falls below the set value, the fuel slide-in stops.

**Residual oxygen limit for idling detection at high feed rate**

Residual oxygen limit for idling detection when the feed rate is greater than 80%.

**Residual oxygen content, above which fire is out**

If the current residual oxygen content in "Heating" status exceeds the specified value, the safety time begins to run.

**O2 Controller max**

Adjustable parameters for the residual oxygen controller.

**NOTICE! Factory setting - do not change!**

**O2 control release in heating from:**

When the ignition process has been successfully carried out, the residual oxygen controller is limited for the specified time.

**O2 control limit when it is not released**

If the residual oxygen controller is not yet released, it is limited to the specified value.

**Influencing factor for O2 controller**

Adjustable parameters for the residual oxygen controller.

**NOTICE! Factory setting - do not change!**

**Minimum underpressure in combustion chamber during heating**

**Prerequisite:** Underpressure transmitter installed  
In "Heating" status, the minimum underpressure specified in the combustion chamber must be reached.

**Maximum underpressure in combustion chamber during heating**

**Prerequisite:** Underpressure transmitter installed  
In "Heating" status, the maximum underpressure specified in the combustion chamber can be reached.

**Minimum underpressure in combustion chamber during preparation**

**Prerequisite:** Underpressure transmitter installed  
In "Preparation" status, the minimum underpressure specified in the combustion chamber must be reached.

**Maximum underpressure in combustion chamber during preparation**

**Prerequisite:** Underpressure transmitter installed  
In "Preparation" status, the maximum underpressure specified in the combustion chamber can be reached.

**Air quantity, which should be reached during preparation of P4 Pellet 8/15**

**Prerequisite:** P4 Pellet 8 - 25

Minimum air speed which must be reached in "Preparation" status to perform a start-up.

**Air quantity, which should be reached during preparation of P4 Pellet 20/25**

**Prerequisite:** P4 Pellet 8 - 25

Minimum air speed which must be reached in "Preparation" status to perform a start-up.

**Air quantity, which should be reached during preparation of P4 Pellet 32-100**

**Prerequisite:** P4 Pellet 32 – 100

Minimum air speed which must be reached in "Preparation" status to perform a start-up.

**Minimal air quantity during operation**


Minimum air speed which must be reached in the "Heating" status.

**Residual oxygen above which the lambda probe is allowed to switch off**

If the boiler switches to "Boiler off" or "Off" mode, the lambda probe heating remains active for at least 1 hour, up to a maximum of 24 hours. If the residual oxygen content exceeds the value set here, the lambda probe heating is switched off.

**Set - Lambda probe**

System menu

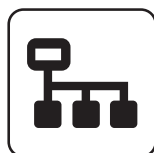

System



Setting



Lambda probe

**Residual oxygen content**

Display of the current residual oxygen content.

**Lambda probe status**

The following status displays are possible:

- Off
- Pre-heating



**Lambda probe status**

- Normal operation
- Cooling
- Reheating
- Error

**Lambda probe type**

Setting the Lambda probe type used:

- Bosch broadband probe  
(item number: 69001A, "broadband probe" socket)
- NTK broadband probe  
(item number: 69003, "broadband probe" socket)
- Bosch switching-type sensor  
(type LSM11, "Lambda probe" socket)
- NTK switching-type sensor  
(type OZA685, item number: 69400, "Lambda probe" socket)

**Lambda probe heating**

- **A 0:** Automatic, Off; **A 1:** Automatic, On
- **1:** Manual, On
- **0:** Manual, Off

**Lambda probe calibration (probe must be at 21% O<sub>2</sub>)**

- **YES:** After activation of the Lambda probe heating, the Lambda probe can be calibrated.
- **NOTICE!** The Lambda probe must be at 21% oxygen (air)!

**Automatic lambda probe calibration active**

- **YES:** If the boiler is in one of these statuses ("Boiler off", "Off", or "Standby") for a minimum period, which can be set ("Minimum time at standstill"), the broadband probe will be calibrated to 21%.

For boilers with automatic loading, calibration is carried out at the next start (status "Preparation").

For boilers with manual loading, the boiler changes to the "sensor check" status after this time has elapsed (additional indication on the display). The ID fan is activated and the secondary air is completely opened. If the insulated door is opened in this status, the process is aborted.


The prerequisite for calibration is that the probe provides a stable measurement for one minute. If the measurement exceeds 21% for more than one minute, the probe is also calibrated, regardless of the standstill times.

**Minimum time at standstill**

Defines the duration that the boiler must be in "Boiler Off", "Off" or "Standby" mode to start automatic Lambda sensor calibration.

**Residual oxygen above which the lambda probe is allowed to switch off**

If the boiler switches to "Boiler off" or "Off" mode, the lambda probe heating remains active for at least 1 hour, up to a maximum of 24 hours. If the residual oxygen content exceeds the value set here, the lambda probe heating is switched off.

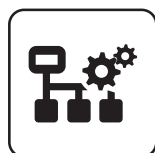**Switching-type sensor**

Setting



Lambda values



Switching-type sensor

**Residual oxygen content**

Display of the current residual oxygen content.

**Lambda probe voltage measured**

Display of the current measured Lambda probe voltage.


**Lambda probes correction value**

Correction value for lambda measurement. If too much is displayed, this value must be set to positive, if too little is displayed, the value must be set to negative.

**Lambda probe voltage corrected**

Display of the measured Lambda probe voltage, at which the "Lambda probe correction value" is taken into account.

## Broadband probe

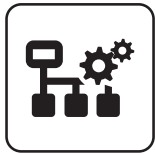

Setting



Lambda values



Broadband probe

**Residual oxygen content**

Display of the current residual oxygen content.

**Broadband probe heating current**

Display of the measured broadband probe heating current.

**Broadband probe heating voltage**

Display of the measured broadband probe heating voltage.

**Broadband probe Nernst voltage**

Display of the measured Nernst voltage of the broadband probe.

**Broadband probe pump current**

Display of the measured broadband probe pump current.

**Broadband probe internal resistance**

Display of the measured internal resistance of the broadband probe.

**Set - Quantity of heat calculation****Flow temperature sensor correction value**

If, at the same ambient temperature, the flow temperature sensor and return feed sensor display different temperature values, this correction value is used to calibrate the difference between the flow sensor and the return sensor to "0". The corrected value is used only to calculate the quantity of heat does not affect the operation of the boiler. If the boiler temperature is used to calculate the quantity of heat, the correction value is applicable to the boiler sensor.

**Flow temperature sensor input**

Sensors 1/2 on the core module or a sensor on the hydraulic module can be used as flow temperature sensors. If an invalid sensor assignment is made, the value of the boiler sensor is used to calculate the quantity of heat.

**Specific heat capacity**

This parameter indicates the specific heat capacity of the heat carrier. The value for pure water (4180 Ws/kgK) is used as the default value.

**Litres per pulse of flow sensor**

If an external volume pulse transmitter is used, adjust this value accordingly.

**Flow rate at 50% pump rotation speed**

The parameter specifies the volumetric flow rate at 50% pump actuation.


⇒ See "Calculating the feed output of the circulating pump" [page 108]

**Flow rate at 100% pump rotation speed**


The parameter specifies the volumetric flow rate at 100% pump actuation.

⇒ See "Calculating the feed output of the circulating pump" [page 108]

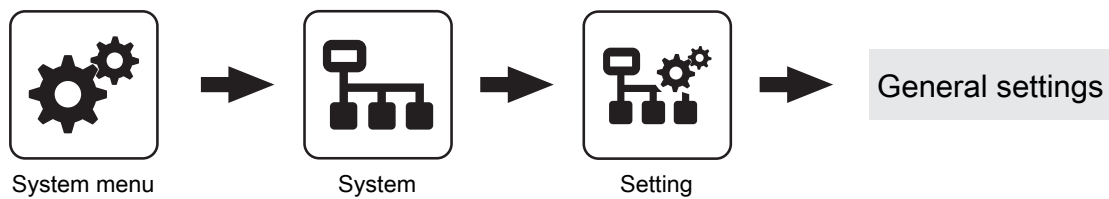


**Setting - General settings**

⇒ See "Boiler - General settings" [page 60]

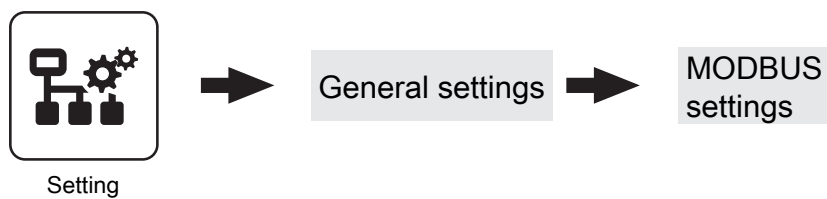**MODBUS settings**


⇒ See "Boiler - General settings - MODBUS settings" [page 61]

### 4.13.2 System - Current values

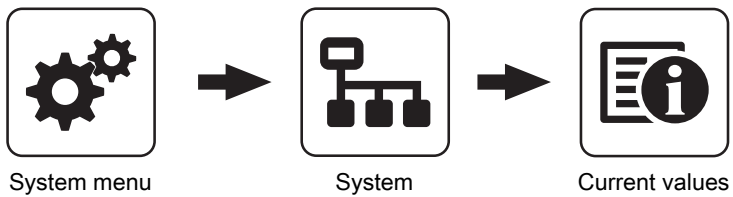


Display of the current value for the relevant parameter. The parameters displayed depend on the boiler configuration!

#### *Operation hours*

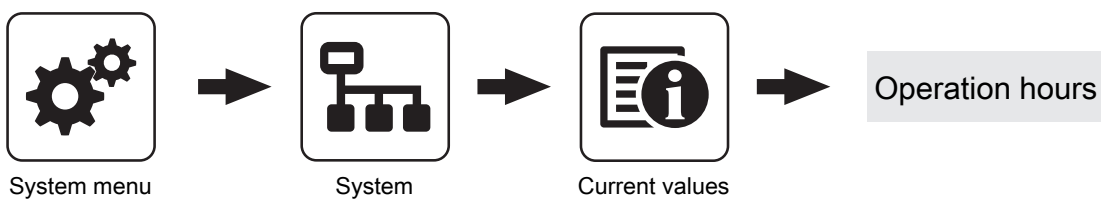


Display of the current number of operation hours of the respective unit and respective components. The parameters displayed depend on the boiler configuration!

### 4.13.3 System - Sensors and pumps

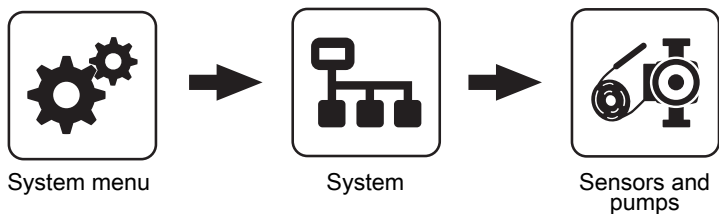

In the “Sensors and pumps” menu, all sensor inputs and pump outlets available in the hydraulic system can be allocated. The number of parameters depends on the configuration.

### 4.13.4 System - System selection

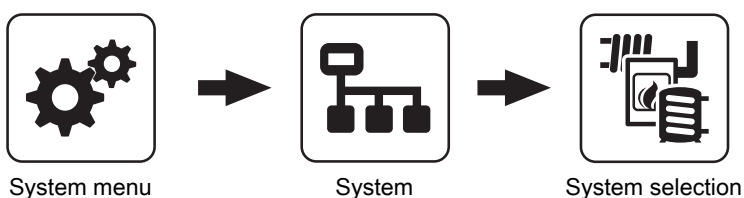

Menu for setting the configuration for systems that have not been configured with the setting wizard.

## 4.14 Diagnostics

### 4.14.1 Diagnosis – Current fault list



Display of the current fault messages. In addition, you can also invoke time information here, such as when the fault occurred, when the fault was acknowledged and when the fault was cleared.

### 4.14.2 Diagnosis – Clear pending error



Used to delete current faults in the fault list. Depending on the system configuration, the status LED can flash red even though no fault messages are pending. This function can also be used to delete pending fault messages that are not visible.

### 4.14.3 Diagnostics - Error history



Up to 50 fault indication entries are stored in the error history. A fault can consist of up to 3 fault indication entries. You can determine what type of fault message it is, when the fault occurred (appeared), when the fault was

acknowledged and when the fault was eliminated (cleared). If all 50 fault indication entries are in use and there is another fault indication entry, the oldest entry will be deleted to make room for the current one.

#### 4.14.4 Diagnostics - Clear error history



System menu



Diagnostics




Clear error history

The entire error history can be deleted using this function.  
From this time on, the error history will be filled again with  
new fault messages.

## 4.15 Touchscreen

### 4.15.1 Touchscreen - Display settings

#### Display settings - General

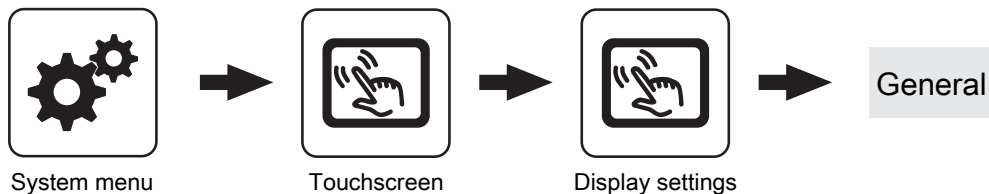

#### Brightness

Display of the light sensor's evaluation of the current brightness in the room for adjusting the backlight.

#### Maximum backlight

The brighter it is in the room, the more the background of the touch display is illuminated. This is where you can limit the maximum backlight.

#### Minimum backlight

The darker it is in the room, the less the background of the touch display is illuminated. This is where you can set the minimum backlight.

#### Delay time for screen saver (0 deactivates the screensaver)

If the touchscreen is not touched within the set time, the screensaver will activate and the screen will go dark. To disable the screensaver, set the delay time to "0".

#### Module address


This is where you can change the module address if it is incorrectly set.

Module address 0: Boiler console

Module address 1-7: respective room console 3200 with touchscreen


**NOTICE! Once you have changed the module address, you will need to restart the boiler controller (switch main switch on boiler off and on)!**

#### Network settings

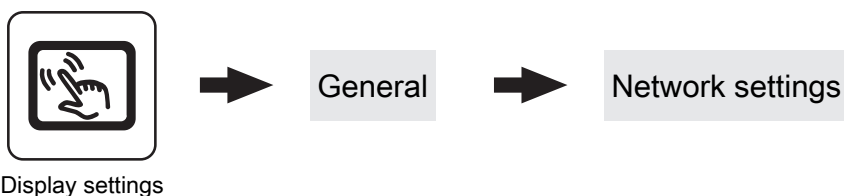


#### Obtain IP address automatically

- **On:** The address in the local network (IP address), the subnet mask, default gateway and DNS server are automatically assigned by the router/server.
- **Off:** IP address, subnet mask, default gateway and DNS server can be manually set.

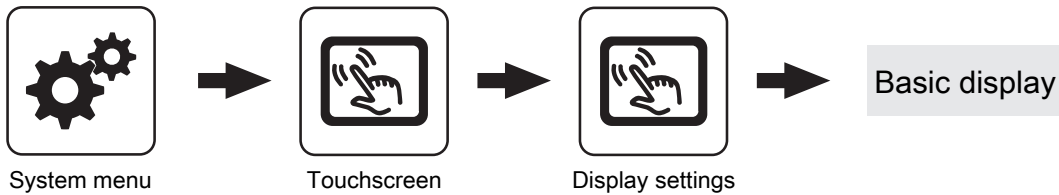**Display settings - Basic display****Figures 1 ... 6**


On the basic display, up to six different information displays can be freely selected. The selection depends on the system configuration.

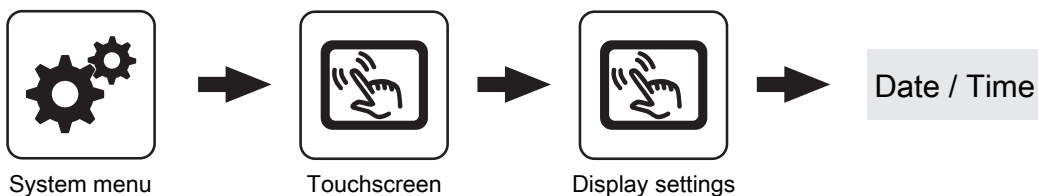**Display settings - Date / Time****Automatic switching between standard/daylight saving time**

Used to deactivate switch to daylight saving time (factory setting: YES).

**Date / Time**

Display and setting of the date and time.

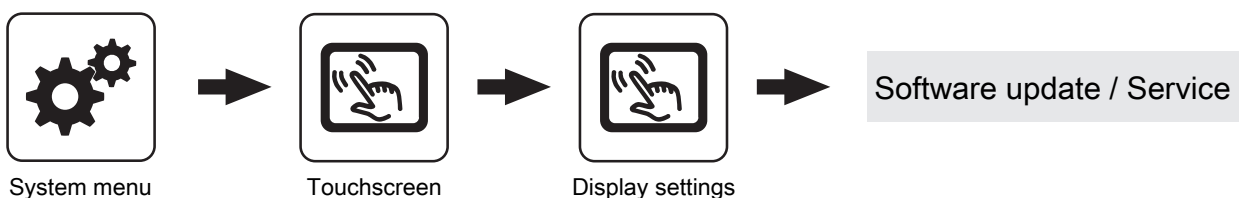**Display settings - Software update / Service****Calibrate screen**

⇒ See "Calibrating the touchscreen" [page 117]

**Restart control  
Carry out update**

⇒ See "Software update Lambdatronic 3200" [page 119]


**Restart display**

Touch control unit is restarted and the data is reloaded from the core module.

**Restore control device to factory settings (restart is carried out)**

The touch display is reset to the factory setting. Data stored on the touch display (e.g. setting wizard) is completely deleted. Only perform if the system must be completely reconfigured (e.g. when replacing the core module).

## 4.15.2 Touchscreen - Display operating rights

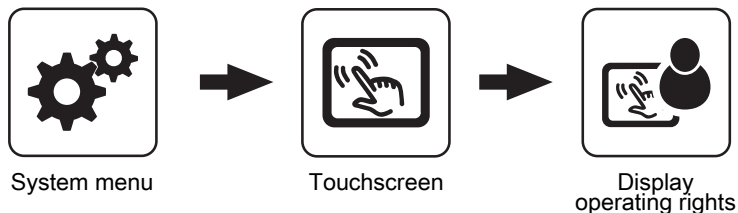

In this menu the operating rights for the individual room consoles are allocated. If access from a room console to a heating system component is permitted, the corresponding parameter must be set to "YES". The number of menus as well as the parameter entries depend on the system configuration!

**NOTICE!** The operating rights of the room consoles should be allocated from the boiler console, as unrestricted access is only possible here.

**"Touch display with address 1 – 7" and "Button display with address 1 – 7"**

## Heating circuit system:

**Allow access to heating circuit 01 ... 18?**

Specifies whether heating circuit 01 ... 18 can be accessed from touchscreen 1 ... 7.

## DHW tank system:

**Allow access to DHW tank 01 ... 08?**

Specifies whether DHW tank 01 ... 08 can be accessed from touchscreen 1 ... 7.

## Storage tank system:

**Allow access to storage tank 01 ... 04?**

Specifies whether storage tank 01 ... 04 can be accessed from touchscreen 1 ... 7.

## Solar panel system:

**Allow access to solar system 01?**

Specifies whether solar system 01 can be accessed from touchscreen 1 ... 7.

## Heating system:


The parameters displayed depend on the configuration.

## Boiler:

**Switch boiler on/off via room console**

If this function is activated, the respective room console is enabled for switching the boiler on and off. In order to be able to operate the boiler, remote switching on the boiler display must also be activated.

## Froling Connect

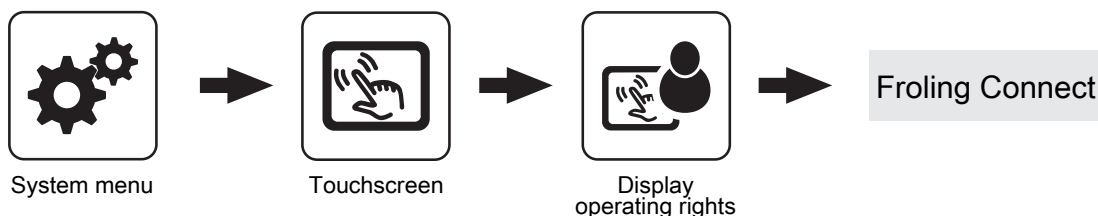

For connection via the [froeling-connect.com](https://froeling-connect.com) online platform using a touchscreen, the issue of a password is required.

**NOTICE!** The same password can be assigned for each touch display!


**Password for boiler display**

Password for boiler display can be issued.

**Password for touchscreen with address 1 ... 7**

Password for the touchscreen with address 1 ... 7 can be issued.

### 4.15.3 Touchscreen - Display allocation

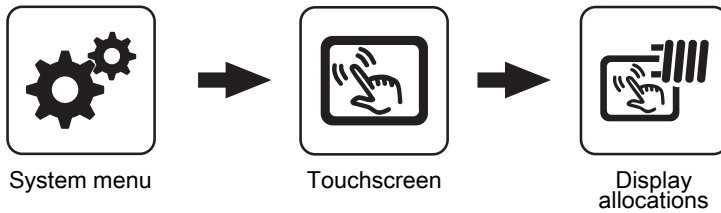

#### Heating circuit system:

***Touch display with address 1 ... 7 is assigned to the following heating circuit:***

To assign a room console to a heating circuit, the respective heating circuit number with its address must be set on the room console. The parameters are set to “none” at the factory!

***Button display with address 1 ... 7 is assigned to the following heating circuit:***

To assign a room console to a heating circuit, the respective heating circuit number with its address must be set on the room console. The parameters are set to “none” at the factory!

#### DHW tank system:

***Touchscreen with address 1 ... 7 is assigned to the following DHW tank:***

To assign a DHW tank to a specific room console, the respective DHW tank number with its address must be set on the room console. The parameters are set to “none” at the factory!

***Button display with address 1 ... 7 is assigned to the following DHW tank:***

To assign a DHW tank to a specific room console, the respective DHW tank number with its address must be set on the room console. The parameters are set to “none” at the factory!



## 5 FAQ

### 5.1 Activation options of pump outlets

#### *Pump 0.1 – 7.2, pump 1*

The following settings are possible at the hydraulic modules as well as at pump 1 on the core module with pump outlets 0.1 – 7.2.

- **Pump without control line)**  
Set when a standard pump is run at the respective output. This is controlled at the 230V output using pulse packets.
- **HE pump without control line**  
Set when a high efficiency pump without control line (e.g. Grundfos Alpha, WILO Yonos Pico, etc.) is run at the respective output.
- **Field pump / PDM**  
There is a permanent power supply of 230V at the output for the high efficiency pump. The pump is controlled using pulse duration modulation at the respective PDM output.
- **Solar pump / PDM**  
Here again, the pump is controlled by means of pulse duration modulation at the respective PDM output. In this case, however, the characteristic line is inverted and can only be used for specially marked high efficiency solar pumps.
- **Field pump PDM +valve**  
The signal for the field pump is emitted at the PDM output. If the signal exceeds 2%, the 230V output is switched on. If the signal is below 2% for more than 4 minutes, the output is switched off again.
- **PDM sol.pump +valve**  
The signal for specially marked high efficiency solar pumps is emitted at the PDM output. If the signal exceeds 2%, the 230V output is switched on. If the signal is below 2% for more than 4 minutes, the output is switched off again.
- **Field pump / 0–10V**
- **Solar pump / 0–10V**
- **Field pump 0–10 +valve**
- **Sol. pump 0–10V +valve**  
The same functions that apply with PDM apply to the parameter values with 0-10V. The only difference is that instead of pulse duration modulation, a 0-10V signal is used to control the pump.
- **Switch valve**  
When set to “Isolating valve” the output is activated either with 0% or 100%. This setting value is only available in the “Water” or “Boiler 2” menu.

#### *HKP0*

The following applies to pump outlet HKP0 at the core module:

- Relay output
- Speed control is not possible

## 5.2 Pump stall protection

After extended standstill times, there is a risk the pump drive may block due to corrosion and deposits. The pump stall protection feature is intended to prevent this.

The control ensures that the circulation pumps are switched on briefly on a regular basis, even outside the season of use.

At that time, the pumps are activated for 15 seconds at 100%.

The following components are affected:

- DHW loading pump
- Buffer pump
- Collector pump (not applicable to system 12 and system 13)
- Difference control pump
- Heating circuits (15 seconds pump run, subsequently the mixer starts up and shuts down again)

### 5.3 Boiler operating statuses


<b>Preparation</b>	The boiler is ventilated, the grate is closed, the sealing slider is opened and the Lambda probe is heated.
<b>Heating up</b>	The combustion chamber is filled with pellets.
<b>Pre-heating</b>	The ignition switches on and the pellets are preheated until a bed of embers is formed. For this period infeed is deactivated.
<b>Ignition</b>	The pellets are ignited with the ignition. The flame is distributed throughout the entire combustion chamber. Infeed is controlled according to the settings in the "Ignition" parameter menu.
<b>Heating</b>	The boiler controller controls combustion according to the boiler setpoints.
<b>Slumber</b>	The boiler has no power consumption. ID fan and infeed are deactivated.
<b>Cleaning</b>	The Lambdatronic carries out the cleaning program. The grate and, if necessary, the heat exchanger are cleaned.
<b>Shutdown wait</b>	When the boiler is interrupted during the heating up procedures (heating up, pre-heating, ignition), it waits for a specified period of time until the next start attempt.
<b>Shutdown wait 1</b>	The ID fan runs to burn the remaining pellets. Infeed is deactivated.
<b>Shutdown wait 2</b>	The system is still ventilated by chimney draught. Infeed is deactivated.
<b>Fault</b>	CAUTION - There is a fault!
<b>Standby</b>	The Lambdatronic controls the connected heating components. The boiler waits for a start request from the hydraulic system.
<b>Boiler off</b>	The boiler controller controls the connected heating components. All parts of the boiler are deactivated. Chamber discharge system active!

## 5.4 Determination of the quantity of heat


### 5.4.1 Assembly Information

The contact sensor and the line regulating valve must be positioned in the direction of flow downstream of the circulating pump and immediately upstream of the return connection of the boiler. Additional contact sensors and line regulating valves are required for boilers without return temperature control or return temperature control with thermal valve. A return feed sensor is already fitted on the return temperature control with 3-way mixing valve, which means that only the line regulating valve is required additionally.

#### No return temperature control (OE pump assembly)

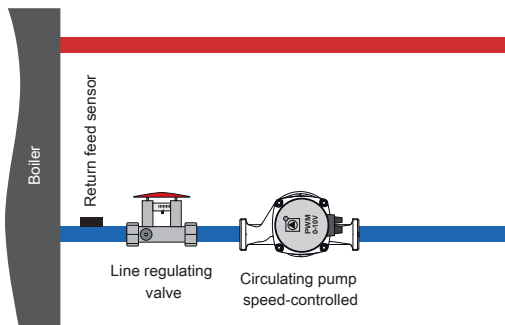

#### Return temperature control with mixing valve (factory fitted)

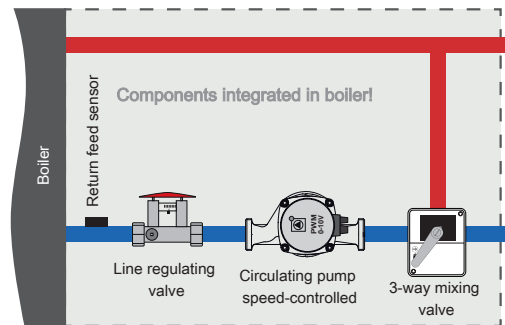


### 5.4.2 Functioning and configuration

Software version V50.04 – B05.19 at minimum is required for the heat quantity calculation to work. The difference between the boiler temperature and the boiler return temperature as well as the flow of the circulating pump are used to calculate the heat quantity.

#### *Calculating the feed output of the circulating pump*


##### Boiler with OE pump assembly

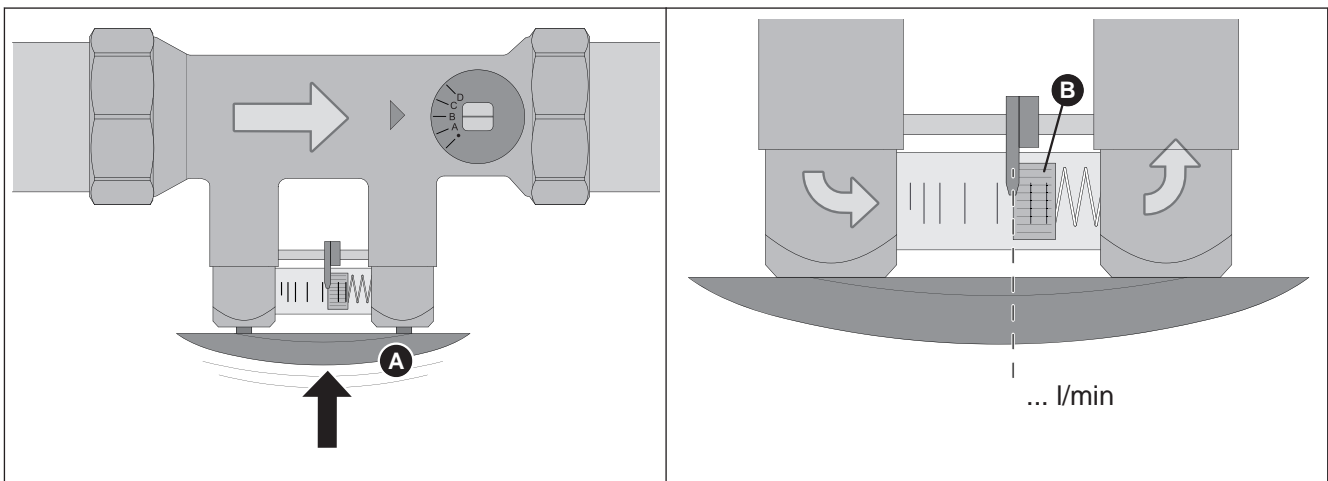

- ☐ Activate the circulating pump in manual operation with 100% speed
- ☐ Press the handle (A) on the line regulating valve
- ☐ Read and record the flow rate in l/min at the underside of the floater (B)
- ☐ Activate the circulating pump in manual operation at 50% speed
- ☐ Press the push bar on the line regulating valve; make a note of the flow on the scale


### Setting the type of heat quantity calculation

- ☐ In the boiler's setting wizard, select "Record with pump speed"

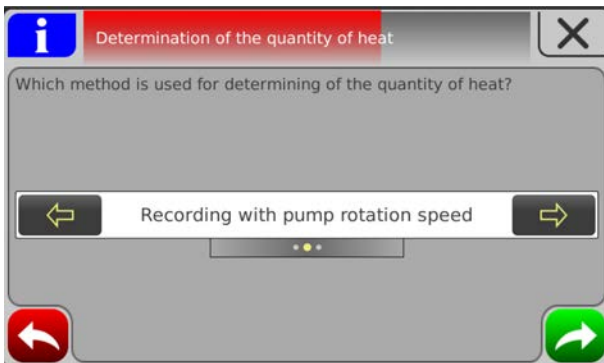

### Configuring the heat quantity calculation

- ☐ Go to the menu "System → Settings → Boiler heat quantity calculation"
- ☐ Enter the recorded values for the flow of the circulating pump at the respective parameter

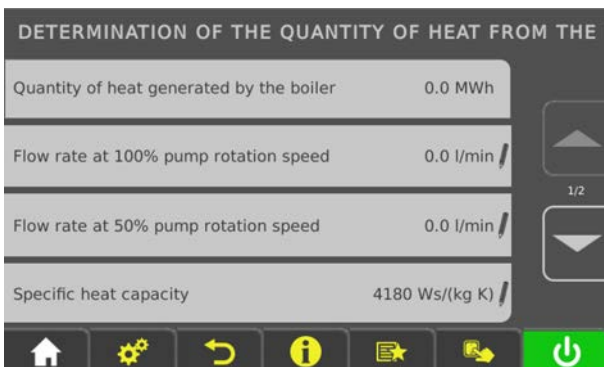

## 5.5 Boiler modes


### 5.5.1 "Automatic" mode without storage tank

When "Automatic" is selected without a storage tank, the boiler only produces heat during the specified boiler times. Outside these times the boiler follows the shutdown procedure and switches to "Standby" status. It is, therefore, important to note that in this mode the heating circuits and DHW tank are only supplied with heat during the boiler times.

In Example 1 the boiler times have been set to cover the necessary heat requirement. The heating times and DHW tank loading times have been set within the boiler time range, with the heating time being extended approximately one hour beyond the boiler time. This allows the residual energy in the boiler to be used by the heating circuits after the end of the boiler time.


Note that outside the boiler times for setback mode, heat is only available until the boiler temperature falls below the setting value (parameter "Minimum boiler temperature to release all pumps").

*Example 1: "Automatic" mode without storage tank*

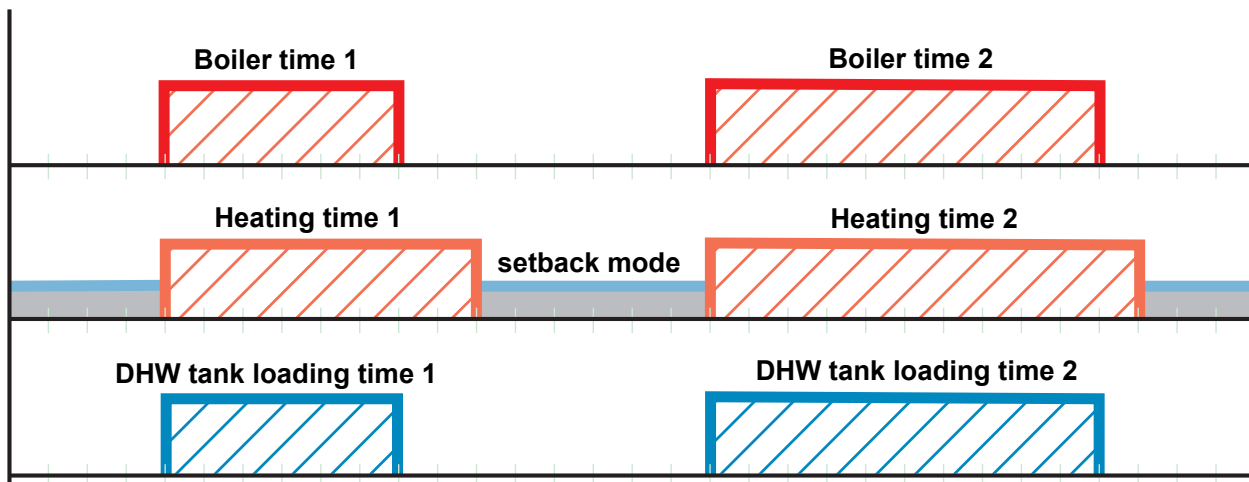

**Tip:** In systems with solar panels, choose the DHW tank loading time so that solar energy can be used.

*Example 2: "Automatic" mode without storage tank with solar panel system*

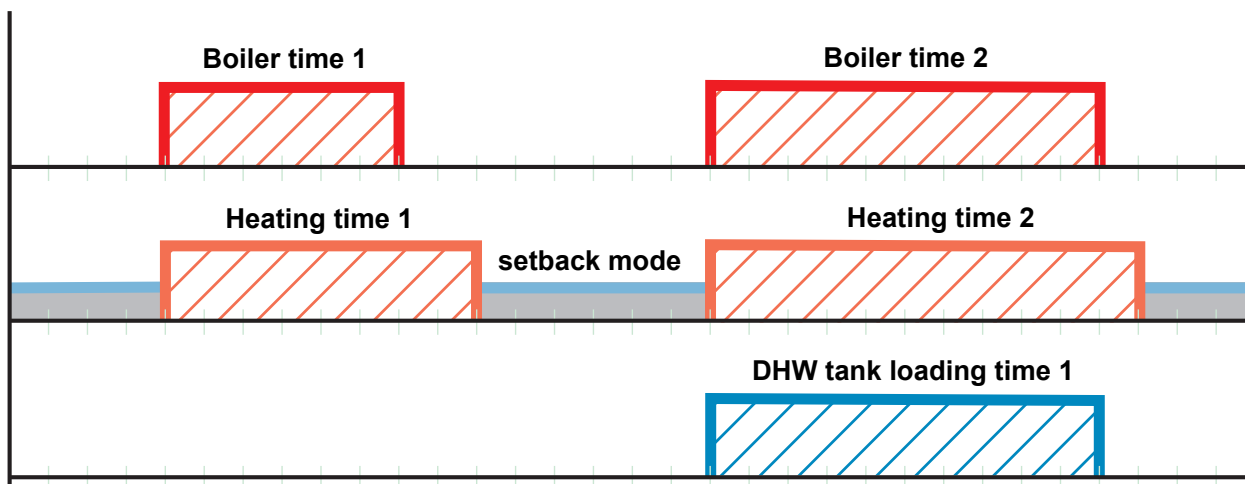


### 5.5.2 "Automatic" mode with storage tank

When "Automatic" is selected with storage tank, the boiler only produces heat if the storage tank actually requests heat within the specified storage tank loading time. Outside these times the boiler is in "Standby" status.

The heating times should be set within the storage tank loading times so that the provision of heat is guaranteed over the entire heating time.

**Note** that the heating circuit and DHW tank are only supplied with heat for as long as the storage tank temperature is sufficient for the demand.


*Example 1: "Automatic" mode with storage tank*

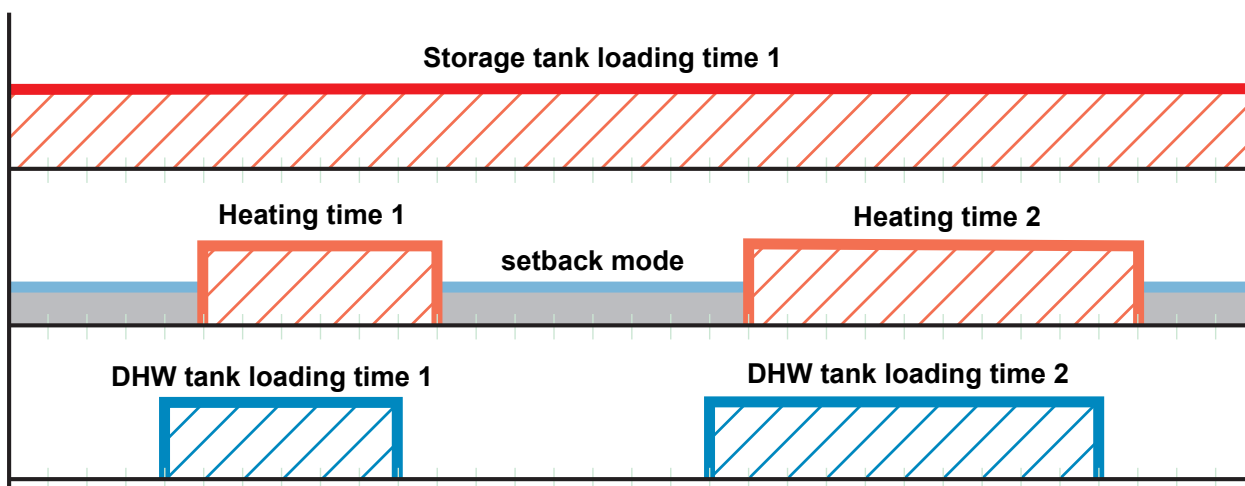

**Tip:** In systems with a storage tank and solar panels, choose the storage tank loading time so that solar energy can be used.

In order to ensure that there is sufficient heat at the start of the DHW tank loading time and heating time, we recommend setting the storage tank charging time to begin before the start of the DHW tank time or heating time.


*Example 2: "Automatic" mode with storage tank and solar panel system*

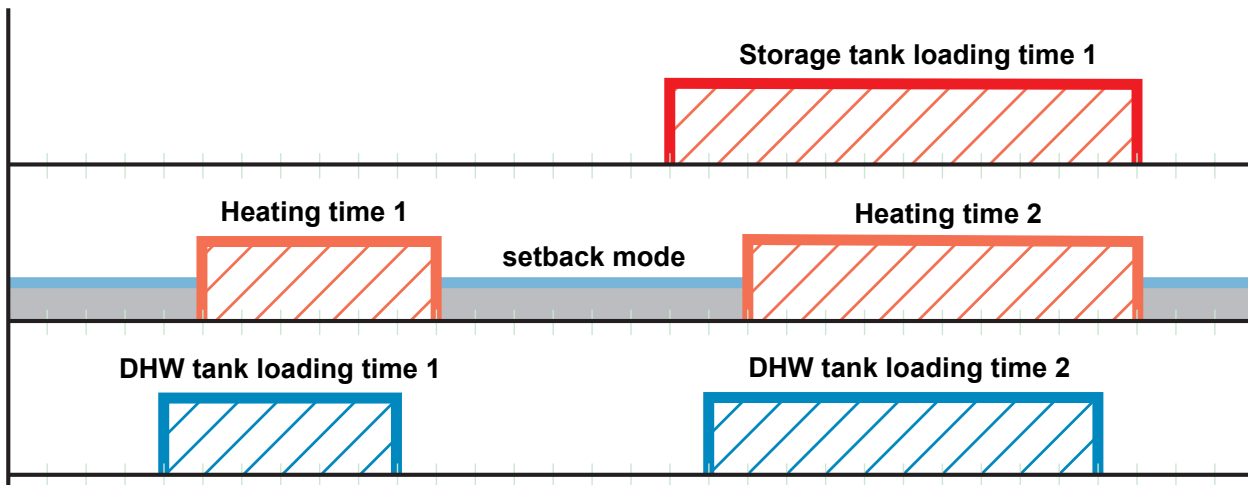

### 5.5.3 "Continuous load" mode without storage tank


When "Continuous load" is selected, the boiler produces heat around the clock, in other words it tries to maintain its boiler temperature setpoint 24 hours a day. The boiler time settings are ignored in this mode. The heating times and DHW tank loading times can be distributed throughout the day as required.

*Example 1: "Continuous load" mode*

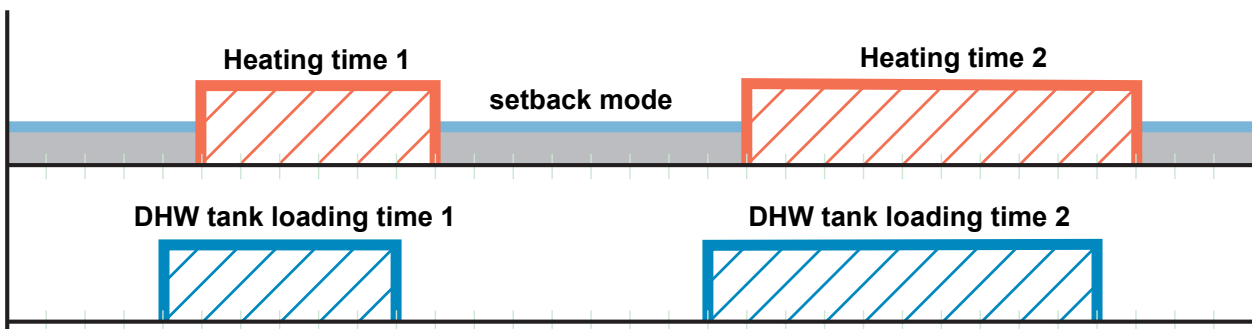

**Tip:** In systems with solar panels, choose the DHW tank loading time so that solar energy can be used.

*Example 2: "Continuous load" mode with solar panel system*

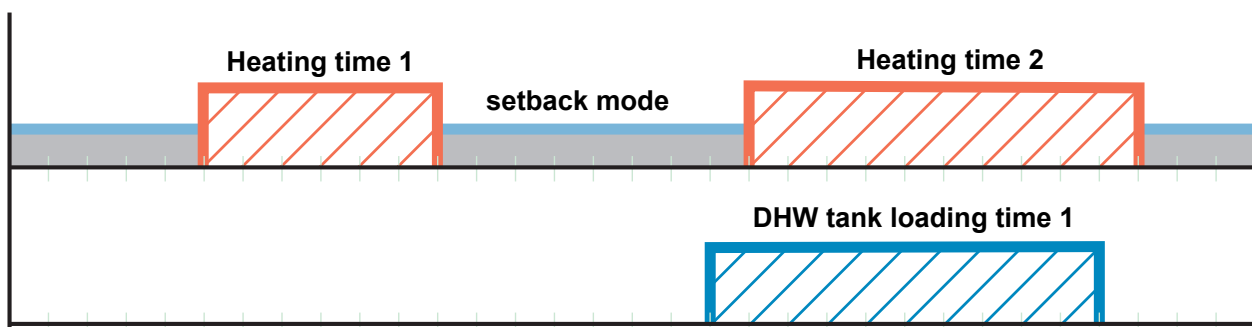



### 5.5.4 “Continuous load” mode with storage tank


To ensure efficient operation, set systems with a storage tank to “Automatic” mode rather than “Continuous load” mode.

⇒ See “Automatic” mode with storage tank” [page 111]

### 5.5.5 “Domestic hot water” mode without storage tank

When “Domestic hot water” is selected, the boiler only produces heat if the DHW tank actually requests heat within the specified DHW tank loading time.

*Example 1: “Domestic hot water” mode without storage tank*

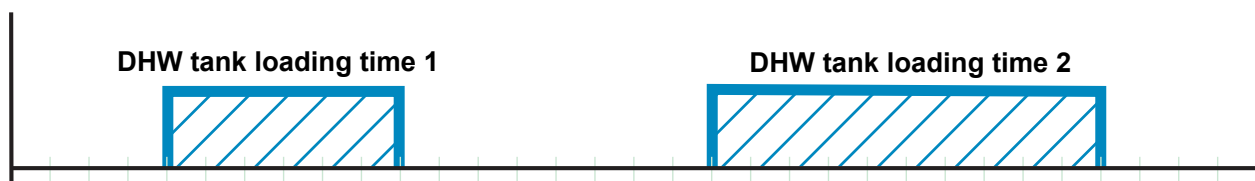

**Tip:** In systems with solar panels, choose the DHW tank loading time so that solar energy can be used.

*Example 2: “Domestic hot water” mode without storage tank with solar panel system*




### 5.5.6 “Domestic hot water” mode with storage tank

In systems with a storage tank, note that in “Domestic hot water” mode, the storage tank loading times remain active as the DHW tank is supplied with heat from the storage tank.


Within the storage tank loading time the boiler only produces heat if the storage tank temperature is below the minimum value and the DHW tank is requesting heat.

*Example 1: “Domestic hot water” mode with storage tank*

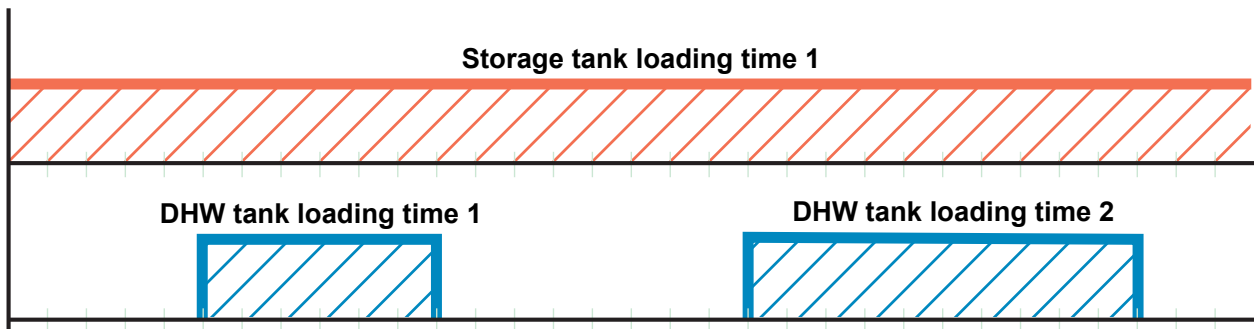

**Tip:** In systems with a storage tank and solar panels, choose the storage tank loading time so that solar energy can be used.


*Example 2: “Domestic hot water” mode with storage tank and solar panel system*

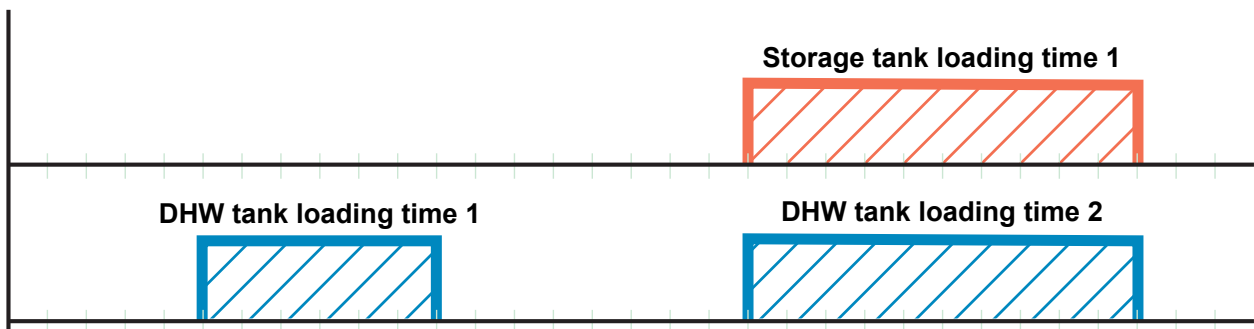

## 5.6 Setting times

The desired time window for the component can be set in the "Times" tab in the individual menus of the heating components (heating circuits, DHW tanks etc.). The structure of the time menu and the procedure for changing the times are always the same.

- ☐ Use the left or right arrow to navigate to the desired day of the week
- ☐ Tap the symbol under the day of the week
  - ➔ The edit window will appear

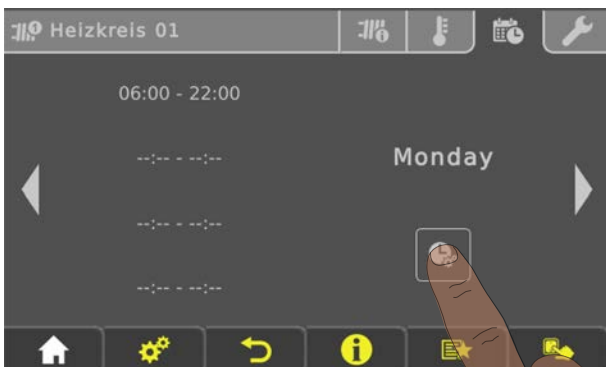


You can specify up to four time windows per component and day.

- ☐ Tap the desired time window




- ☐ The time window will open for editing
- ☐ Set the start and end time for the time window using the up and down arrows
- ☐ Save the time window setting by tapping on the confirm icon

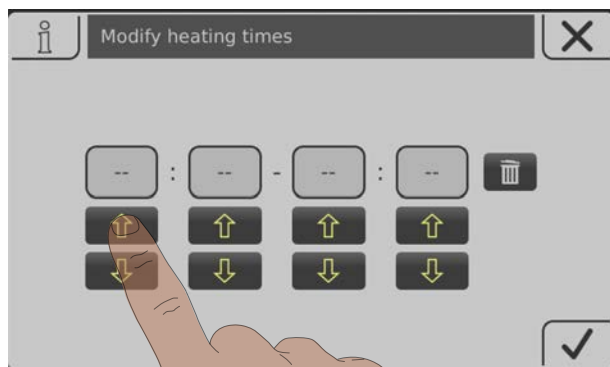

If you want to apply the time window setting to another day in addition, you can do this by activating the relevant day.




A set time window can be deleted by tapping on the “Recycle bin” symbol.

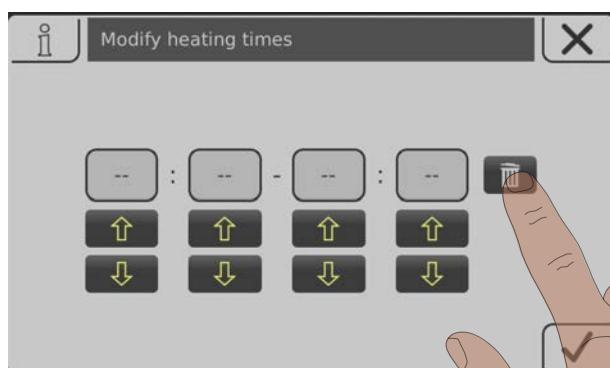


## 5.7 Calibrating the touchscreen

If the touchscreen stops working properly, it will need to be calibrated.


- ☐ Go to the "Display settings" menu
- ☐ Scroll down until the "Software update / Service" submenu appears and open the submenu

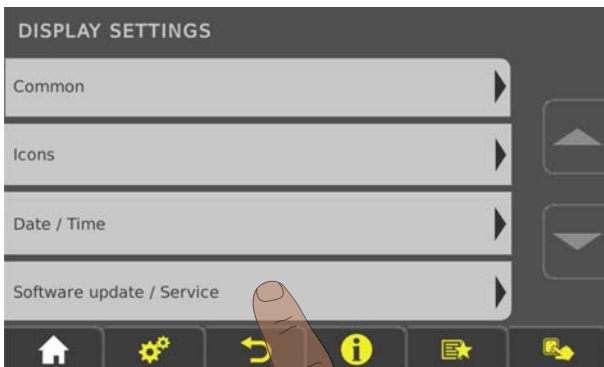

- ☐ In the "Software update / Service" menu open the "Recalibrate touch control" parameter

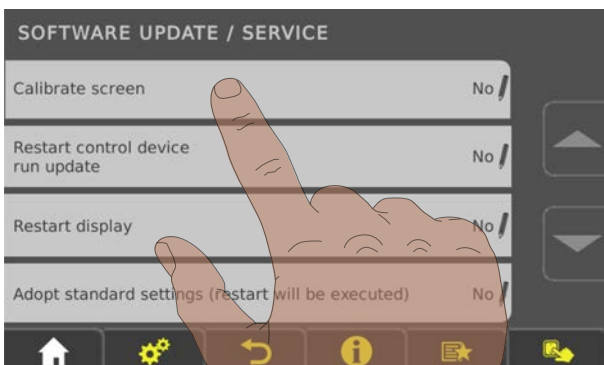

- ☐ Set the parameter to "YES" and confirm at the bottom right
  - ➔ The touchscreen will restart and begin calibrating

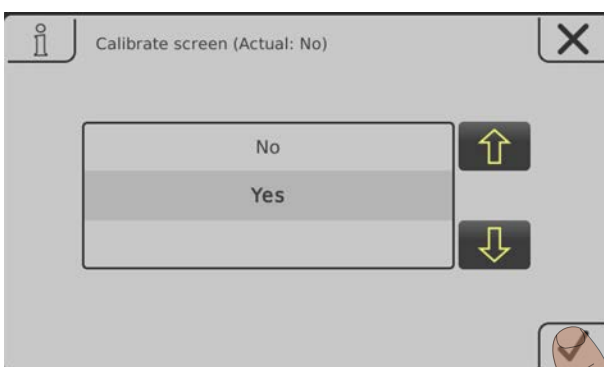

To calibrate the touchscreen, you must press five points indicated by a crosshair in the order shown. The control will restart after calibration.

## NOTICE

### Inaccurate calibration

*If you do not tap the indicated points accurately, the control may stop working properly and a software update may be required.*

## 5.8 Software update Lambdatronic 3200

The following description shows the software update process for systems with Lambdatronic 3200 and a touch control in the system environment (also applies to systems with button boiler console and touch room console). The Froling Flash Update Wizard (core module) as well as a USB storage device is necessary to perform the software update. The procedure for establishing a connection and any necessary bootloader update is described in the documentation of the Flash Update Wizard.


### Overview of main steps during a software update

*Perform flash update - but do not close the Wizard*



⇒ See "Carrying out a software update on the boiler controller" [page 120]

*Perform software update of all touch controls*

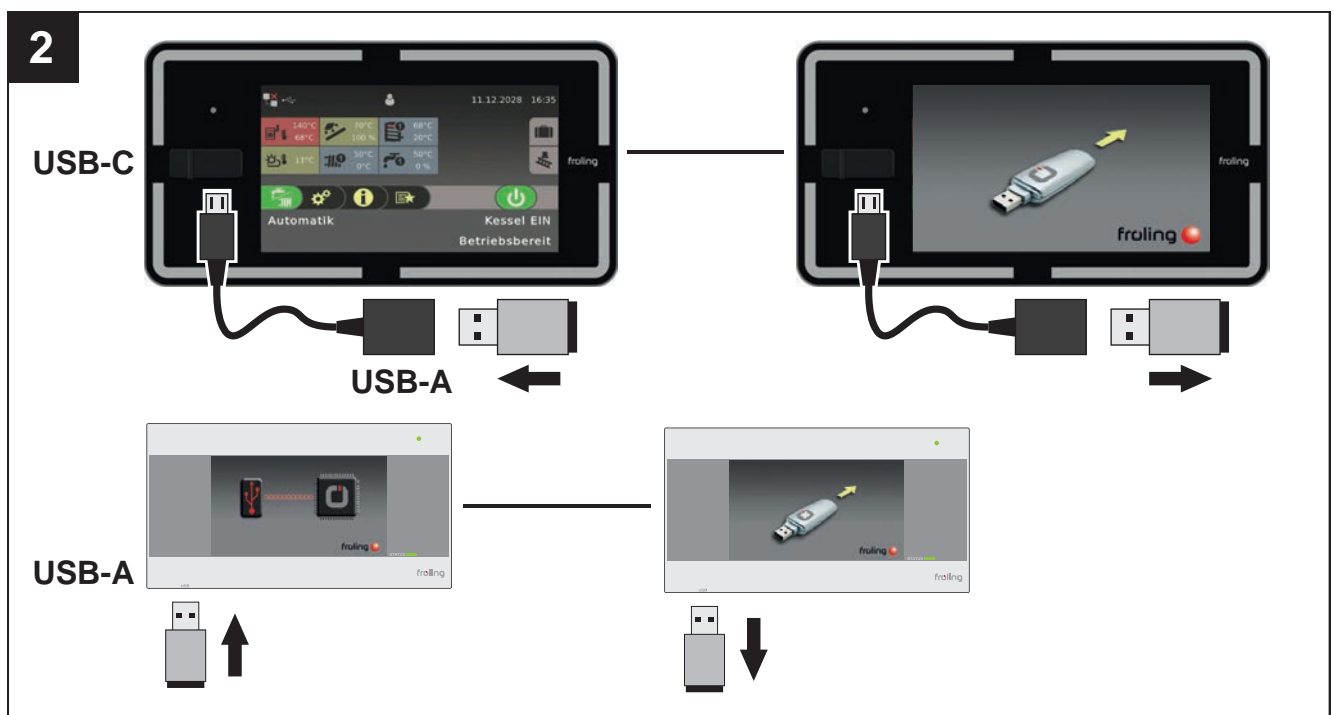

⇒ See "Carrying out a software update on the touch control" [page 122]


**Close Flash Update Wizard - restart controller**

⇒ See "Finishing a software update" [page 123]

### 5.8.1 Carrying out a software update on the boiler controller

#### Selecting a Flash file

Once the connection has been established, the main window displays the update files which can be installed:

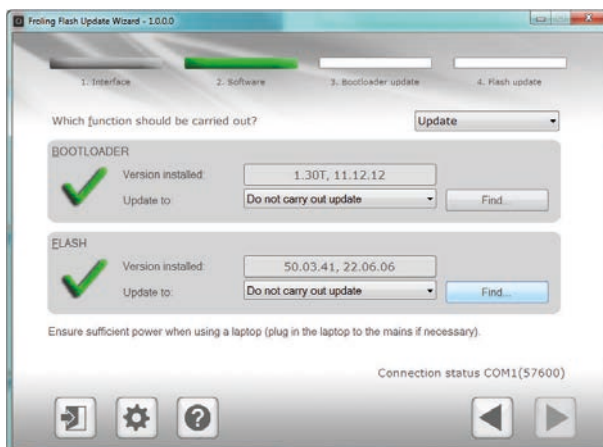

- The "Version installed" field displays the Flash version which is currently installed on the boiler controller
- There is a drop-down list next to the "Update to:" field which shows the Flash files available in the standard folder

#### If the Flash file is located in the standard folder:

- ☐ Select the required Flash file from the drop-down list


#### If the Flash file is not located in the standard folder:

- ☐ Click on the "Find" button in the "FLASH" section
  - A window is displayed where you can search for the Flash file
- ☐ Navigate to the folder where the file is saved
- ☐ Select the Flash (\*.s19) file and click on the "Open" button



### Starting the Flash update


After selected the desired Flash file, it will be displayed next to the "Update to:" field:

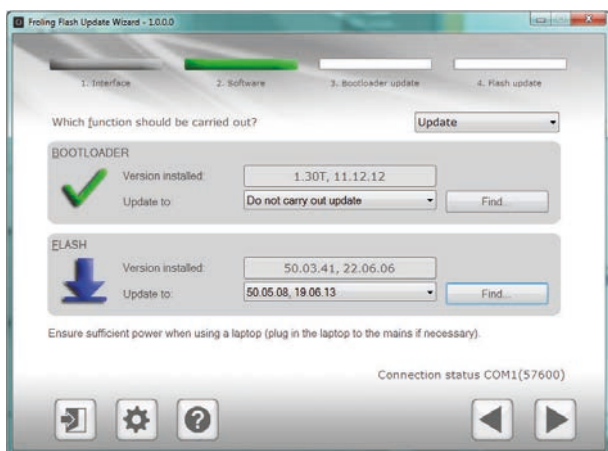

☐ Click on the "Next" button

➤ The update process will now start and a progress bar displays the current status

When the flash update is successfully transferred to the boiler controller, the following window appears:

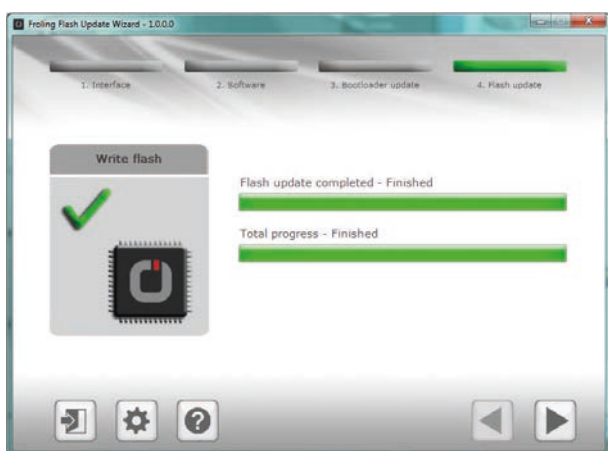


**NOTICE!** Do not close the update at this time and do not disconnect the boiler controller!

### 5.8.2 Carrying out a software update on the touch control


**NOTICE!** If several touch controls are installed, we recommend the use of several USB sticks to perform the updates in parallel!

- ☐ Insert the USB stick with the necessary data (linux.bin; rootfs.img; update; froresetdemo.inc or frorestart.inc) into the USB port
  - System message for restart is displayed
- ☐ Tap “OK” to carry out a restart of the touch control
  - After the restart, the update process will begin automatically

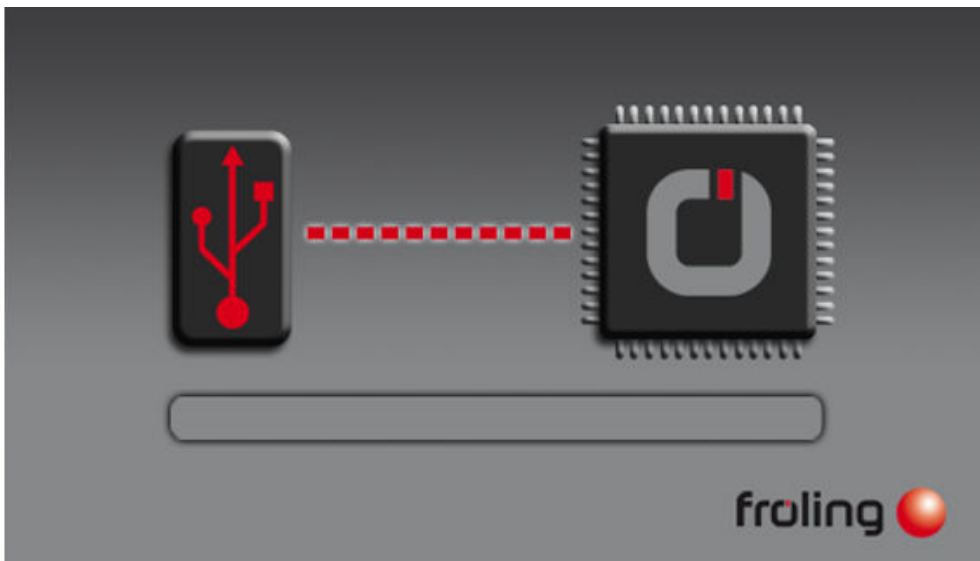

Once the update is complete, a message will appear that you can remove the stick

- ☐ Remove the USB stick
  - The touch control restarts automatically

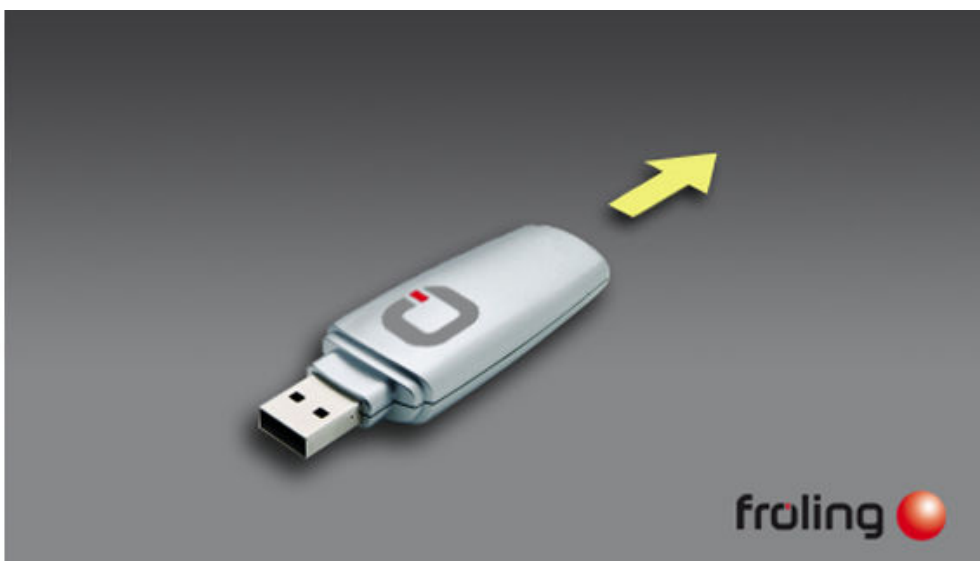


The touch control software is up-to-date following the restart.

- ☐ Perform updates to any other touch controls


### 5.8.3 Finishing a software update

When the software update has been performed on all touch controls, the Flash Update Wizard must be ended correctly.

#### *End flash update*

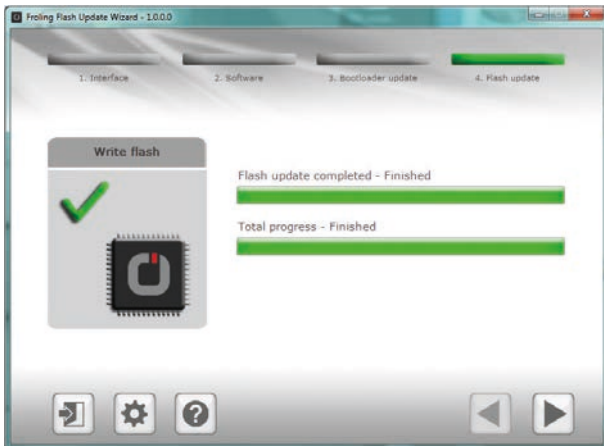

- ☐ Click on the "Next" button
  - The completion window appears

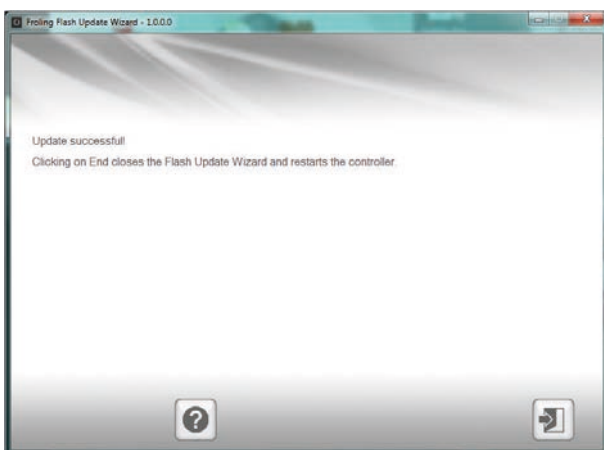


- ☐ Clicking on "Close" closes the Flash Update Wizard and restarts the boiler controller
  - After restarting the boiler controller, check whether all touch controls have started up correctly

**NOTICE!** If not all touch controls connect to the boiler control, a restart of the entire system (main switch OFF/ON) is necessary!


## 5.9 USB data recording

- ❑ Switch off the boiler using the main switch

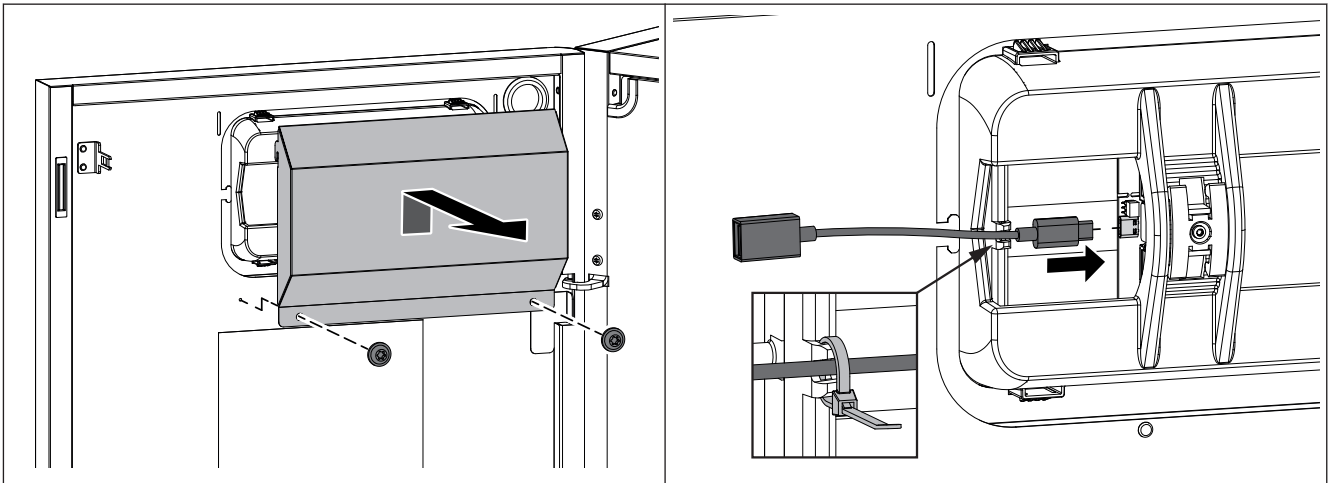


- ❑ Open the insulated door and disassemble cover plate on inside of the door
- ❑ Connect USB C - USB A adapter cable to the display bushing and secure cable on display housing using cable ties


Only for PE1 Pellet 7-20:

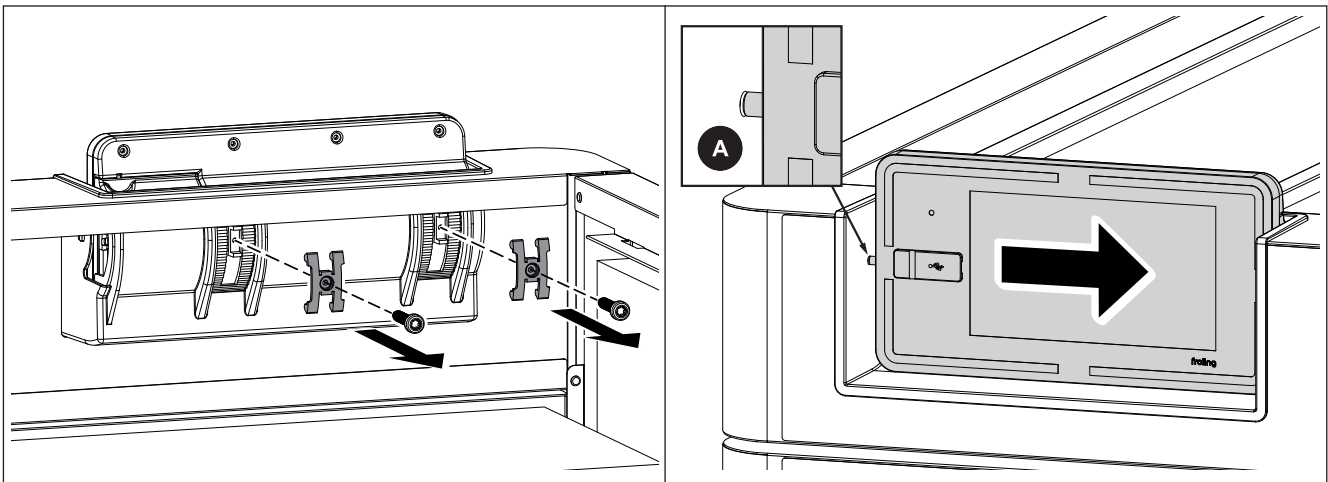


- ❑ Remove the insulating cover and disassemble the retaining brackets on the rear of the display bracket
- ❑ Push the display to the right until pin (A) is positioned on the left outside the holding fixture

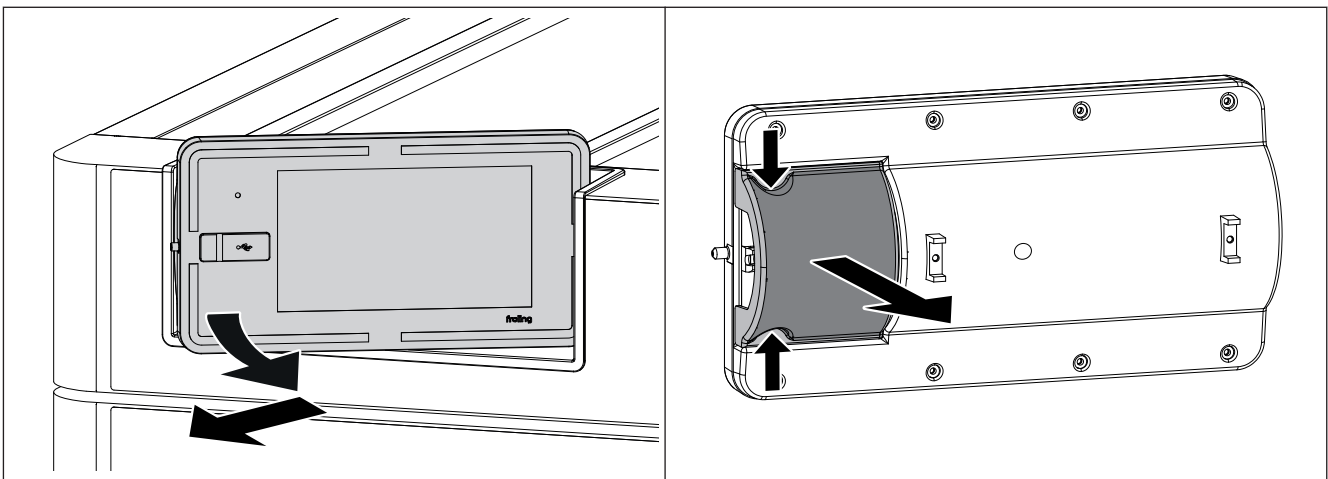

- ☐ Swivel the display forwards on the left side and remove diagonally to the left
- ☐ Push the cover together at both indentations and remove

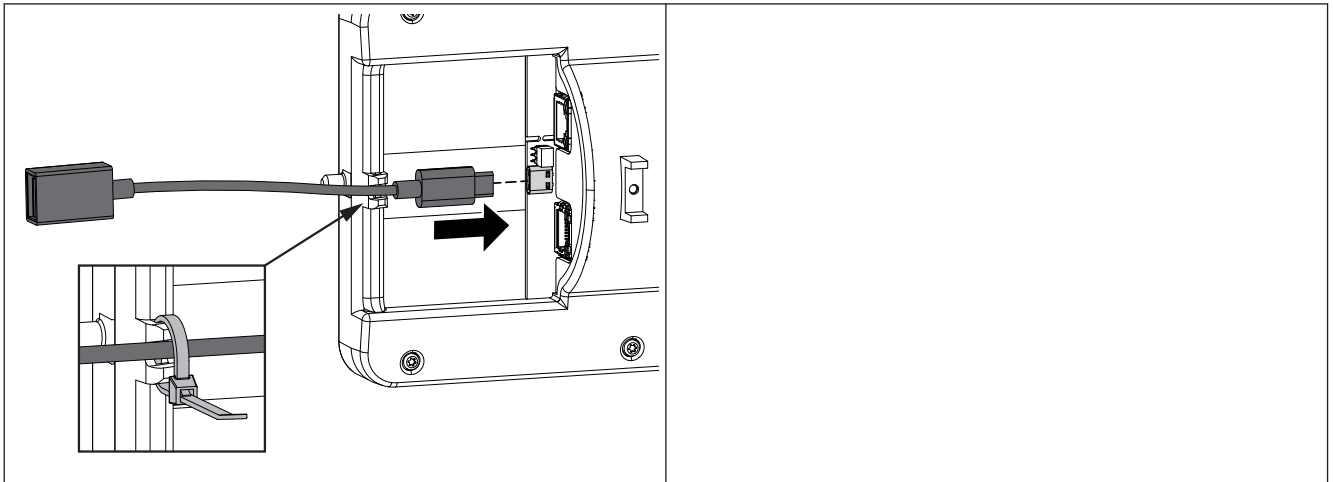



- ☐ Connect USB C - USB A adapter cable to the display bushing and secure cable on display housing using cable ties
- ☐ Re-assemble the display in reverse order
- ☐ Turn on the main switch and connect USB to the extension
  - The USB must not contain a software update
  - Recording starts automatically once the touch display has started

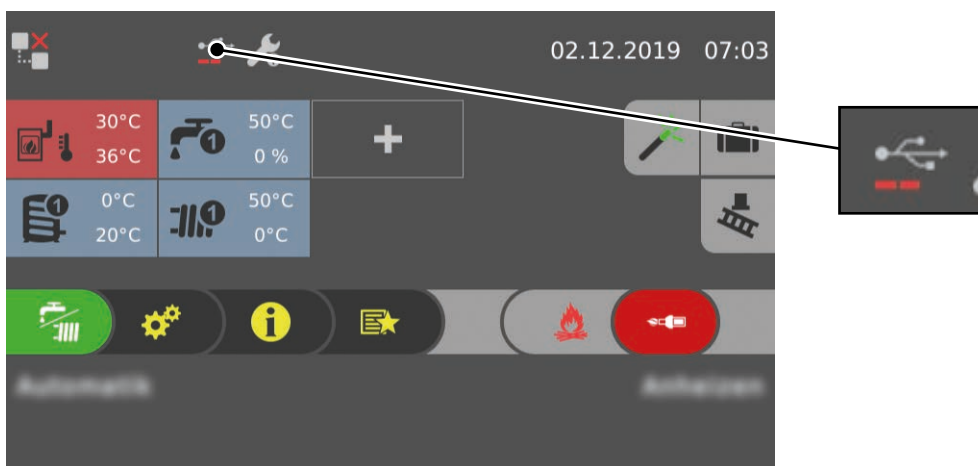

Data recording is indicated in the status line by means of the USB symbol with an activity bar.

## 6 Notes

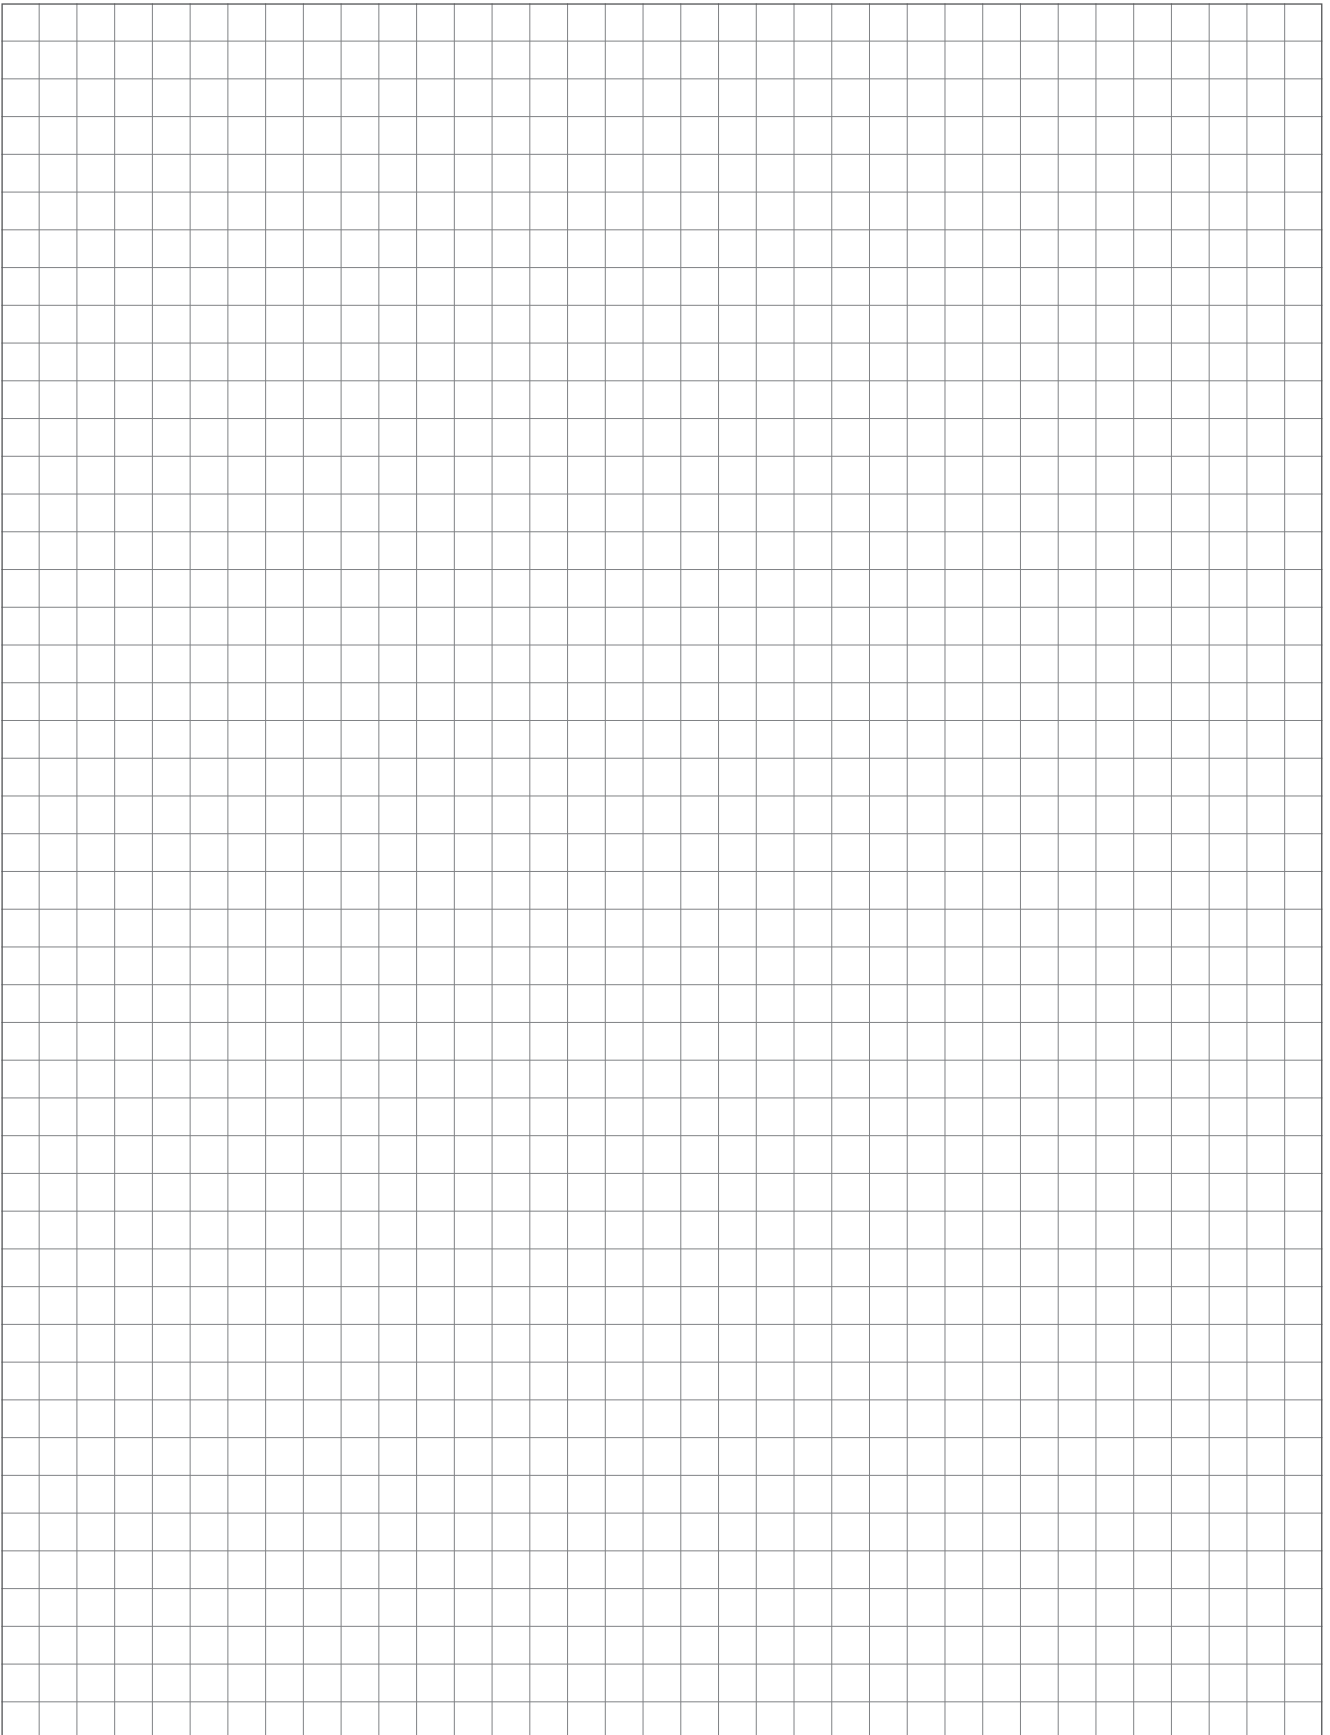

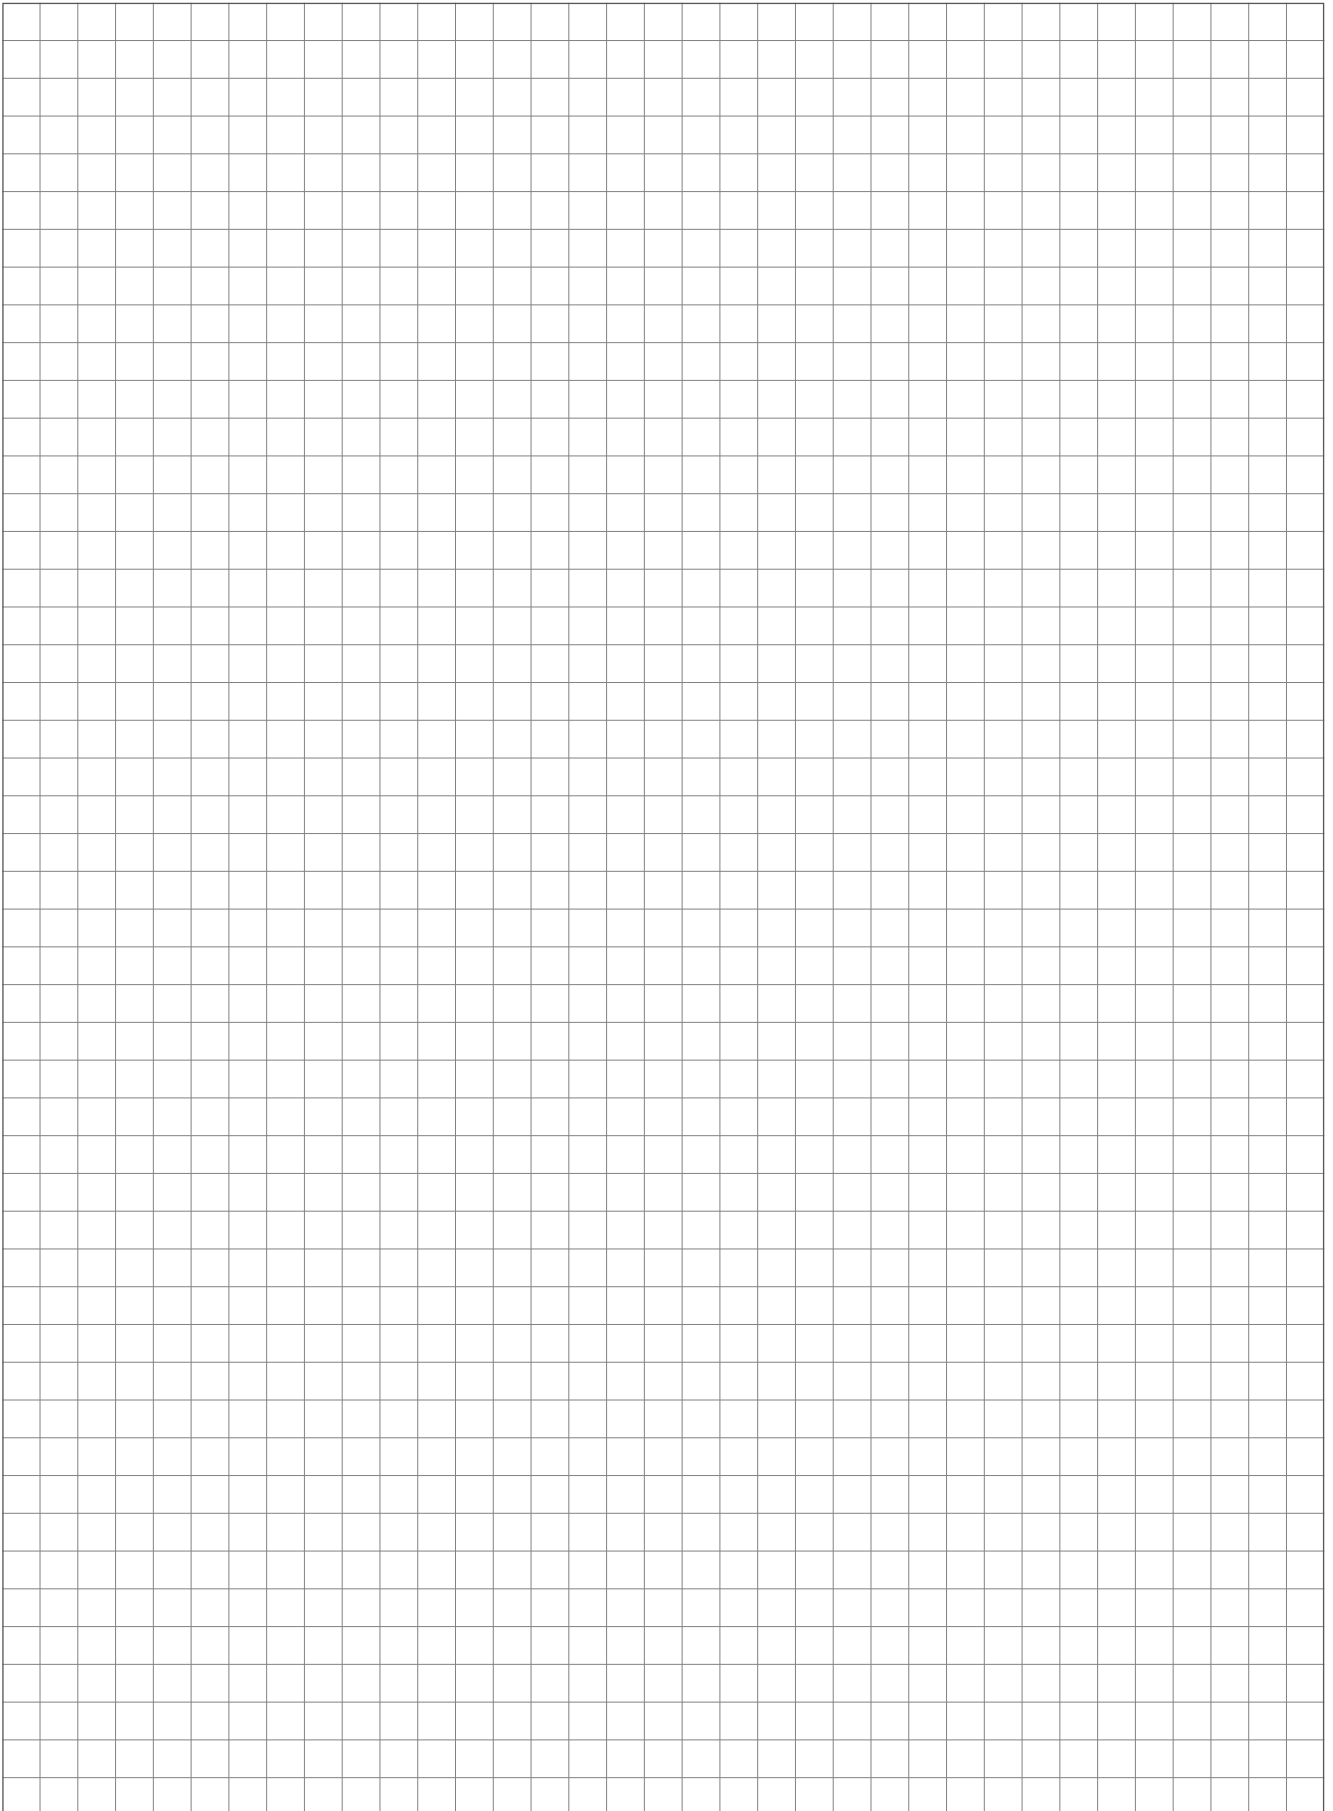

## 7 Appendix

### 7.1 Addresses

#### 7.1.1 Address of manufacturer

**FRÖLING**  
Heizkessel- und Behälterbau GesmbH

Industriestraße 12  
A-4710 Grieskirchen  
AUSTRIA

TEL 0043 (0)7248 606 0  
FAX 0043 (0)7248 606 600  
EMAIL [info@froeling.com](mailto:info@froeling.com)  
INTERNET [www.froeling.com](http://www.froeling.com)

#### *Customer service*

Austria	0043 (0)7248 606 7000
Germany	0049 (0)89 927 926 400
Worldwide	0043 (0)7248 606 0

#### 7.1.2 Address of the installer

Stamp